



PlayStation 3 Slim - Manually Removing Stuck Disk

PlayStation 3 Slim - Manually Removing Stuck Disk

Written By: ZFix



PS3
PlayStation 3 Slim

**manually remove
stuck disks**

INTRODUCTION

You can use this method if you can't eject the stuck disk by the eject button and the eject hole. The PS3 slim on this video is model CECH-300X.

Full video you can see here:

[video: <https://www.youtube.com/watch?v=lyWHZFfLWAE>]

More info about disassembling, you can find in [PlayStation 3 Slim Teardown](#)

TOOLS:



- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [T8 Torx Security Bit Screwdriver](#) (1)
-

Step 1 — PlayStation 3 Slim - Manually Removing Stuck Disk






- **Disconnect all cables. You have 4x Torx T8 screws and 7x Phillips screws. Now you can remove outer case.**

Step 2

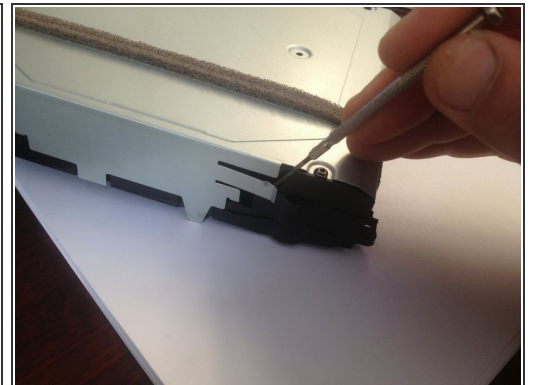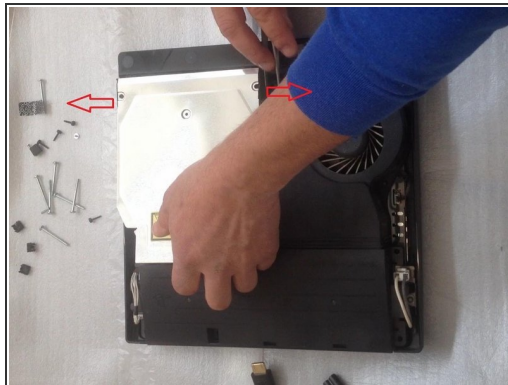


- **Unscrew the three screws. To remove Blu Ray unit shell you must open two plates that are on the left and right side.**

Step 3

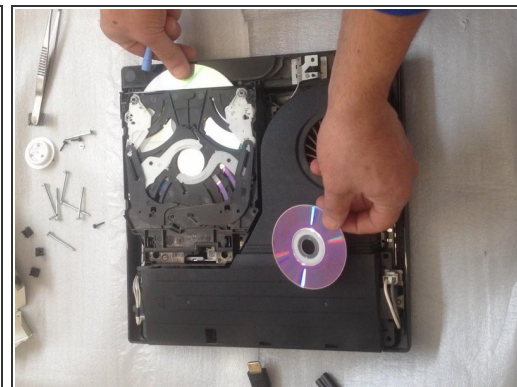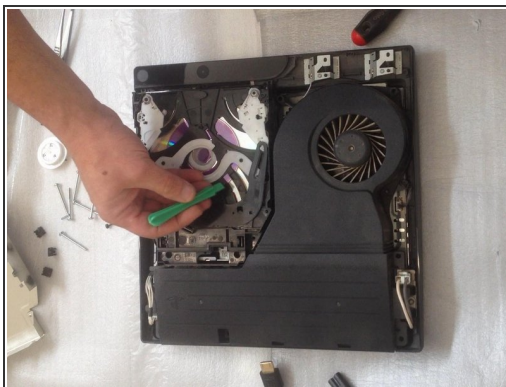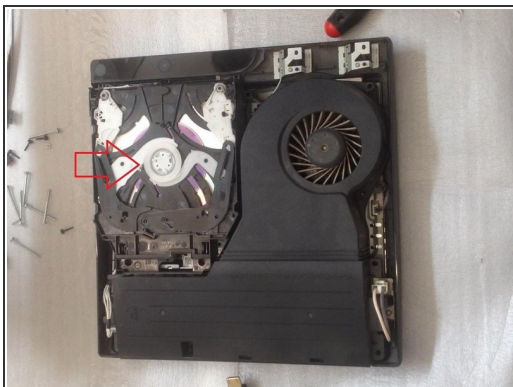

- First remove the spindle disc magnet. Now use plastic tool and slowly extrude the disk from inside.

Step 4

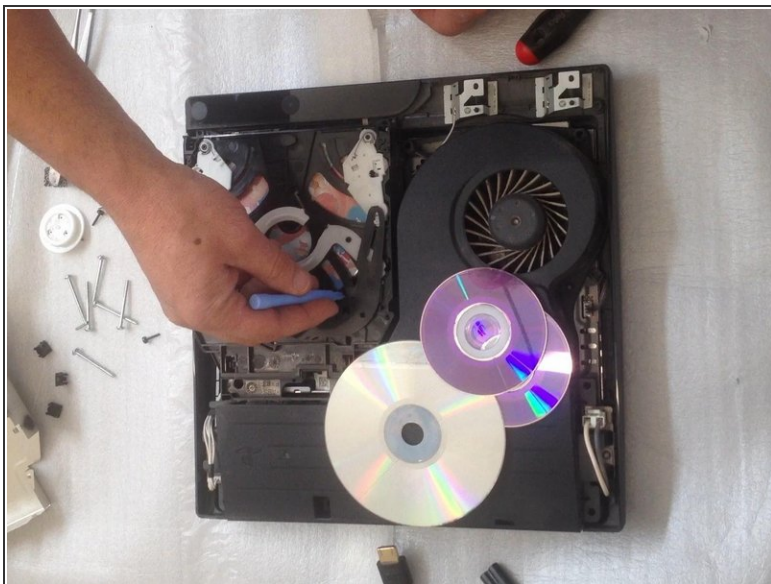


- In this case we have ... 4x disks. :)

● .

☒ Did you do it successfully?

Step 5

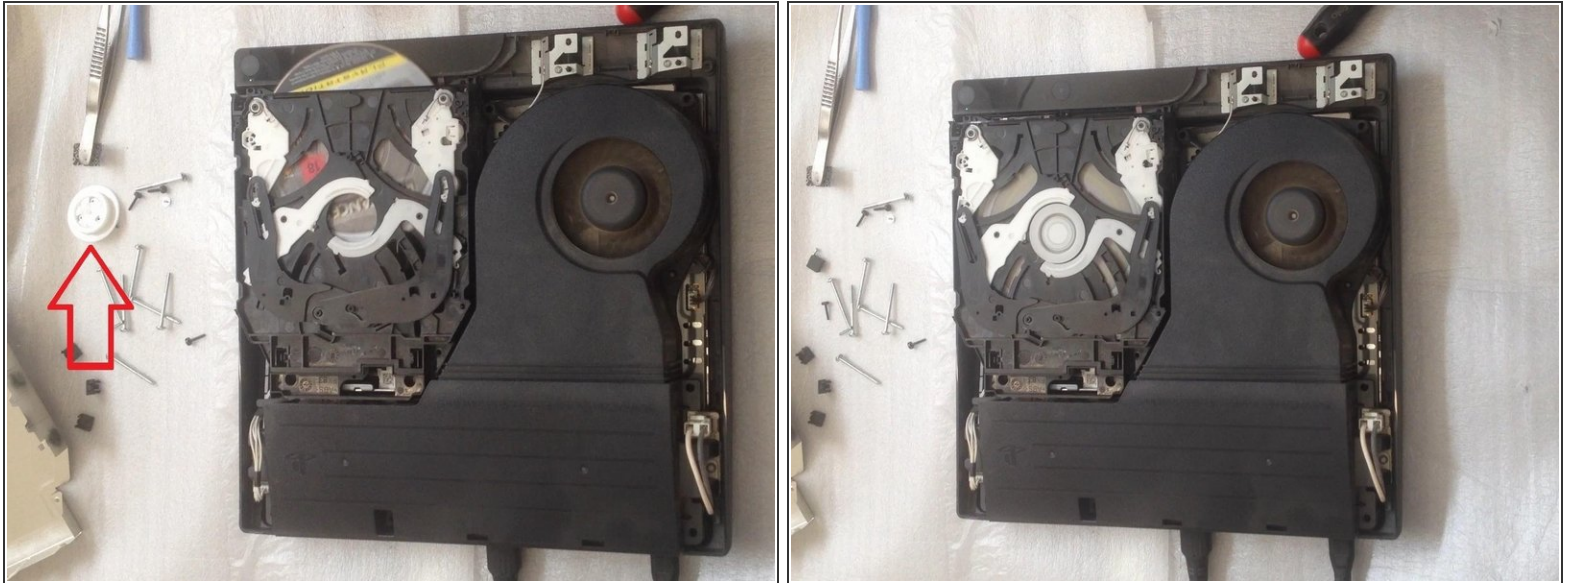

- **Test the console before assembling. And don't forget to put the spindle disc magnet.**

To reassemble your device, follow these instructions in reverse order.