



HP Pavilion dv6-2158nr RAM Replacement

This guide will show you how to remove the RAM from the HP Pavilion dv6-2158nr so you can replace it.

Written By: Chad




INTRODUCTION

The random access memory (RAM) stores temporary data for programs to use while they are running. Some programs use a lot of memory so it may be useful to replace RAM with ones with more memory on them.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

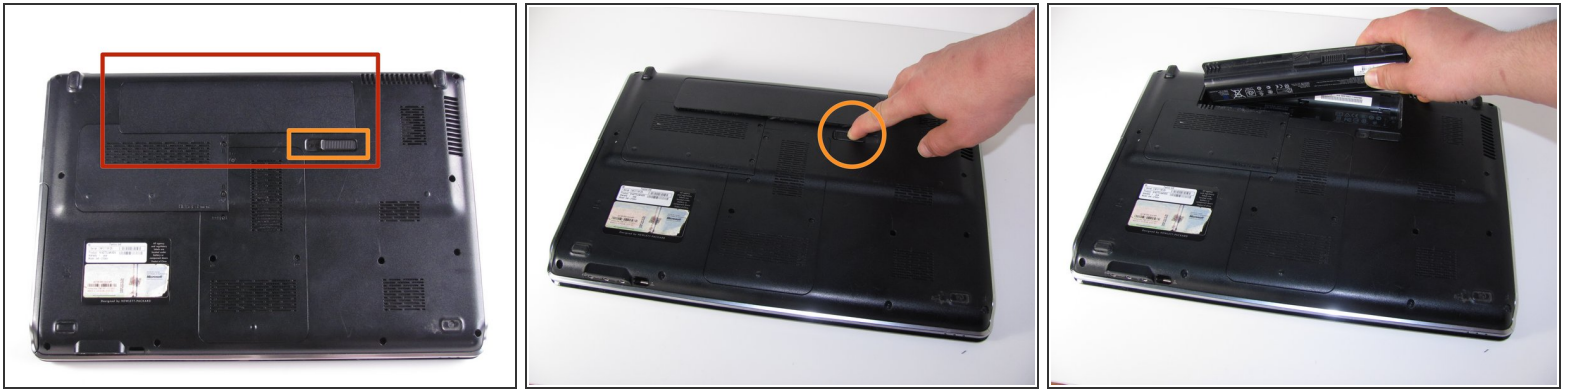


- Locate the battery on the bottom side of the laptop.
- Slide the release switch and the battery will pop out.
- Remove the battery

Step 2 — RAM

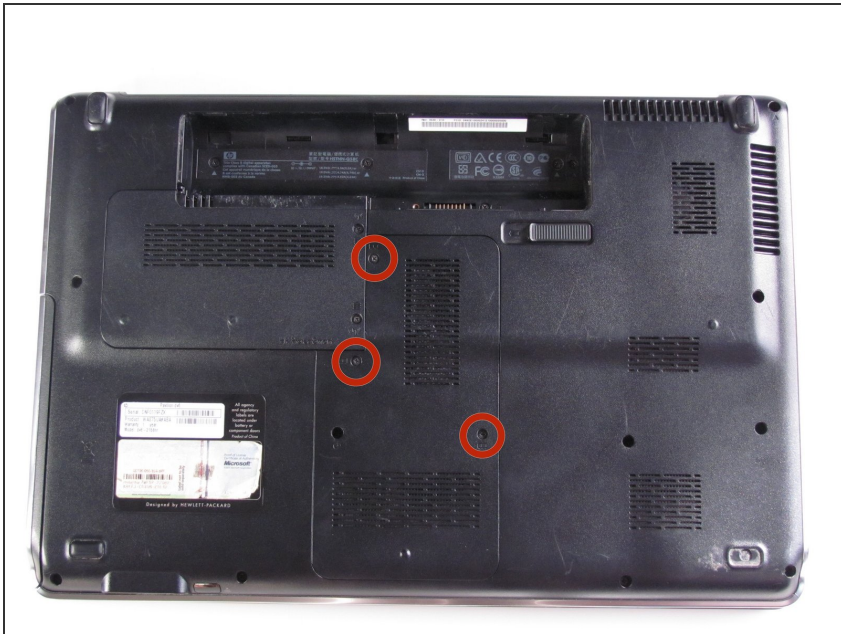

- Using the Phillips #1, loosen the three 7mm captive screws that secure the memory module cover to the computer.

Step 3

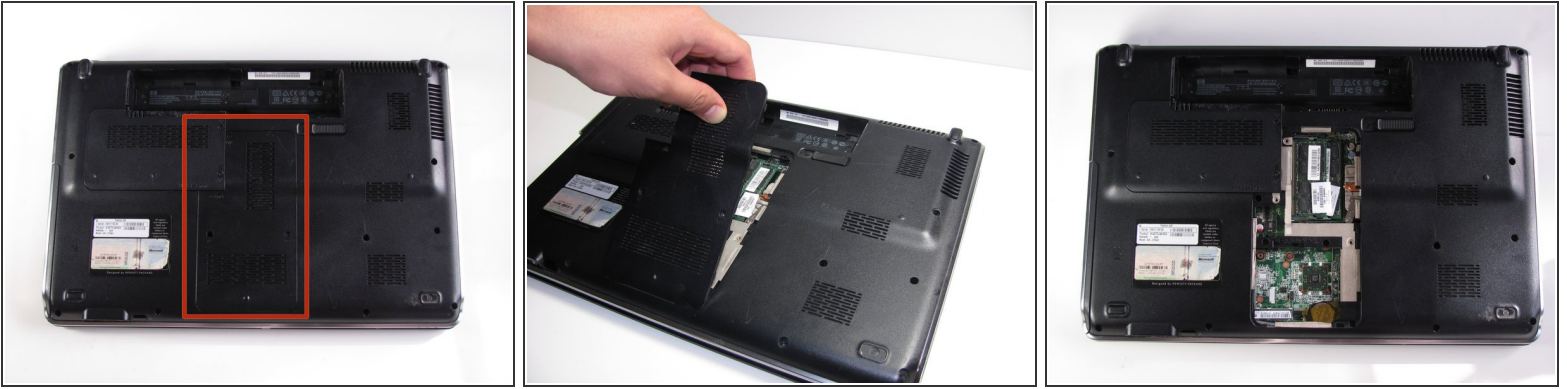

- Remove cover and expose the memory module by lifting the cover up like its on a hinge.

Step 4



- Locate the release tabs on both sides of the RAM.
 - ⚠ Use non-conductive pointing tool or fingers to prevent static build up and damaging components.
- Pull the metal tabs away from the memory to release it.
- Pull RAM away from clips to remove from device
 - ⓘ Repeat for second RAM if necessary

To reassemble your device, follow these instructions in reverse order.