



Crosley CR42 Band Replacement

The replacement guide will break down the process of removing the turn table to access and replace the turning band properly.

Written By: Roberto Rosila



INTRODUCTION

This guide is going to show you an easy way to replace the turning band in you Crosley CR42. So you can enjoy your LP sooner rather than later.



PARTS:

- [New Belt for Crosley CR42](#) (1)
-

Step 1 — Band



- Check [troubleshooting wiki](#) to make sure you aren't doing way more work than you have to!
- If you believe the band may be broken or out of place, start by unplugging the record player.

Step 2



- Make sure the needle is in its resting position off to the side.
- Gently remove the turntable from the device by lifting it directly upward.

Step 3



- Find the band, it may have fallen into the inside of the record player as you removed the turntable.
- Inspect your band for any tears, rips, or obvious signs of stretching.

Step 4



- Flip the turntable over.
- Locate the notch on the back side of the turntable.
- The notch will be on the outside edge of the turntable.

Step 5



- Wrap the band around the inner circle of the turntable and gently pull the band until you get to the notch.
- Loop the band around the notch, the band should be taut.

Step 6



- Place the turntable back onto the device.
- ❗ Make sure to line up the band with the turning knob, to ensure the band is properly placed.

This document was generated on 2020-11-17 12:09:12 PM (MST).

Step 7



- After the turntable is back on the device, gently turn it clockwise until you hear a 'click.'
- Job well done!