



# Nerf N-Strike Elite Hail-Fire Battery Replacement

Keep your Nerf N-Strike Elite Hail-Fire running...

Written By: Jonathan Peck



# INTRODUCTION

Keep your Nerf N-Strike Elite Hail-Fire running with new batteries.

## TOOLS:

Phillips #1 Screwdriver (1)

## PARTS:

AA Battery (4)

## Step 1 — Battery



- Remove the two 9.0 mm Phillips screws from the battery compartment.

## Step 2



- Pull the battery compartment out and away from the gun.

## Step 3



- Apply downwards pressure on the battery you're trying to remove in the direction of the spring.

## Step 4



- ✦ Pull battery straight out. Do not throw used batteries in the trash! Please electronically recycle them properly.

## Step 5



- ⓘ When installing new batteries, ensure that their polarities are facing the correct directions. Follow the inscriptions on the bottom of the battery tray, or place the flat side of each battery against the spring.

To reassemble your device, follow these instructions in reverse order.

