



Uniden TCX905 Back Shell Replacement

This guide will show the user how to remove the back shell of the Uniden TCX905 to access the internal hardware.

Written By: Gary Pence



INTRODUCTION

The TCX905 consists of a two part shell. The back shell is where the battery and back speaker are, the front shell includes the buttons and the screen.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery Cover



- Starting from the top of the cover, slide down and away from the phone with your thumb
- Lift battery cover off of batter and place it to the side

Step 2 — Battery Pack

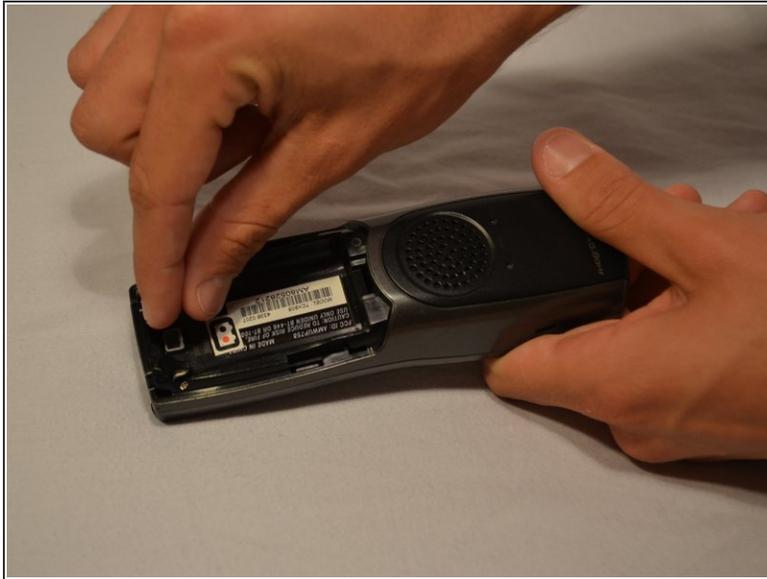



- Once battery cover is removed, place your thumb and index fingers on the the wires near the receptacle
- Gently pull straight up on the wires until a click is heard which signifies the battery is completely disconnected
- Place battery pack to the side

Step 3 — Back Shell




- Remove the two 11mm screws inside the battery storage compartment using Phillips #1 screwdriver (located near the very bottom of the phone)

Step 4

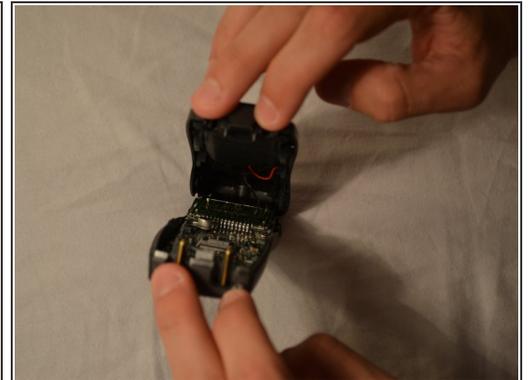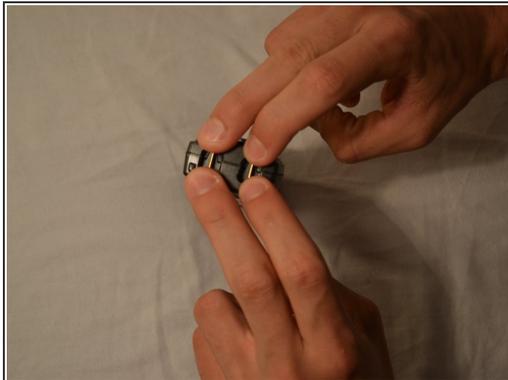

- Gently open phone casing along the seam at the bottom of the phone using index and middle fingers of both hands

Step 5

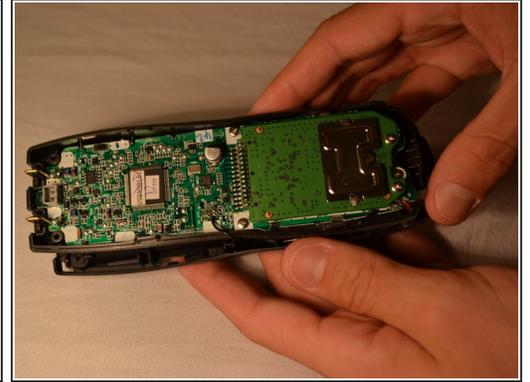

- Ensure that wired connection between circuit board and back shell is not strained
- Fold the back shell underneath the front shell and circuit board

To reassemble your device, follow these instructions in reverse order.