




# Kodak EasyShare M2008 Battery Door Replacement

This guide will show you how to properly remove the battery door from the device.

Written By: Kyanna

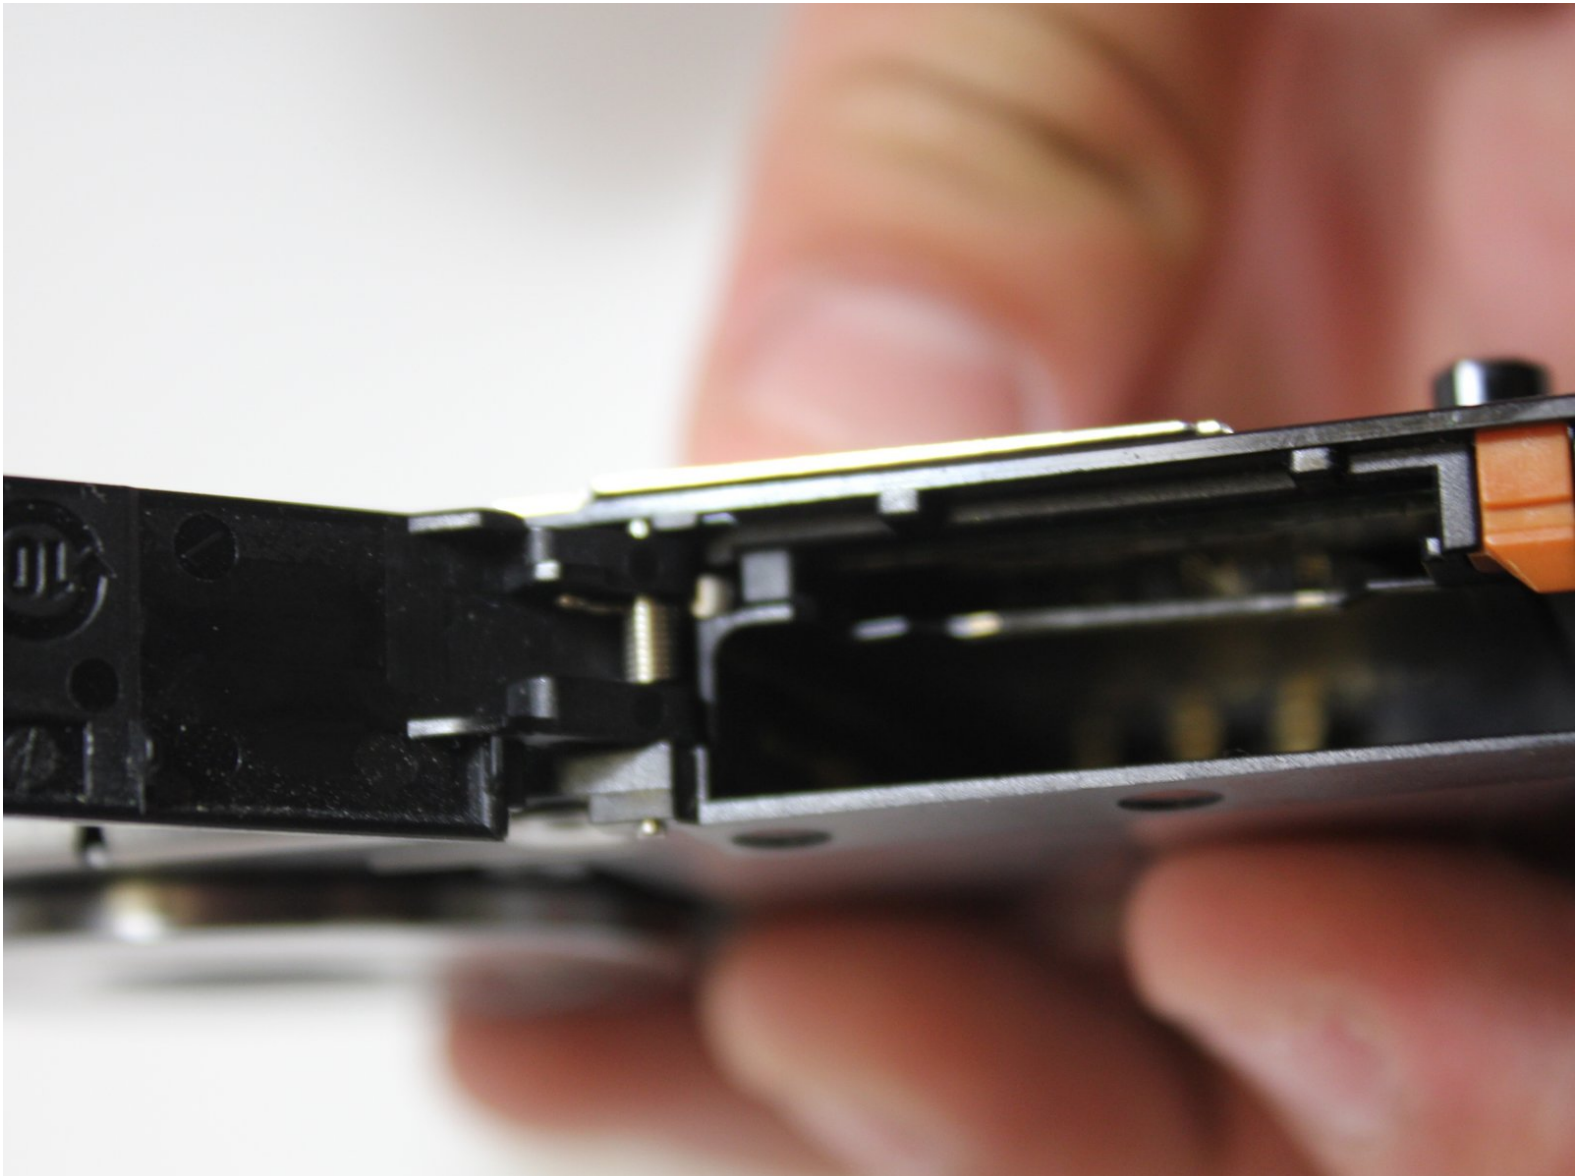



## TOOLS:


- [Tweezers](#) (1)
-

## Step 1 — Battery



- Place thumb firmly on battery cover.
- Slide thumb right, the cover should follow and pop up.


## Step 2

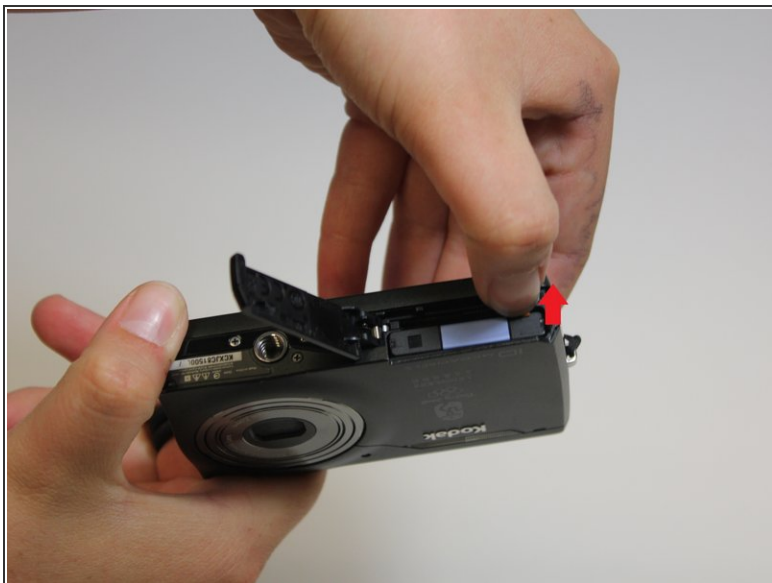

- Place thumb on orange tab and pull back towards screen.
- The battery should pop up.
- Gently lift battery out.



## Step 3 — Device Casing



- Remove screws from along outer edge of casing.
- There are 6 screws in total.
-  Righty tighty, lefty loosey!




## Step 4

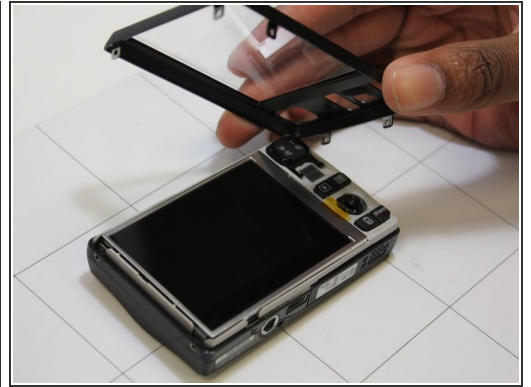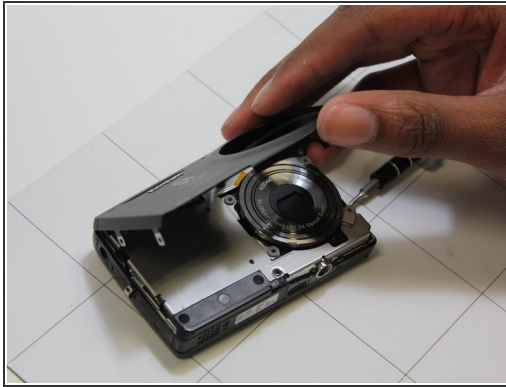



- Gently lift off front and back casing.

## Step 5

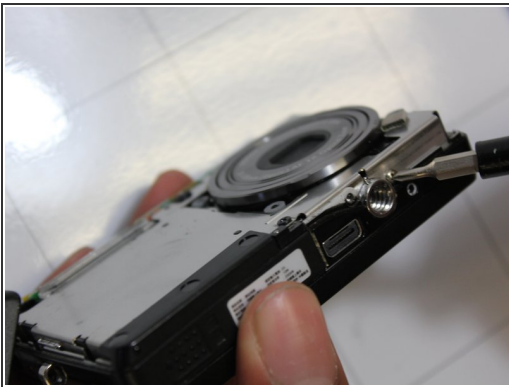




- Remove screws along side.
- Gently peel off side casing.

## Step 6 — Battery Door

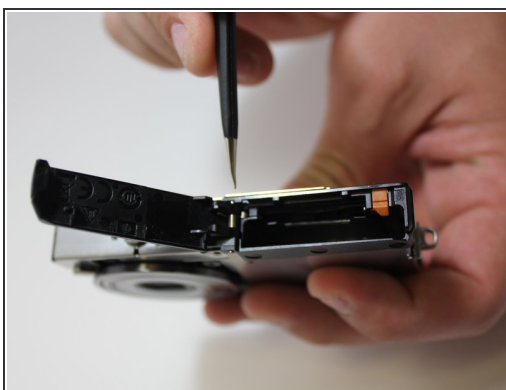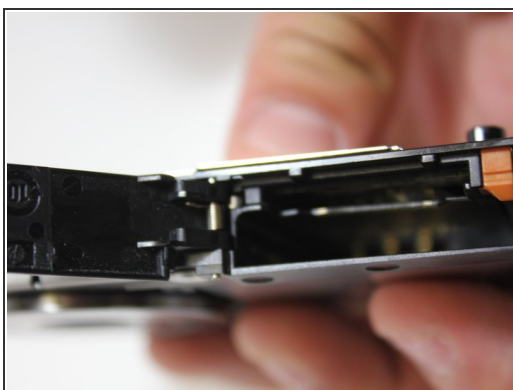


- Open the battery door and identify the retaining pin.
- Push retaining pin out with small tweezers.

## Step 7

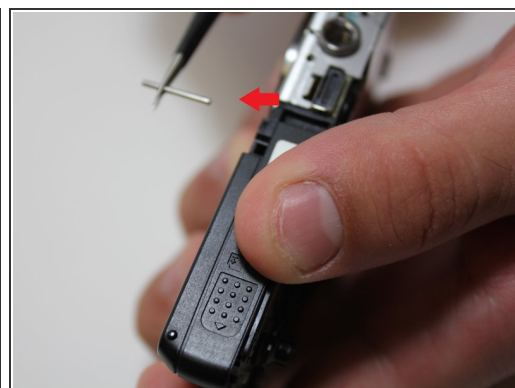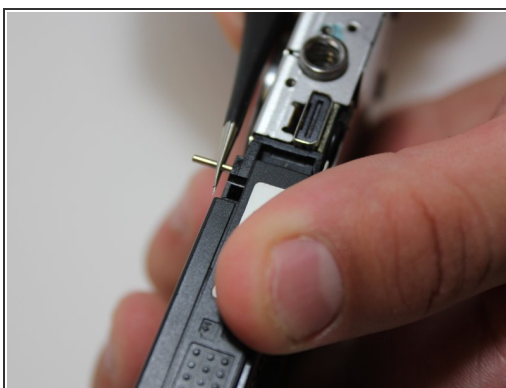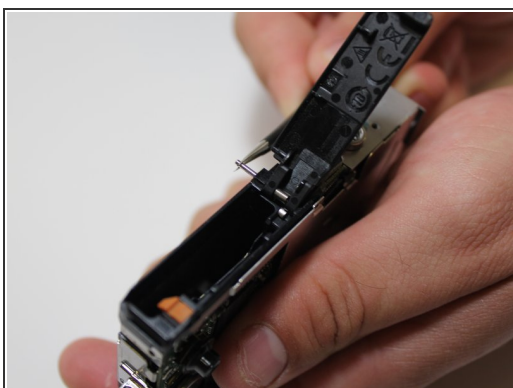

- Once pin is out halfway, close door to ensure no loose parts get lost.
- Continue to pull out the remaining length of the pin.

## Step 8

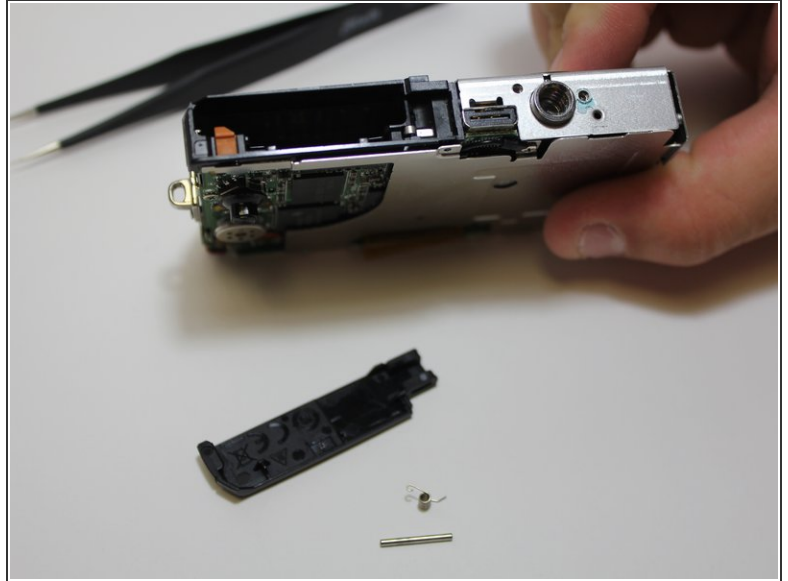

- Gently lift off door cover.

To reassemble your device, follow these instructions in reverse order.