



2005 Honda Accord Engine Oil Replacement

How To Change The Oil On The 2003-2007 Honda Accord.

Written By: Frank



INTRODUCTION

The engine oil is used as a lubricant that prevents metal parts from rubbing together and overheating. Keeping your engine oil clean ensures a longer life for your vehicle.


TOOLS:

- [Oil Filter Wrench](#) (1)
- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [17 mm Box End Wrench](#) (1)

PARTS:

- [Engine Oil Filter](#) (1)
- [1-Quart 5W-20 Synthetic Oil](#) (4)
- [Crush Washer](#) (1)

Step 1 — Using a Jack

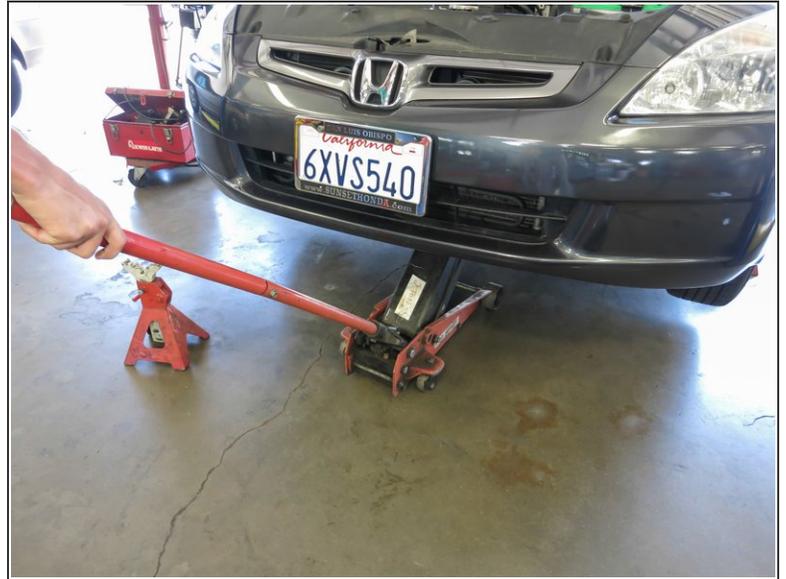

- Identify the jack point, located directly underneath your car, in the center portion between the front two wheels.
- Place the Hydraulic Jack beneath the jack point.
- Pump the lever on the [Hydraulic Jack](#), up and down, until the jack makes contact with the jack point. (Adjust the placement if necessary).
- Continue pumping the lever until the wheels are two inches off the ground.

Step 2




- Identify the jack points located behind each front tire. Place a [Jack Stand](#) underneath both jack points.
- ⚠️ Clear the area underneath the car of people or debris. Make sure the jack stands are properly supporting the car.
- Slowly rotate the Hydraulic Jack counter-clockwise to lower it. (Half a turn should be enough.)
- After fully lowering the Hydraulic Jack, remove it from underneath your car.

Step 3 — 2005 Honda Accord Opening Hood Guide



- Identify the open hood latch. It is located to the left of your brake pedal.
- Pull latch toward you. You should hear a click from the front of the car.

Step 4

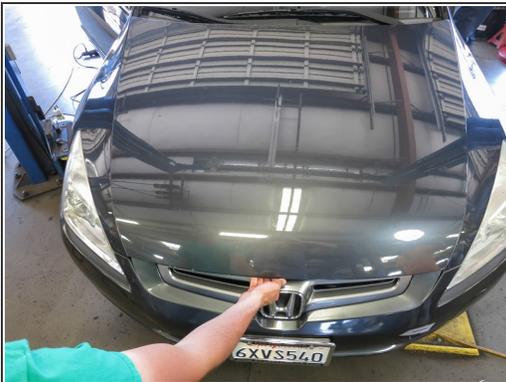

- Walk to the front of the car.
- Slide your hand under the hood, just above the Honda logo. Feel for a small rectangular lever. Pull the lever up, and lift the hood.

⚠ Be sure to lift the hood all the way up, until the pneumatic braces hold the hood in place.

Step 5 — Engine Oil



- Pull out the dipstick
- Unscrew the cap from the oil tank
- Set both aside. lay a towel over the engine block and set dipstick and the cap on that to avoid traces of oil.

Step 6



- Place oil pan between the front tires
- Lay down and slide yourself headfirst under the front of the car. To the side of the right tire you will see the oil tank.
- Loosen the drain bolt with a [17mm wrench](#). Once loose, use your hand to unscrew the rest of the way.
- ⓘ Once the bolt is removed, oil will pour out of the hole very quickly. Position the oil pan under the hole before completely removing the screw.
- Allow oil to drain until the flow is reduced to a slow drip.

Step 7




- Replace the [crush washer](#) on the drain bolt with a new one.
- Put the drain bolt back into the oil tank and tighten with 29 ft-lb of torque.

Step 8



- Using a funnel, pour the new oil into the oil tank.
- ⓘ Honda recommends using 4 quarts of their synthetic blend [5w-20 Motor oil](#).

Step 9

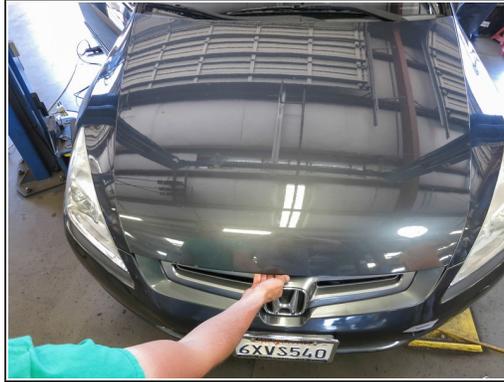

- Put the dipstick back in.
- Put the oil tank cap back on.
- close the hood.