


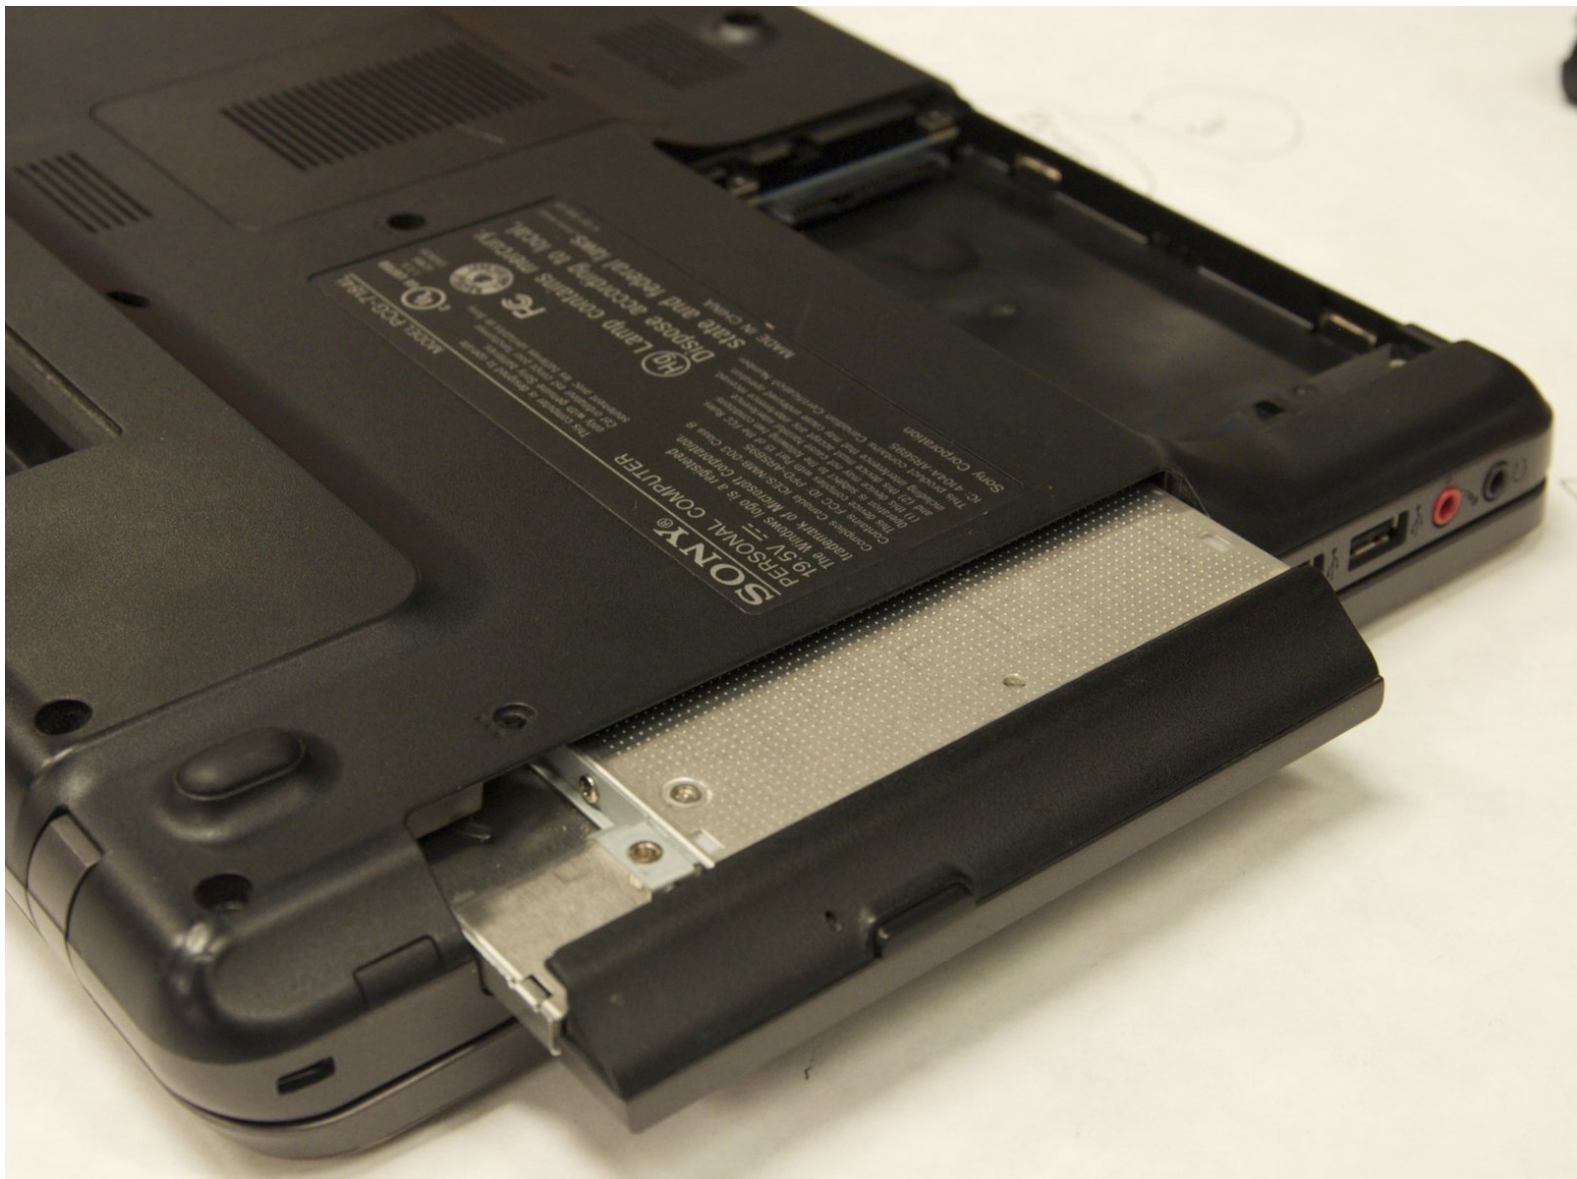

# Sony Vaio VGN-NW240F (PCG-7184L) Optical Drive Replacement

This guide will assist with the replacement of...

Written By: Kevin McGowan



---

## INTRODUCTION

This guide will assist with the replacement of the Sony Vaio VGN-NW240F's optical drive. Please review the [Troubleshooting Guide](#) before replacing your optical drive.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Optical Drive



- Locate and unscrew the two highlighted 8 mm Phillips #1 screws.
- ⓘ There will be three dots next to the desired screws

## Step 2



- Grip the cover of the optical drive and slide it out.
- ⚠ If it does not come out, do not force it. Double check to make sure the screws are entirely removed.

To reassemble your device, follow these instructions in reverse order.