


MacBook Pro 13" Retina Display Late 2013 Logic Board Assembly Replacement

Prereq to remove the logic board

Written By: Sam Goldheart

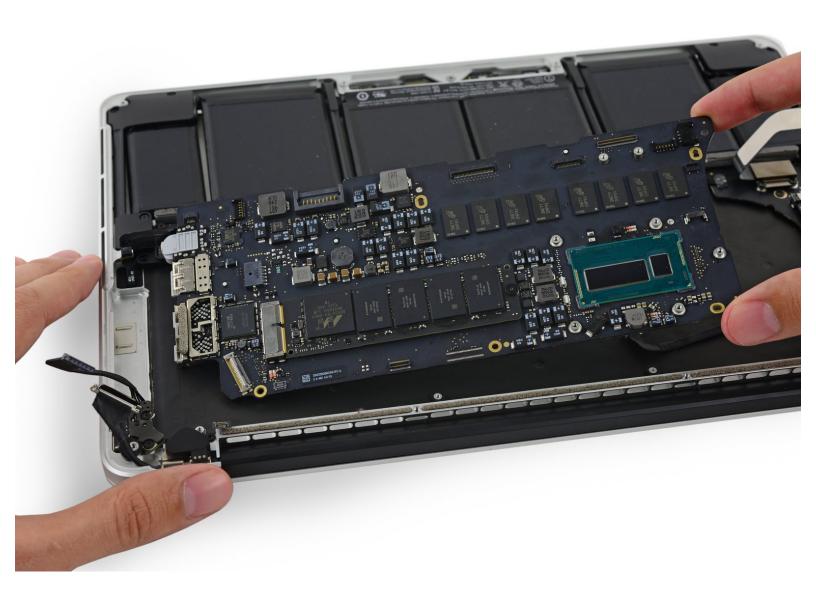

This document was generated on 2020-11-28 02:04:24 AM (MST).

INTRODUCTION


Prereq to remove the logic board




F TOOLS:

- T5 Torx Screwdriver (1)
- Spudger (1)
- Tweezers (1)

Step 1 — Logic Board Assembly

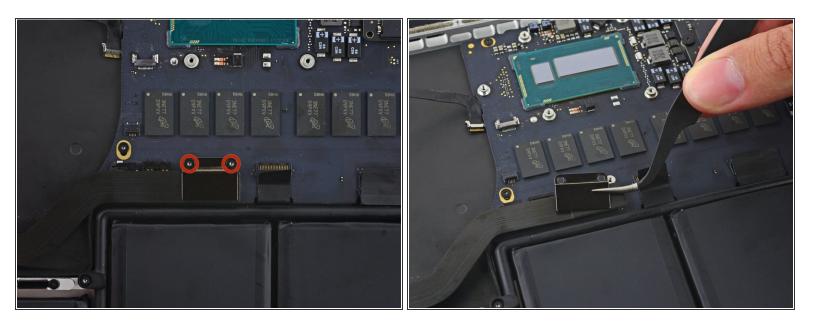

- Remove the two 2.1 mm T5 Torx screws securing the I/O board cable bracket to the logic board.
- Remove the I/O board cable bracket.

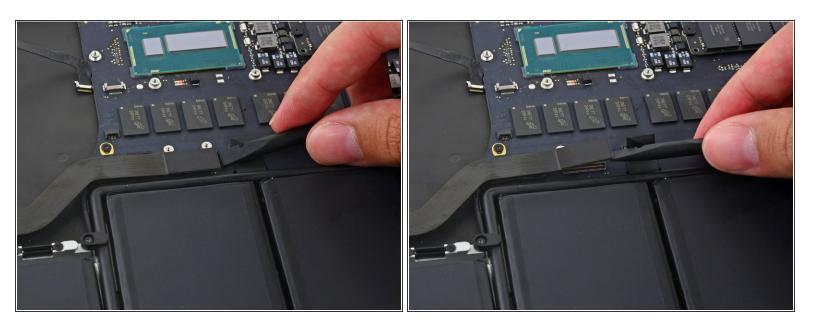

- Use the flat end of a spudger to pop the I/O board connector straight up off its socket on the logic board.
- ⚠ Be careful to only pry up on the I/O board cable, **not** on the socket itself or you risk damaging your logic board.






Lift the logic board end of the I/O board cable straight up to bend it out of the way.


↑ To avoid damage to the cable, fold only at the bend in the I/O board end of the cable.

Step 4

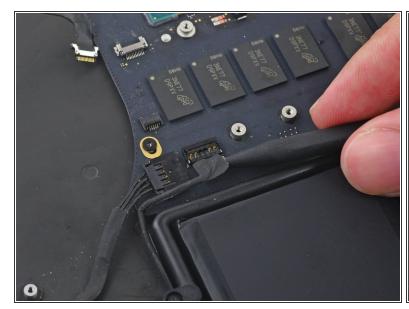



 Use the tip of a spudger to lift the right speaker connector straight up out of its socket on the logic board.

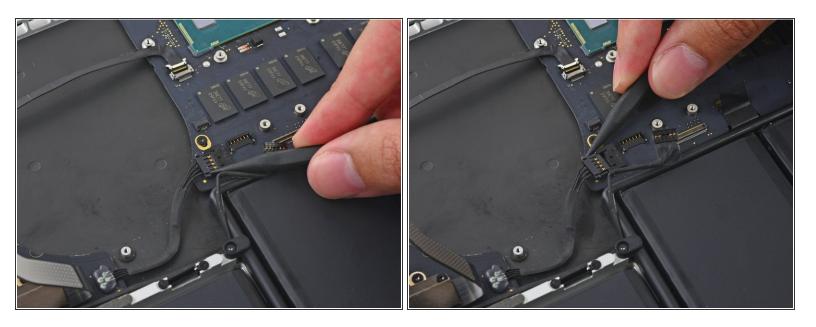



• With the tip of a spudger, push on either side of the I/O board connector to walk it out of its socket on the logic board.


Step 6



 Use the flat end of a spudger to disconnect the keyboard backlight cable and bend it up out of the way of the logic board.

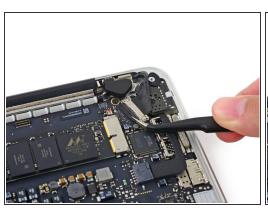


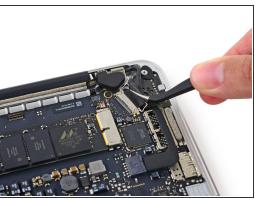

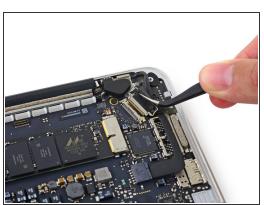


 Grab the black plastic tab to flip the display cable connector open and pull it straight out of its socket on the logic board.

Step 8

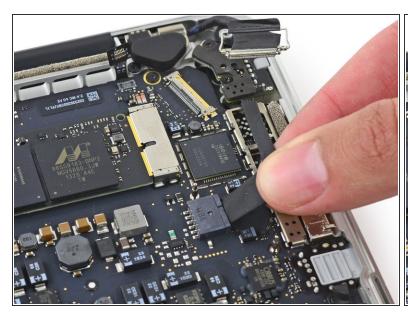



Carefully pull the DC-In board connector straight out of its socket on the logic board.

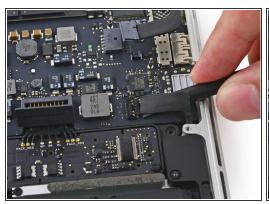





 Wedge the flat end of a spudger under the left speaker cable near the connector and lift it straight up out of its socket and fold it out of the way.

Step 10





(i) If necessary, peel back any tape covering the microphone cable ZIF connector.








- Use the tip of a spudger to flip the retaining tab on the microphone cable ZIF connector.
- Pull the microphone cable out of its socket on the logic board.








- i If necessary, peel back any tape covering the keyboard cable connector.
- Use the tip of a spudger to flip the retaining tab on the ZIF connector.

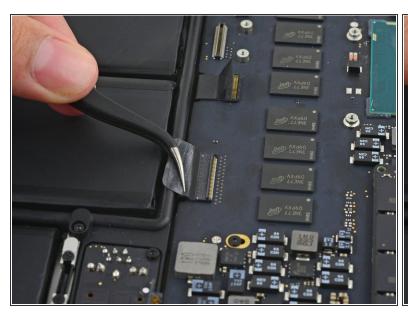


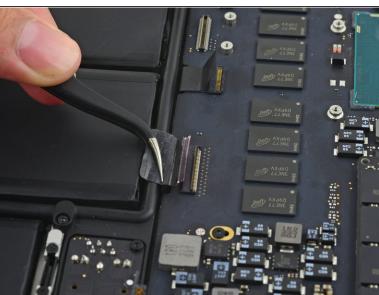


Pull the keyboard cable straight out of its ZIF socket on the logic board.






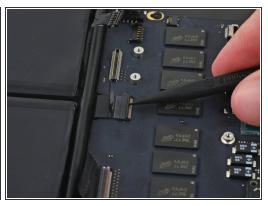


- (i) If necessary, peel back any tape covering the trackpad cable connector.
- Use the tip of a spudger to flip the retaining tab on the ZIF connector.

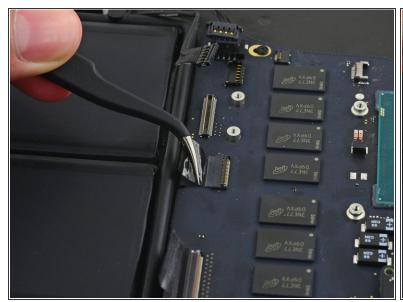

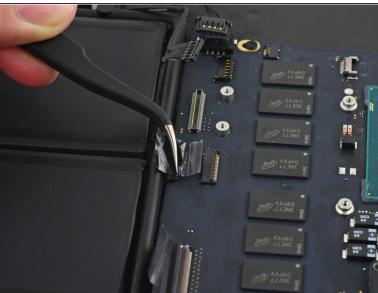



Pull the trackpad ribbon cable straight out of its socket on the logic board.

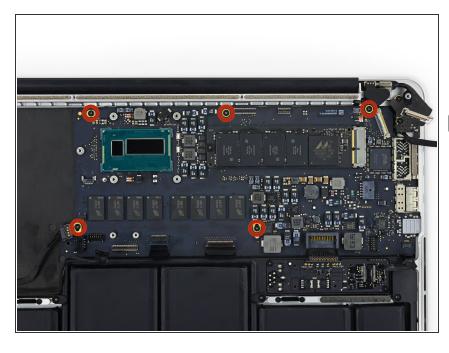

- Remove the five 3.5 mm T5 Torx screws securing the logic board to the upper case.
- When reassembling, install all five screws loosely, position the logic board, and then tighten evenly.



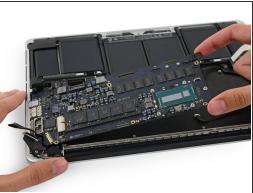

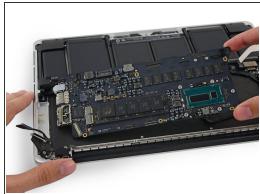

- Lift the processor end of the logic board up slightly and pull it toward the fan recess to free the ports from the edge of the upper case.
- Remove the logic board.
- When reinstalling, make sure the keyboard, keyboard backlight, MagSafe, and microphone cables don't get trapped beneath the logic board.
- Also be sure to slide the ports' metal EMI fingers under the side of the case, not over.

To reassemble your device, follow these instructions in reverse order.