



Disassembling Nokia 6086 Top Front Cover

Written By: Andrea



INTRODUCTION

This guide is a step by step process to remove the top cover of the phone. It is the preliminary step, in order to gain access into the upper section of the phone.

TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Turn off the phone.
- Check if there is a microSD card in the slot behind the door on the side. If so, remove it by first pushing it in, then pulling it out.
- Position the phone so that the back side is in view.

Step 2

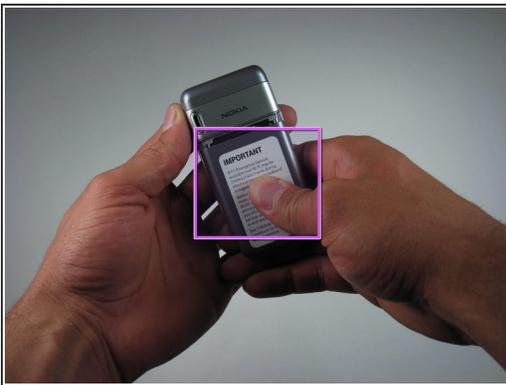

- Remove the back battery cover.
 - Apply pressure on the cover while simultaneously sliding the cover downward.

Step 3





- Insert the iPod opening tool between the base of the phone and the phone battery.
- Position the phone so that the battery won't fall out of the phone.
 - ⓘ The battery lifts out of the phone fast and easily.
- Carefully lift the battery out of the phone.

Step 4 — Top Front Cover




- Close the phone.
- Face the front cover forward.

Step 5

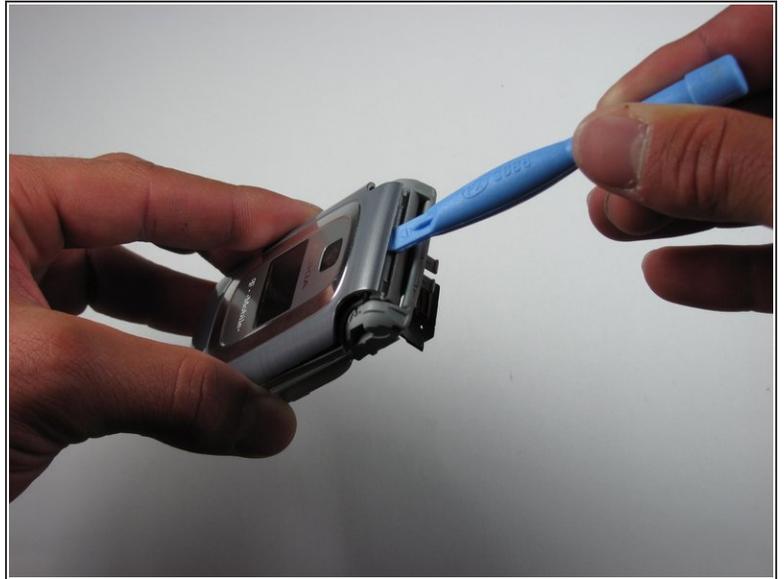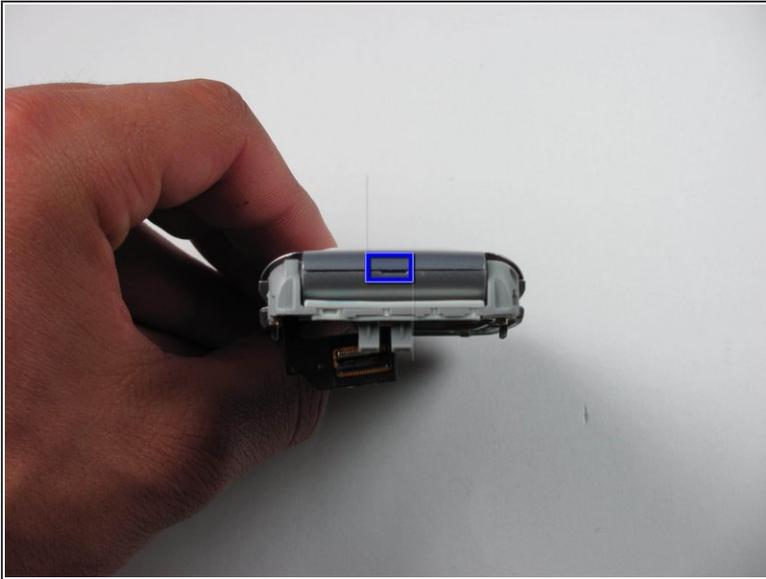

- Locate the 4.5 mm notch at the top of the phone.
- Place the iPod opening tool into the opening.
- Slightly prop up the top section by lifting the tool.

Step 6

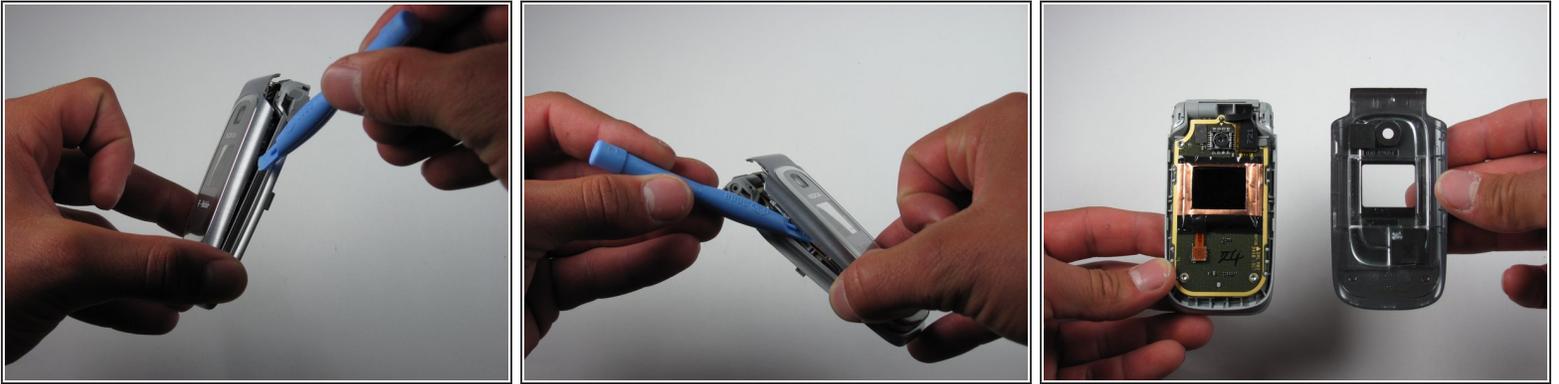

- Wedge the iPod opening tool between the top cover and the phone.
- Gently lift the top cover away from the phone using the iPod opening tool.
 - This unlatches each hook that connects the top cover to the phone.
- ⓘ Repeat for both the left and the right sides of the phone.
 - Place the top cover aside once the top cover is completely disconnected from the phone.

To reassemble your device, follow these instructions in reverse order.