




# Samsung Captivate Glide Speaker Replacement

How to remove the main speaker of the Samsung...

Written By: Nicholas Mira

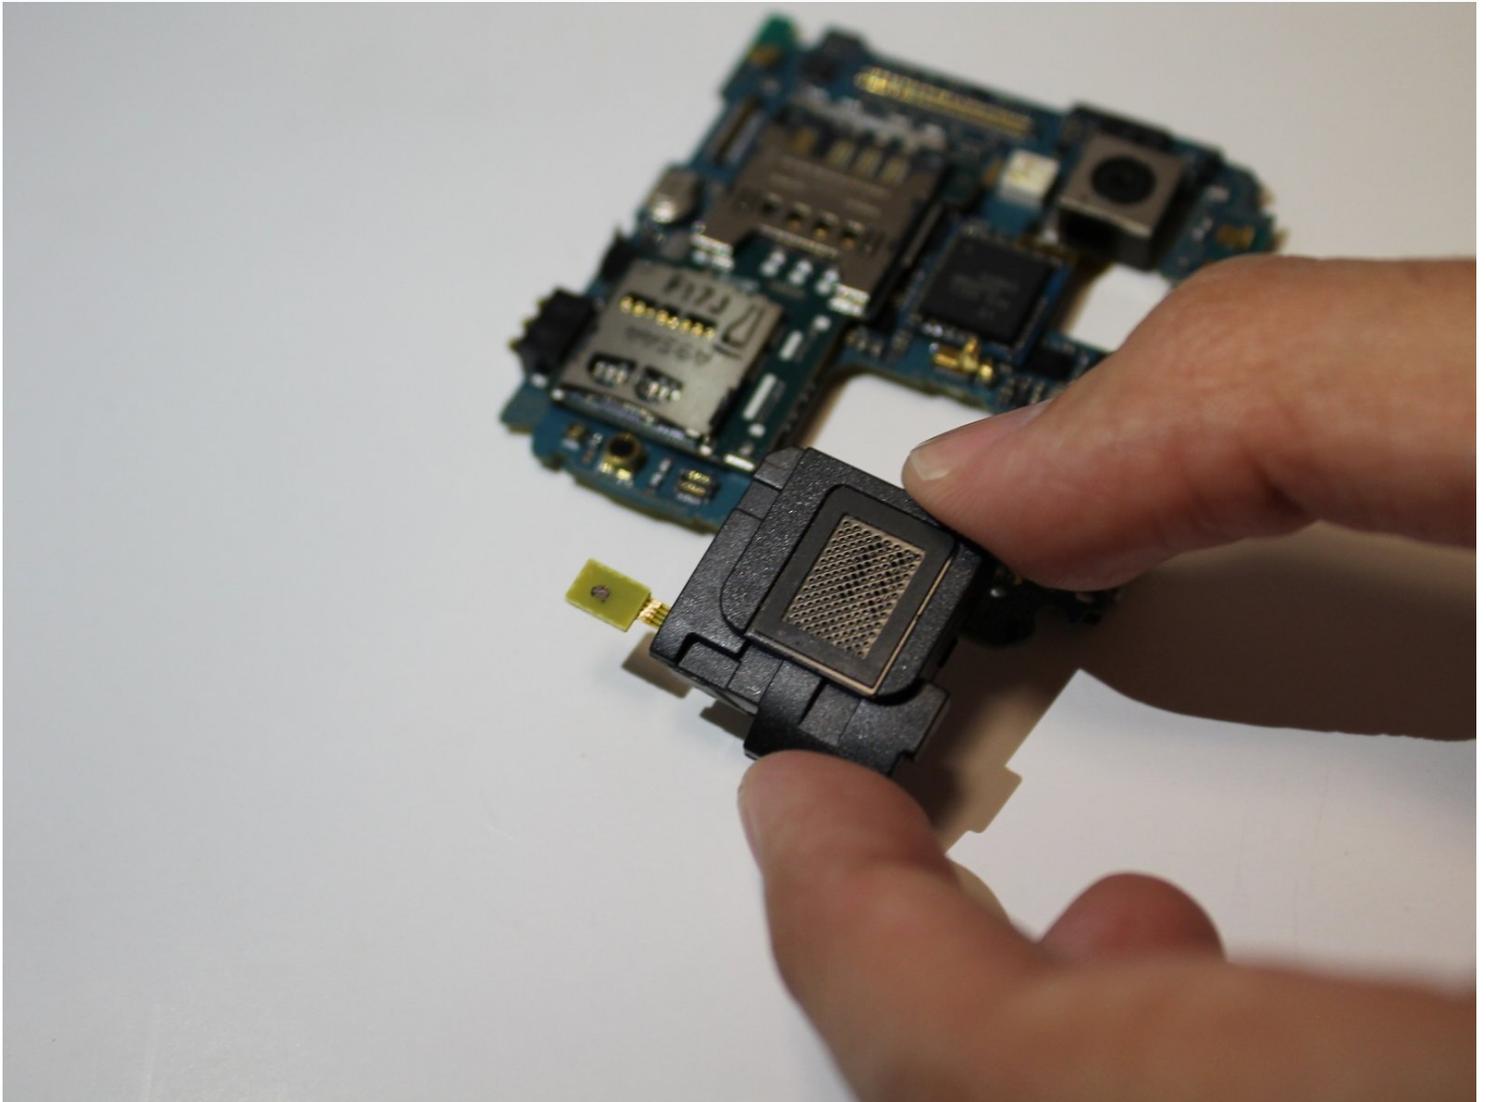

# INTRODUCTION

How to remove the main speaker of the Samsung Captivate Glide.

## TOOLS:

Phillips #00 Screwdriver (1)

iFixit Opening Tool (1)

Tweezers (1)

## Step 1 — Motherboard




- Remove back cover using fingernail or plastic opening tool. The cover pulls up and off.

## Step 2



- Remove battery with plastic opening tool or finger.

### Step 3

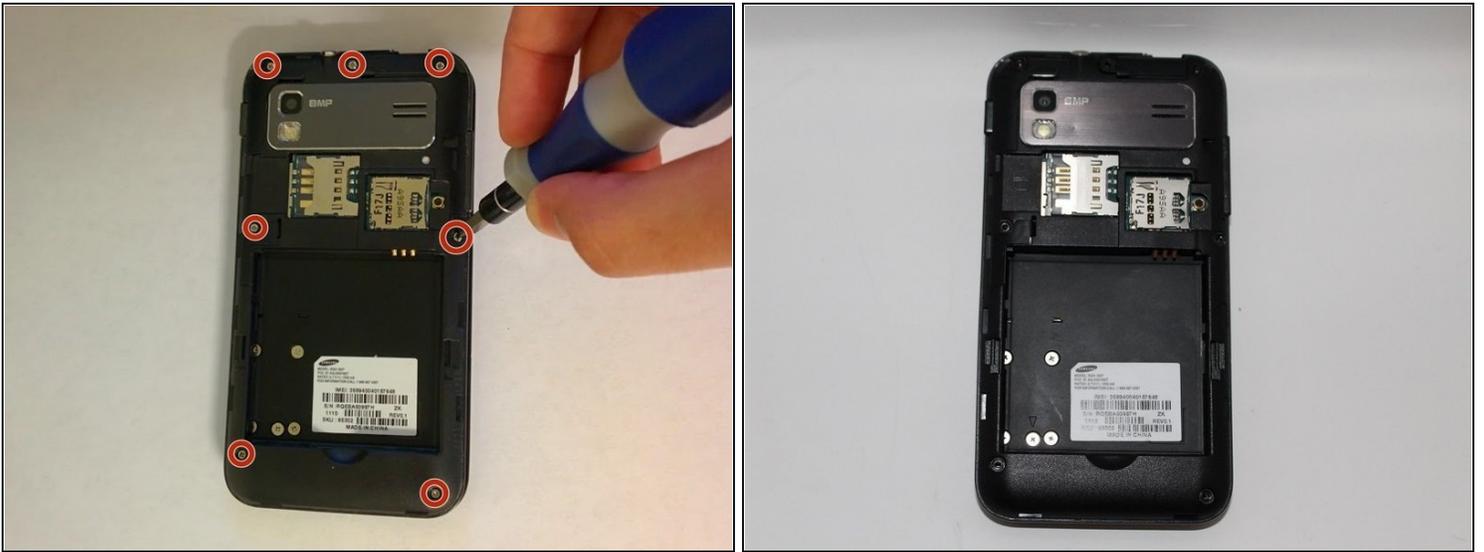

- Remove the seven screws from backplate using the #00 screwdriver.

### Step 4




- Remove the back plate using the plastic opening tool.
- There is a lip on each side, and both must be pried up.
- ⓘ You can work your way around the edges after prying the two sides.

## Step 5



- Use the plastic opening tool to detach the two tabs connecting the motherboard to the base of the phone.

## Step 6

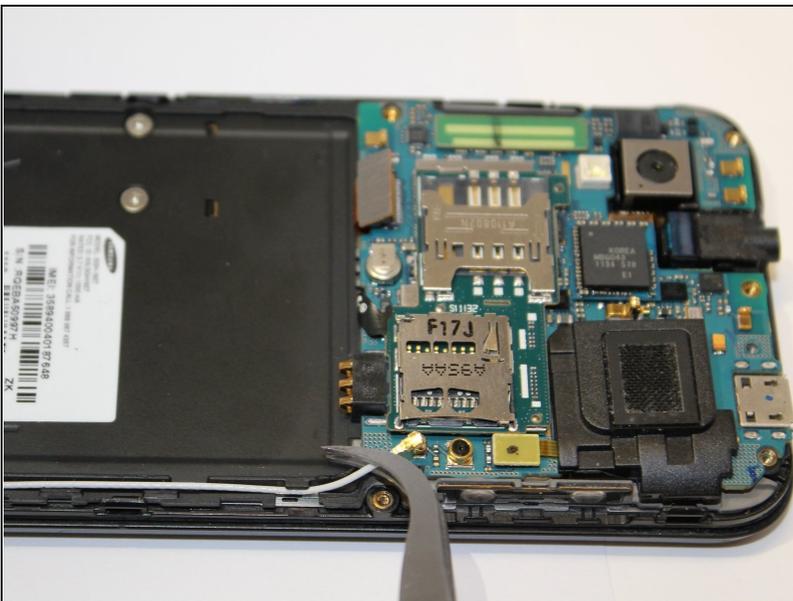

- Disconnect the antenna cable from the motherboard using [tweezers](#).

## Step 7




- Remove the single screw connecting the motherboard to the base of the phone by using the #00 Phillips screwdriver.

## Step 8




- Lift the motherboard out of the base of the phone.

## Step 9 — Speaker

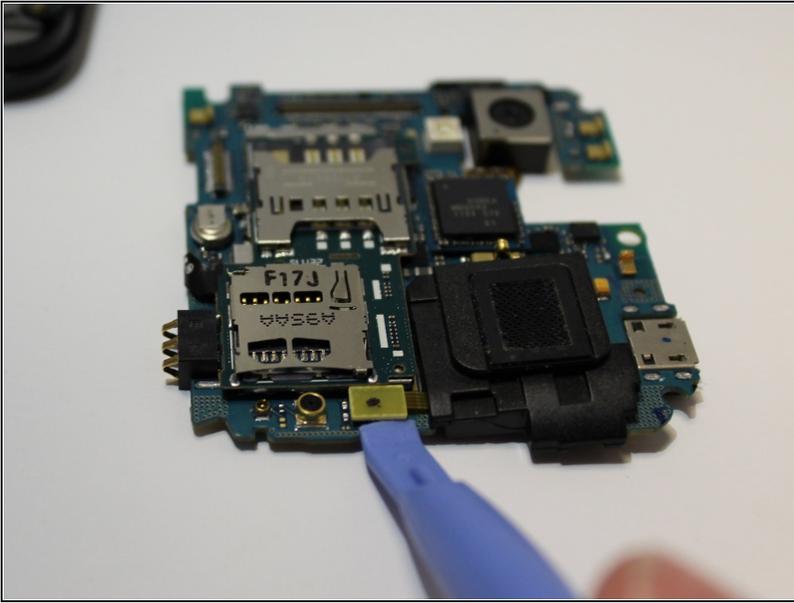

- Using the plastic opening tool, detach the tab connecting the speaker to the motherboard.

## Step 10

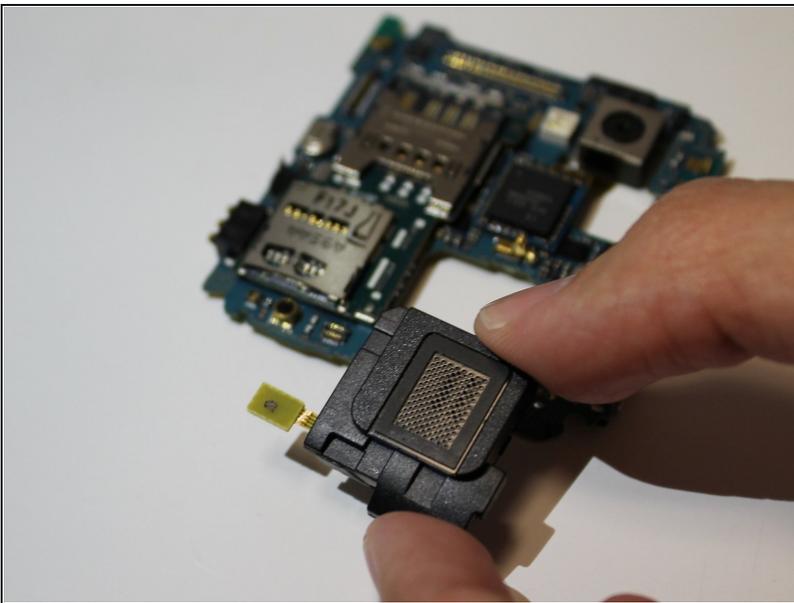

- Remove speaker manually.
- ⓘ There is nothing connecting it to the motherboard, so just pull.

---

To reassemble your device, follow these instructions in reverse order.