



Disassembling PlayStation Vita Screen & Digitizer (Video Tutorial/Guide)

Disassemble a PlayStation Vita's Screen & Digitizer from its front plastic frame assembly.

Written By: djgodmandj

INTRODUCTION

After many requests, here is a video tutorial showing how to disassembly a PlayStation Vita's Screen & Digitizer from its front plastic frame assembly.

[video: <https://www.youtube.com/watch?v=yUEfW-jJumk>]



TOOLS:

- [iFixit Opening Picks set of 6](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Playstation Vita Screen and Digitizer Assembly](#) (1)

Step 1 — Case Separation



⚠ Power off and remove the memory card.

- Using a Phillips #00 screwdriver, remove the four 6.4mm screws on the back casing.

Step 2



- Using your fingernail or a spudger, pry open the accessory port cover on the top of the device.
- Using a Phillips #00 screwdriver, remove the two 5.4mm screws hidden beneath the accessory port cover.

Step 3



- Remove the two 5.4mm Phillips #00 screws on the bottom of the device near the charging port.

Step 4




- Beginning at the sides of the device, use a plastic opening tool to separate the front and rear cases.
 - Continue working your way around the device gently prying it open.
- ⚠ There are still wires holding the front and rear cases together. You may damage the connections if you yank the cases completely apart.

Step 5




- Gently separate the two cases, minding the battery and the touch screen controller connectors holding the two cases together.

Step 6

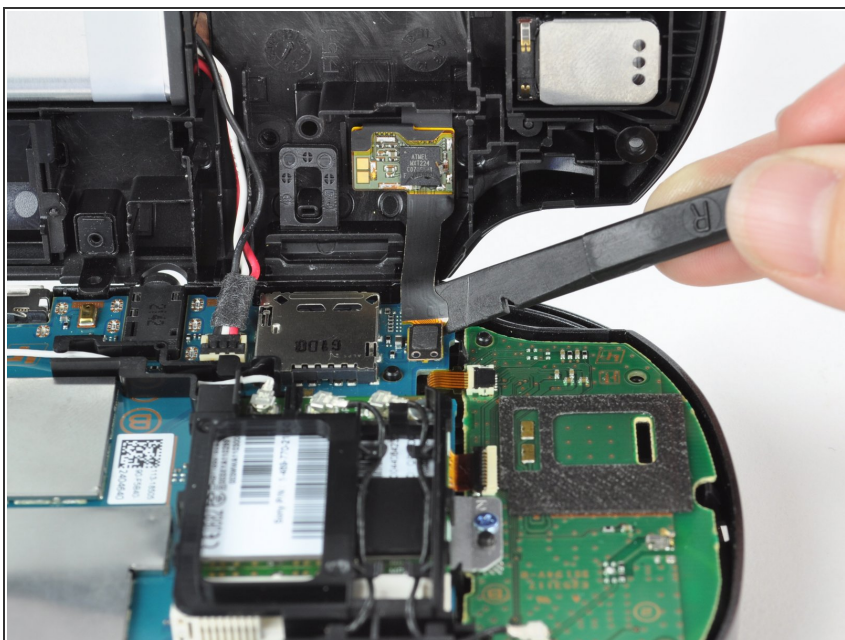

- Using a spudger, free the touch screen controller flex cable by gently prying up the connection.

Step 7

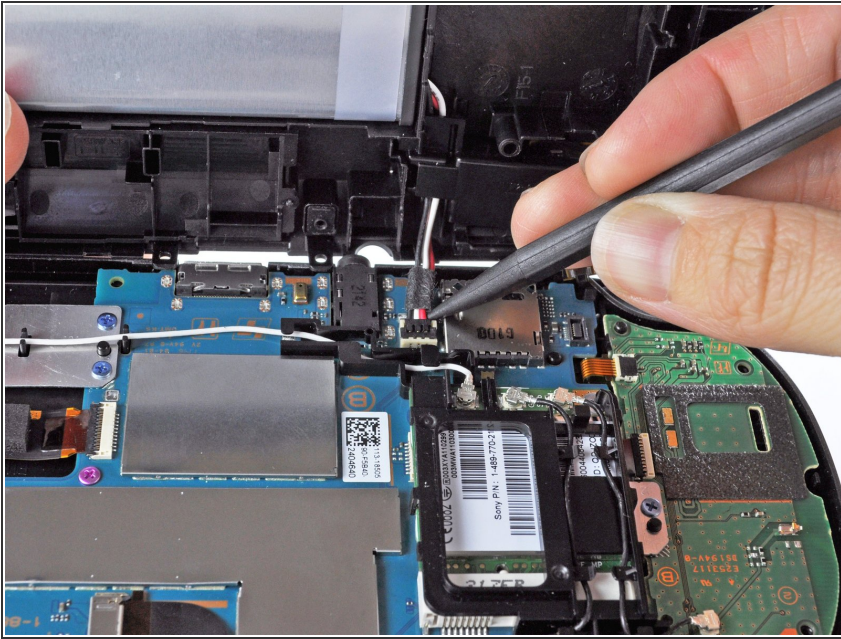


- Free the battery cable by gently prying up on the connection with a spudger.

Step 8




- Separate the front and rear cases.

Step 9 — Battery

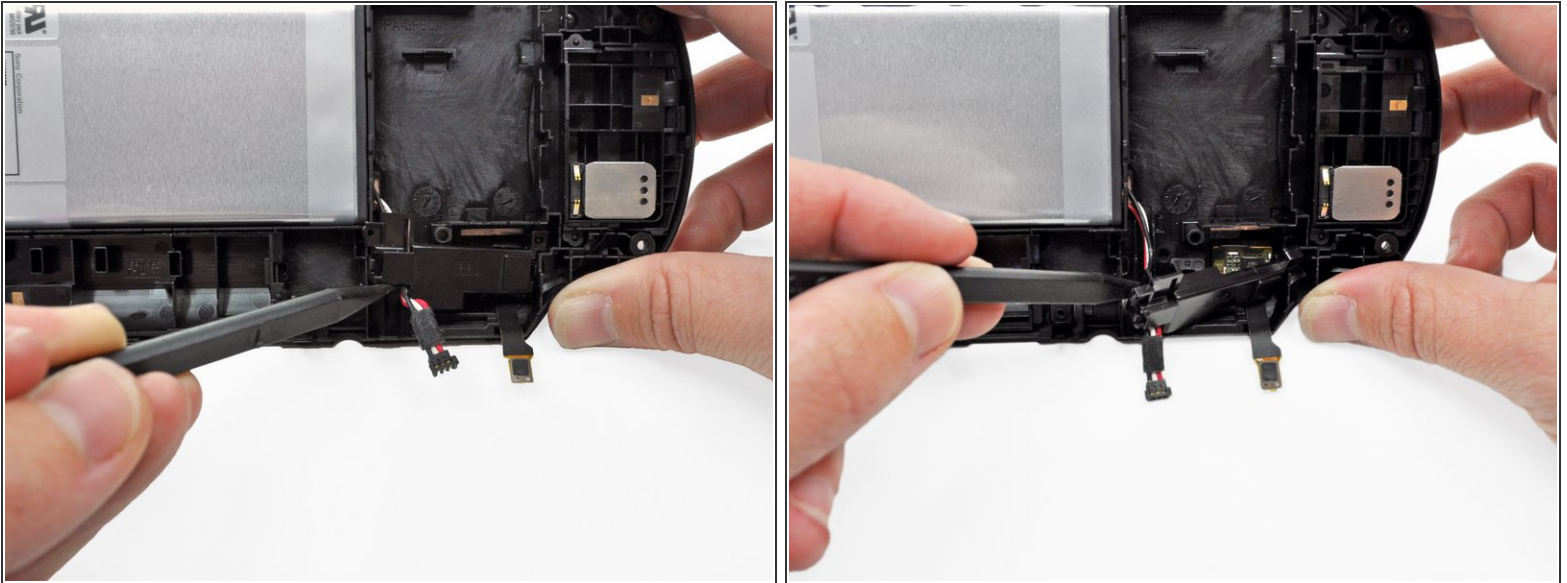

- With the help of a spudger, gently pry off and remove the battery cable retainer on the back casing assembly.
 - ⓘ The easiest access to the battery cable retainer is where the battery cable comes out.
 - ⓘ You can also use the two small tabs on the side of the cable retainer. Locate the tabs and release one at a time. Be a little careful not to push the cover in and re-lock it.

Step 10

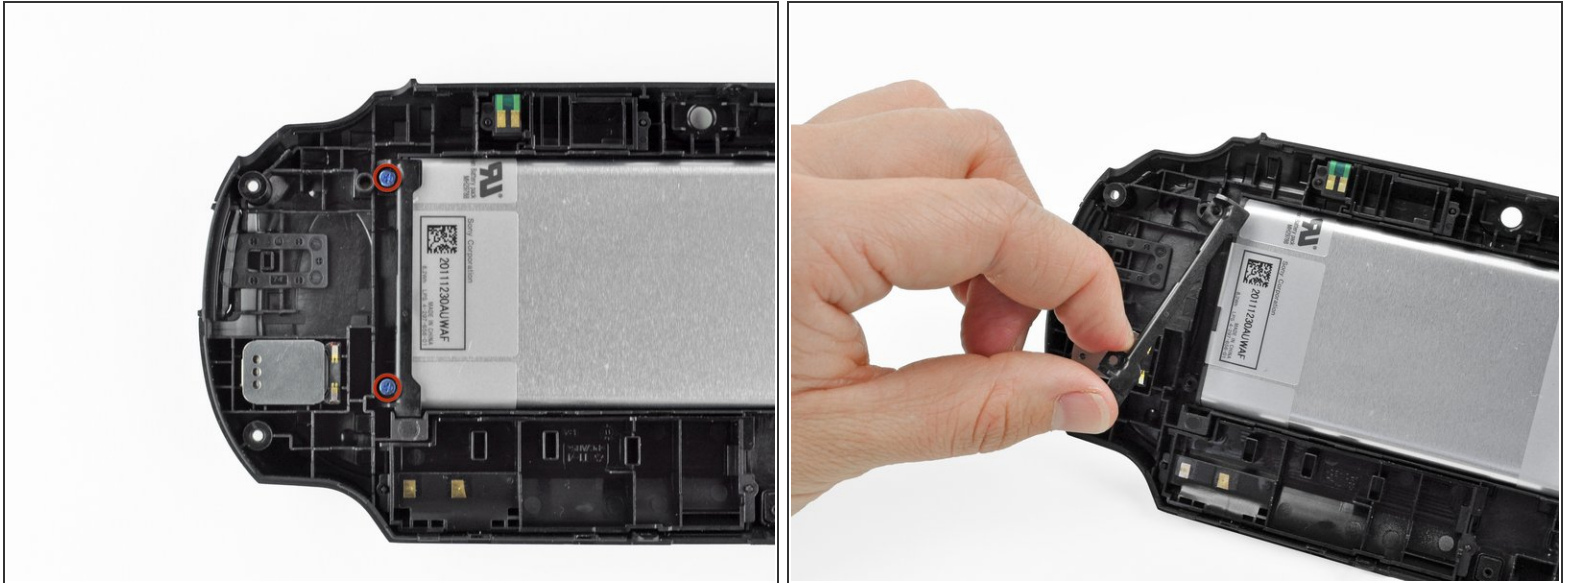

- Using a Phillips #00 screwdriver, remove the two 5.0mm blue battery case screws.
- Remove the plastic battery retaining bar.

Step 11



- Using your finger or a spudger, lift the battery out and remove it.
- Guide the battery wires through the hole in the back casing as you remove the battery.

To reassemble your device, follow these instructions in reverse order.