

Fender Starcaster Tuning Heads Replacement

Written By: Christopher Hartigan



INTRODUCTION

If the tuners have broken, become excessively lose, or seized, they will require replacement.



TOOLS:

- Small Needle Nose Pliers (1)
- Flush Cutter (1)
- Phillips #0 Screwdriver (1)
- Smart Wrench (1)

Step 1 — Loosen the Strings







- Start by loosening the strings. This is done by turning the tuning knob until the string has lost tension.
- Repeat this for all six strings on the guitar.


Step 2 — Remove the Strings from the Tuning Pegs






- ♠ Be mindful of the string ends. They may be sharp and could puncture your skin.
- It may be necessary to use pliers to remove string ends from the tuning peg.

Step 3 — Remove the Strings from the Bridge

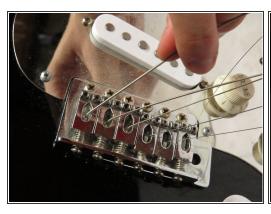



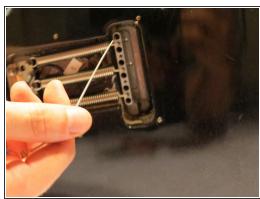

- After removing the strings from the tuning pegs, slide the strings through the bridge and out of the back of the guitar.
- If the twists in the string ends are in the way, use wire cutters to snip them off. This will allow the heavier strings to pass through the bridge easier.

Step 4 — Tuning Heads





Using a wrench, remove the nuts around each tuning head post.

Step 5








- Next, remove the threaded retainer sleeve from each post.
- Don't forget the washer.

Step 6

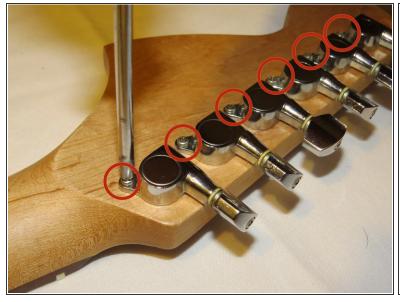



Next, remove the screws from the backside of each tuner.

Step 7



• Finally, remove the tuning machine assembly from the headstock.

To reassemble your device, follow these instructions in reverse order.