



HTC One X Antenna Replacement

If rebooting your device or updating the...

Written By: Blain Abebe



WARNING: To reduce risk of fire or burns, do not attempt to open, disassemble, or service the battery pack. Do not crush, puncture, short external contacts or dispose of in fire or water. Do not expose to temperatures above 60°C (140°F). Replace only with the battery pack designated for this product. Rechargeable Li-ion Polymer Battery. Recycle or dispose of properly. Read instructions in operating guide before using the battery. Made in China Сделано в КНР
Model: BJ83100 Rating: 3.7VDC == 1800mAh 6.66Whr

Serial no.: 1HCA534G159852 Pa. 18

INTRODUCTION

If rebooting your device or updating the software to the latest version doesn't solve your wi-fi or bluetooth connectivity, then another easy fix can be to replace your HTC One X antenna.

TOOLS:

[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

[Safety Pin](#) (1)

Step 1 — Squeeze Test




- Before replacement of the antenna, carry out the squeeze test.
- Gently squeeze your device between the camera lens and the volume button. This should temporarily reconnect the antenna if it's loose.
- If the squeeze test doesn't reconnect your wi-fi/bluetooth then move to step 2

Step 2 — Remove SIM card slot



- Insert a safety pin, or other small object into the narrow aperture next to the Sim Card Slot to remove the SIM card.
- ① The Sim Card Slot is located at the top of the rear panel.

Step 3 — Remove front panel

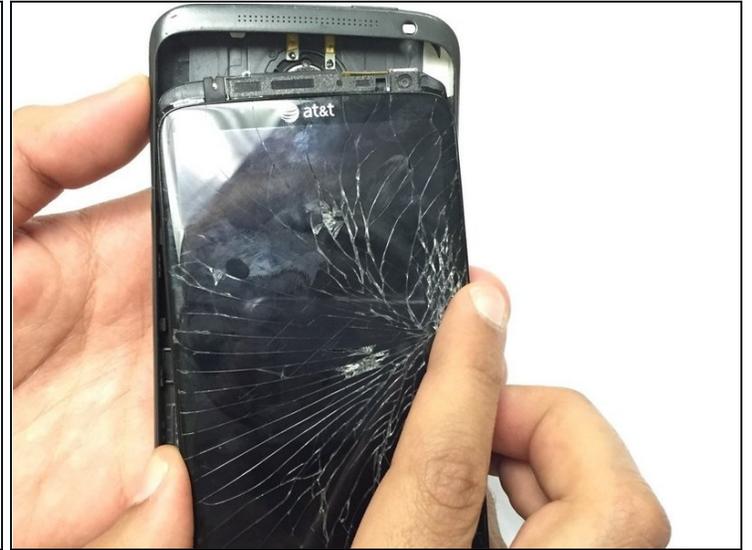

- Use a plastic opening tool, and carefully insert it between the display and rear panel. Separate the two parts.
 - ⓘ The display assembly is a tight fit therefore the removal must be carried out carefully with firm, constant force being applied around the bottom corners and sides of the panel. Note that the top of the phone is underneath the panel, and will not come out.
- ⚠ If your display is cracked, take extra caution when separating the display from the rear panel to prevent further breakage or bodily harm.
- Set aside the rear panel for now

Step 4 — Replace antenna



- Once the rear panel is separated from the front panel, remove the antenna using [tweezers](#).
- ① The antenna is located on the right hand side of the front panel as indicated in the image.
- Replace and reconnect the new antenna in the same position as the faulty one you just removed. Remember to place it underneath the metal supports on the board.

To reassemble your device, follow these instructions in reverse order.