



# Dell Inspiron M5010 RAM Replacement

This guide will show you how to remove the back cover and replace the RAM.

Written By: April Poucher



## **TOOLS:**


- [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery





- ⚠ Make sure laptop is powered off before removing the battery.
- Slide both arrow tabs towards the outer edge of the computer to release the battery.
- ⓘ Battery is not shown.

## Step 2 — RAM

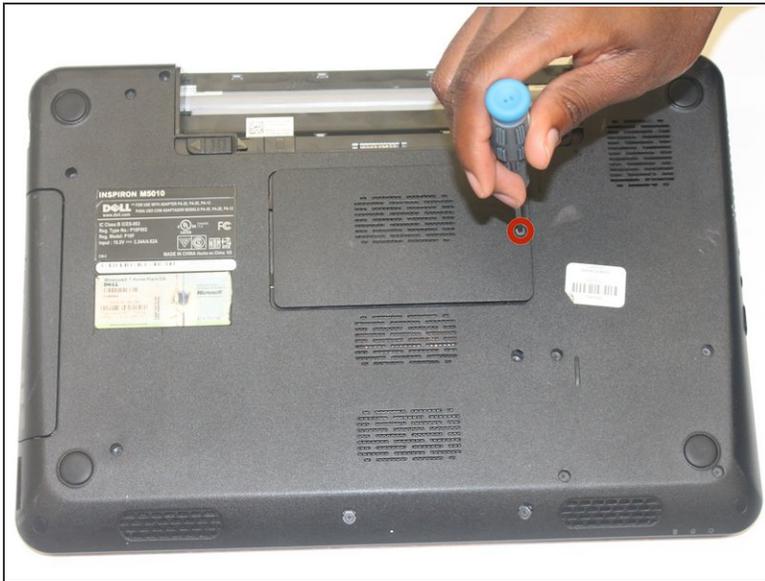

- Using the Phillips #000 screwdriver, loosen the screw holding in the back cover.
- Then, lift up the back cover to remove it.

## Step 3

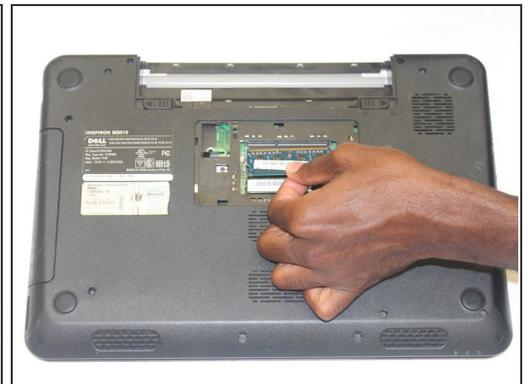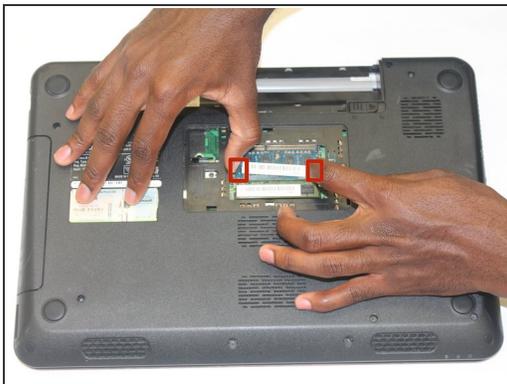

- Snap open the top memory clips and remove the memory drive they hold in.

## Step 4



- Snap open the bottom memory clips and remove the memory drive they hold in.

## Step 5



- The laptop computer should look like this once both memory cards are removed.

To reassemble your device, follow these instructions in reverse order.