



Kodak EasyShare Z740 Lens Cover Replacement

How to remove the lens cover from the camera.

Written By: Kirsten Price



INTRODUCTION

The lens cover protects the lens of the camera from being scratched or damaged while not in use. If the cover breaks or cracks and a replacement needs to be done, you can follow the steps in the following guide.

Step 1 — Lens Cover




- Remove lens cover from the camera by squeezing the protruding button on each side of the cover and pulling.

Step 2




- Pull the lens cover string toward the ground so that the loop underneath the metal slab is on top of the cover string.
- Push up so that the string starts to come out of the top of the loop.
- Grab the string from above the loop and pull.

Step 3

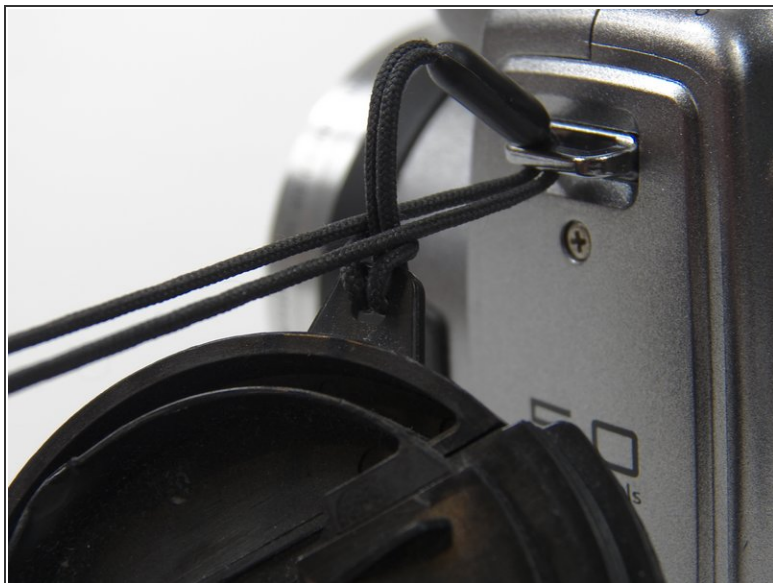

- Feed the string on top into the metal slab while pulling the loop toward you until the plastic piece stops you from pulling any further.

Step 4

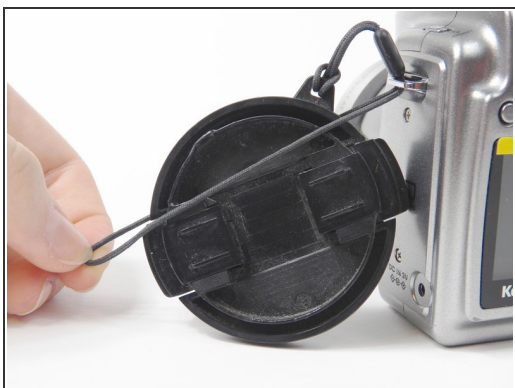

- Separate the two pieces of the loop and pull the lens cover up in between them.

Step 5



- Pull the lens cover and the sting will come out of the metal slab.

To reassemble your device, follow these instructions in reverse order.