



Sony TCM-919 Cassette-Corder Operating Buttons Replacement

This guide aims to guide Sony TCM-919 owners through the process required to replace stuck operating buttons on their cassette-corder. Record, Play, Rewind, Fast Forward, Stop, Eject, and Pause buttons will be covered in this guide.

Written By: Marygayle Martin



INTRODUCTION

The proper functioning of the operating buttons is critical for playing cassettes, pausing cassettes, recording sound, as well as fast forwarding and rewinding cassettes. All of these buttons can be replaced to restore functionality to the Sony TCM-919.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [Sony TCM-919 Cassette-Corder Operating Button](#) (1)

Step 1 — Remove Back Cover




- Turn the device around so that the back cover is facing upward. Use your thumbs to press firmly down and then push the battery door cover open.
- Remove any batteries.

Step 2 — Back Cover Screw Removal




- Remove the 5 5.95mm screws as indicated in the picture with the Phillips Head screwdriver.

Step 3 — Locate Buttons

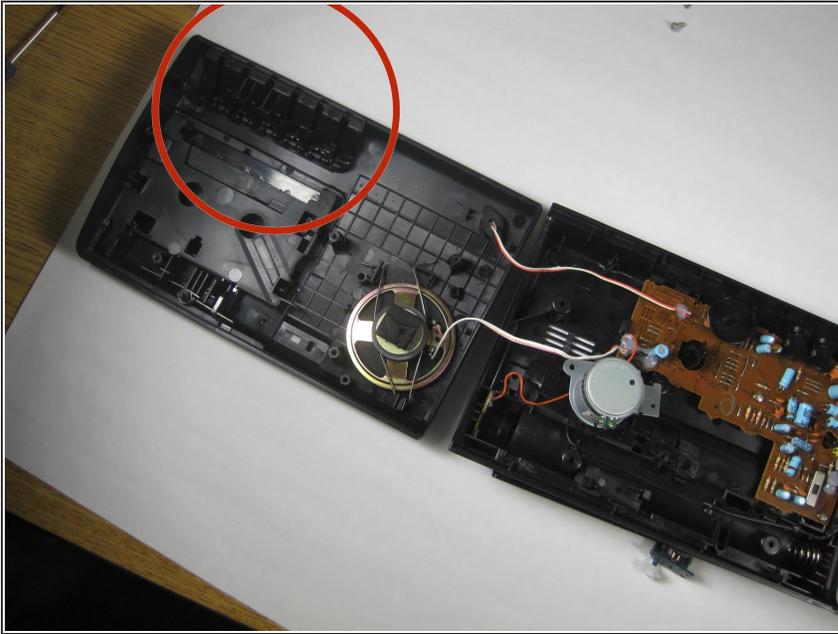

- Look to the back of the top cover and locate the broken button(s).

Step 4 — Detach Buttons

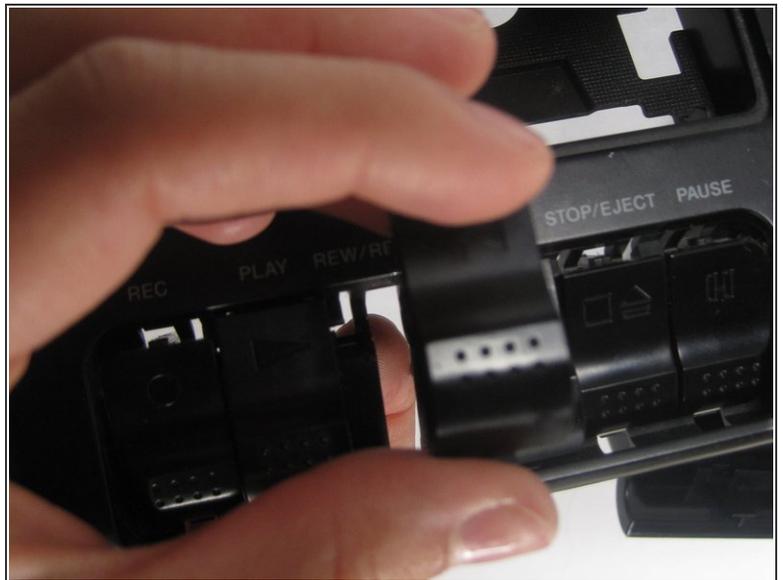

- Use a splunger tool to undo the two clips that belong to any broken buttons.
- Turn the device over and using your finger, push out the loose button.

To reassemble your device, follow these instructions in reverse order.