




# Jabra CRUISER2 Speaker Replacement

Follow this guide to remove the speaker if it is faulty or needs replacing.

Written By: Spartacus

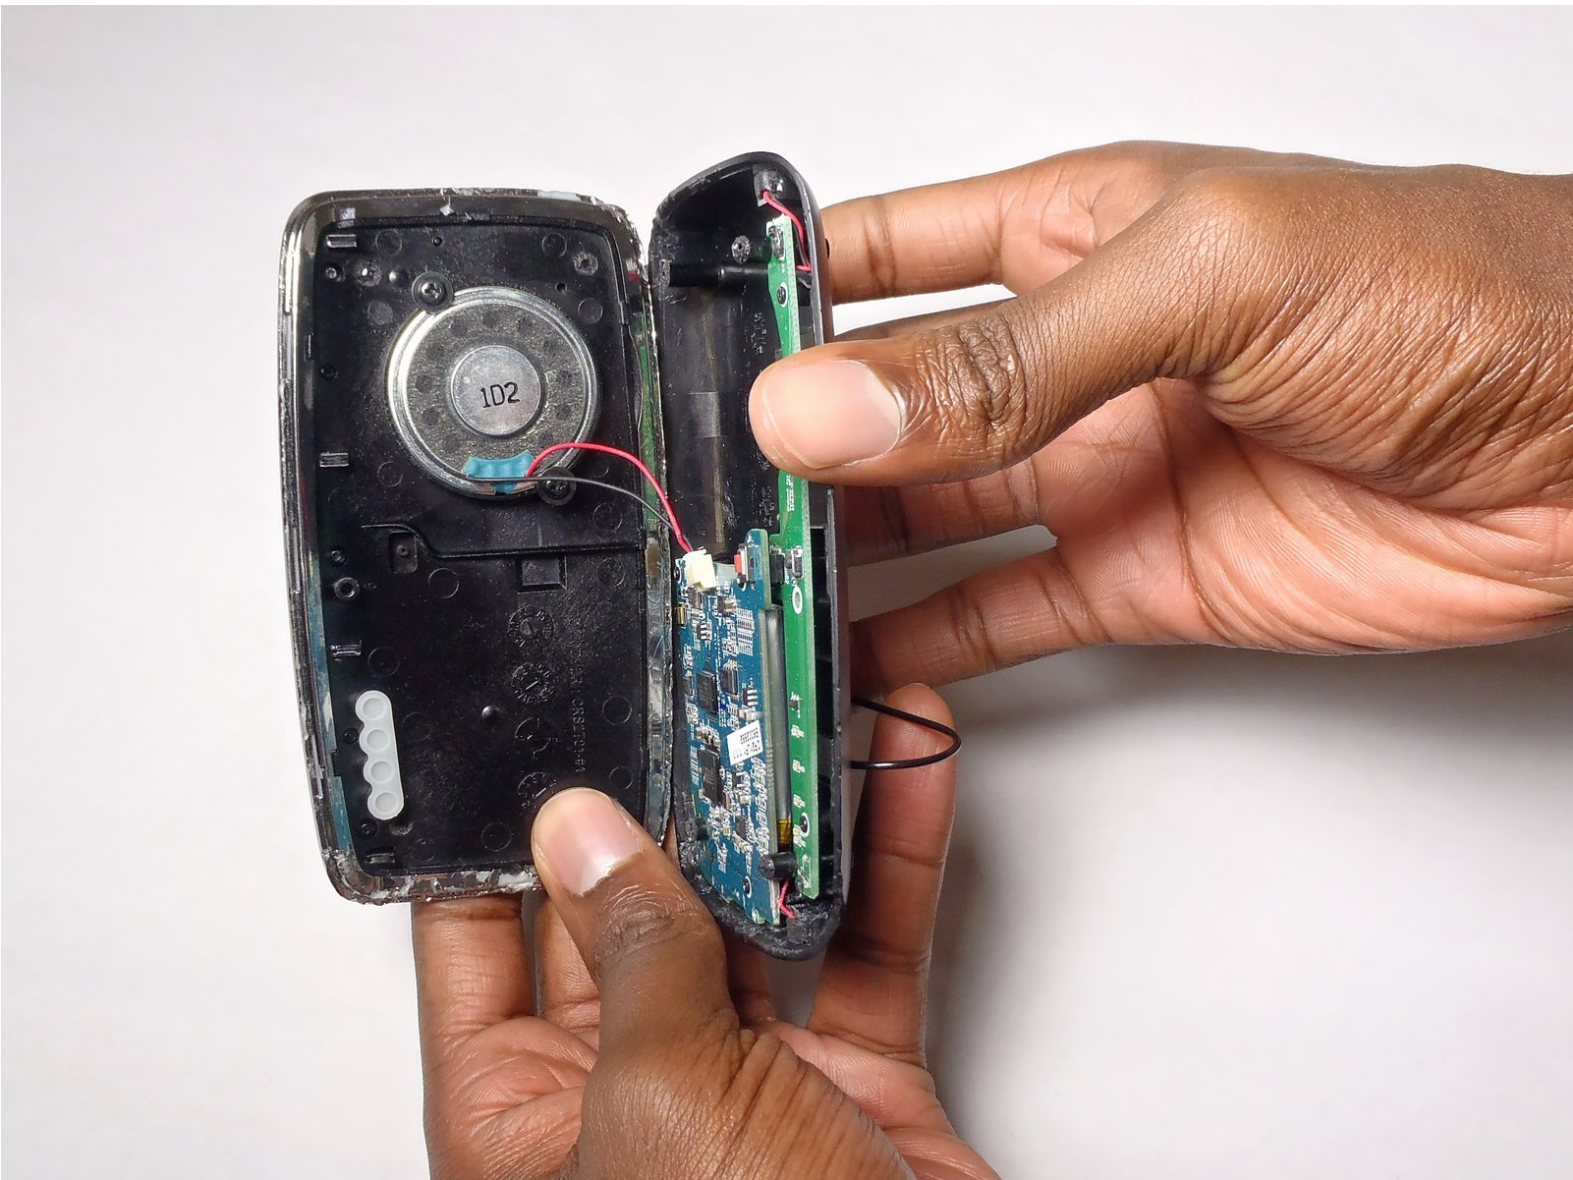

---

## INTRODUCTION

Without the speaker, the speakerphone would be useless! This guide will tell you step-by-step how to remove and replace a faulty speaker.

---

### TOOLS:

- [iOpener](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [Microwave](#) (1)
-

## Step 1 — Front Plate



- Use the iOpener tool to unglue the adhesive of the device. The link to the iOpener instructions are listed below.
- [iOpener Instructions](#)


## Step 2



- Place the flat head of the bigger plastic opening tool in between the front plate and back plate.
- Pull the tool toward the back of the device to pry it open.
- Repeat this process over all edges of the device.





### Step 3

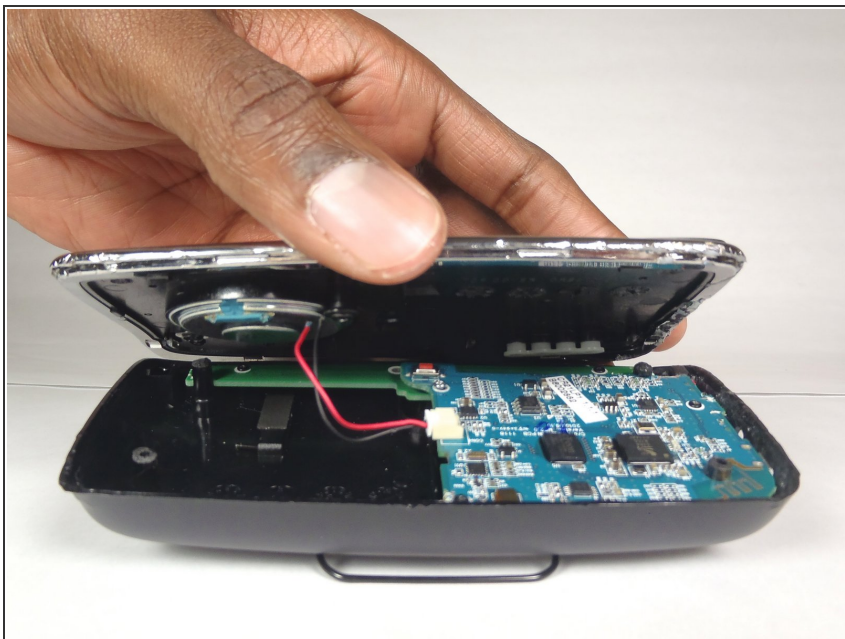


- Open up the device by pulling the front plate straight up from the back plate.

### Step 4 — Speaker

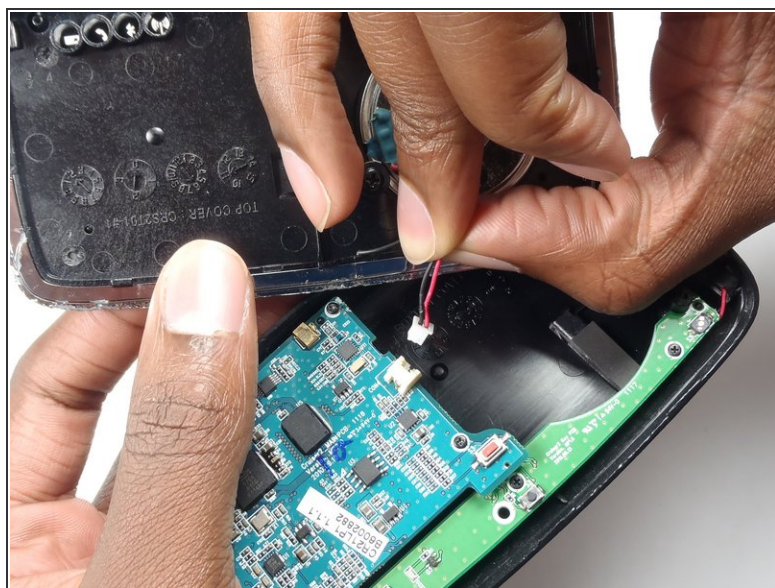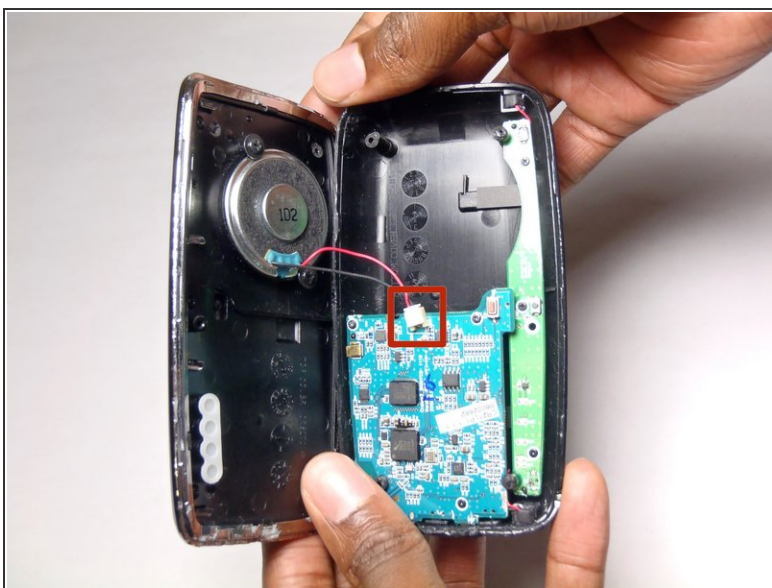

- Carefully unplug the red and black wires that run from the speaker to the motherboard by detaching the white connecting piece.

## Step 5

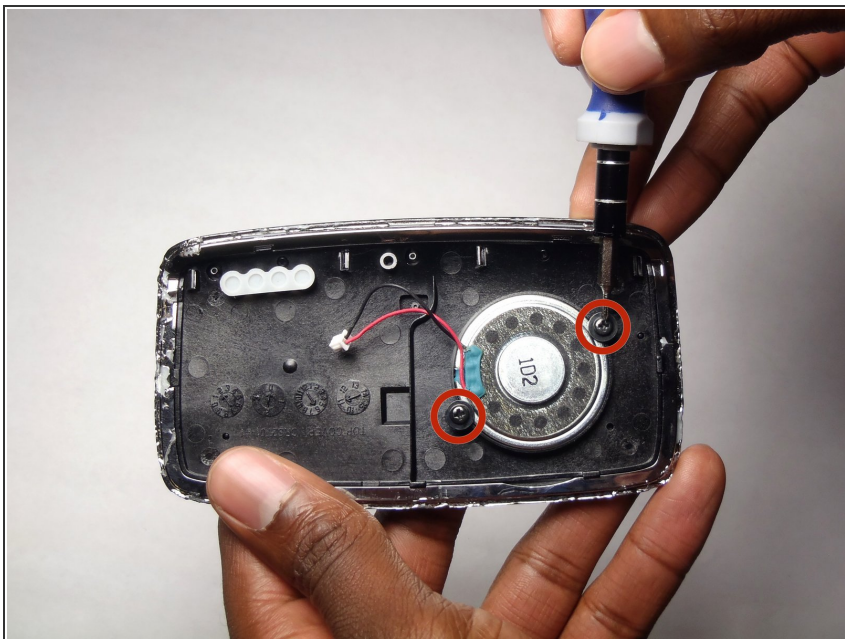



- Using the PH000, unscrew the two 5.5mm screws attaching the speaker to the front plate.
- The screwdriver sizes are located on the sides of their heads.

## Step 6



- Gently pull the black and red wires away from the back plate to remove the speaker.

## Step 7

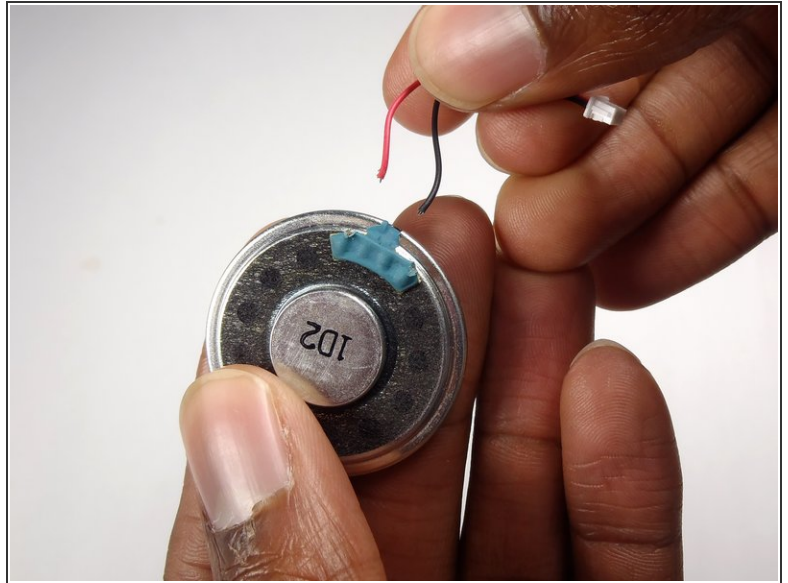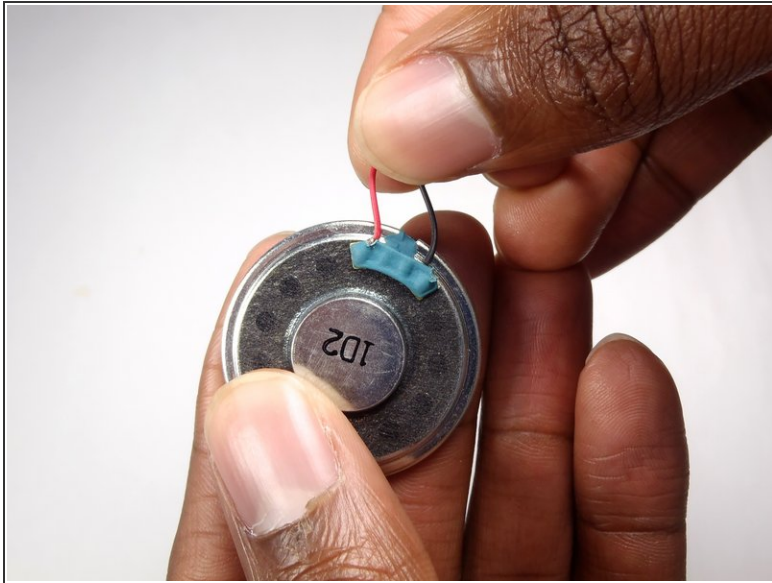

- Carefully pull the wires away from the speaker, detaching them from the adhesive, while keeping the ends intact.

To reassemble your device, follow these instructions in reverse order.