



Sony Ericsson xPeria Active Headphone Jack Replacement

This guide will walk you through the steps to replace a faulty headphone jack on your Sony Ericsson Xperia Active cellphone.

Written By: Daniel



INTRODUCTION

The headphone jack will need to be replaced if it no longer outputs audio.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Remove the back cover.



- Open the flaps and remove the back cover using the plastic opening device.

Step 2 — Remove inside plastic battery cover.



- Remove the battery shield with the plastic opening device.

Step 3 — Remove the battery



- Remove the battery.

Step 4 — Unfastening The Motherboard Cover



- Unscrew the 5mm screws with the T5 head.
- Unscrew the 6mm screw with the T6 head.

Step 5 — Removing The Motherboard Cover



- Remove the black cover with the plastic opening tool.
- Remove the headphone jack from its slot.

To reassemble your device, follow these instructions in reverse order.