


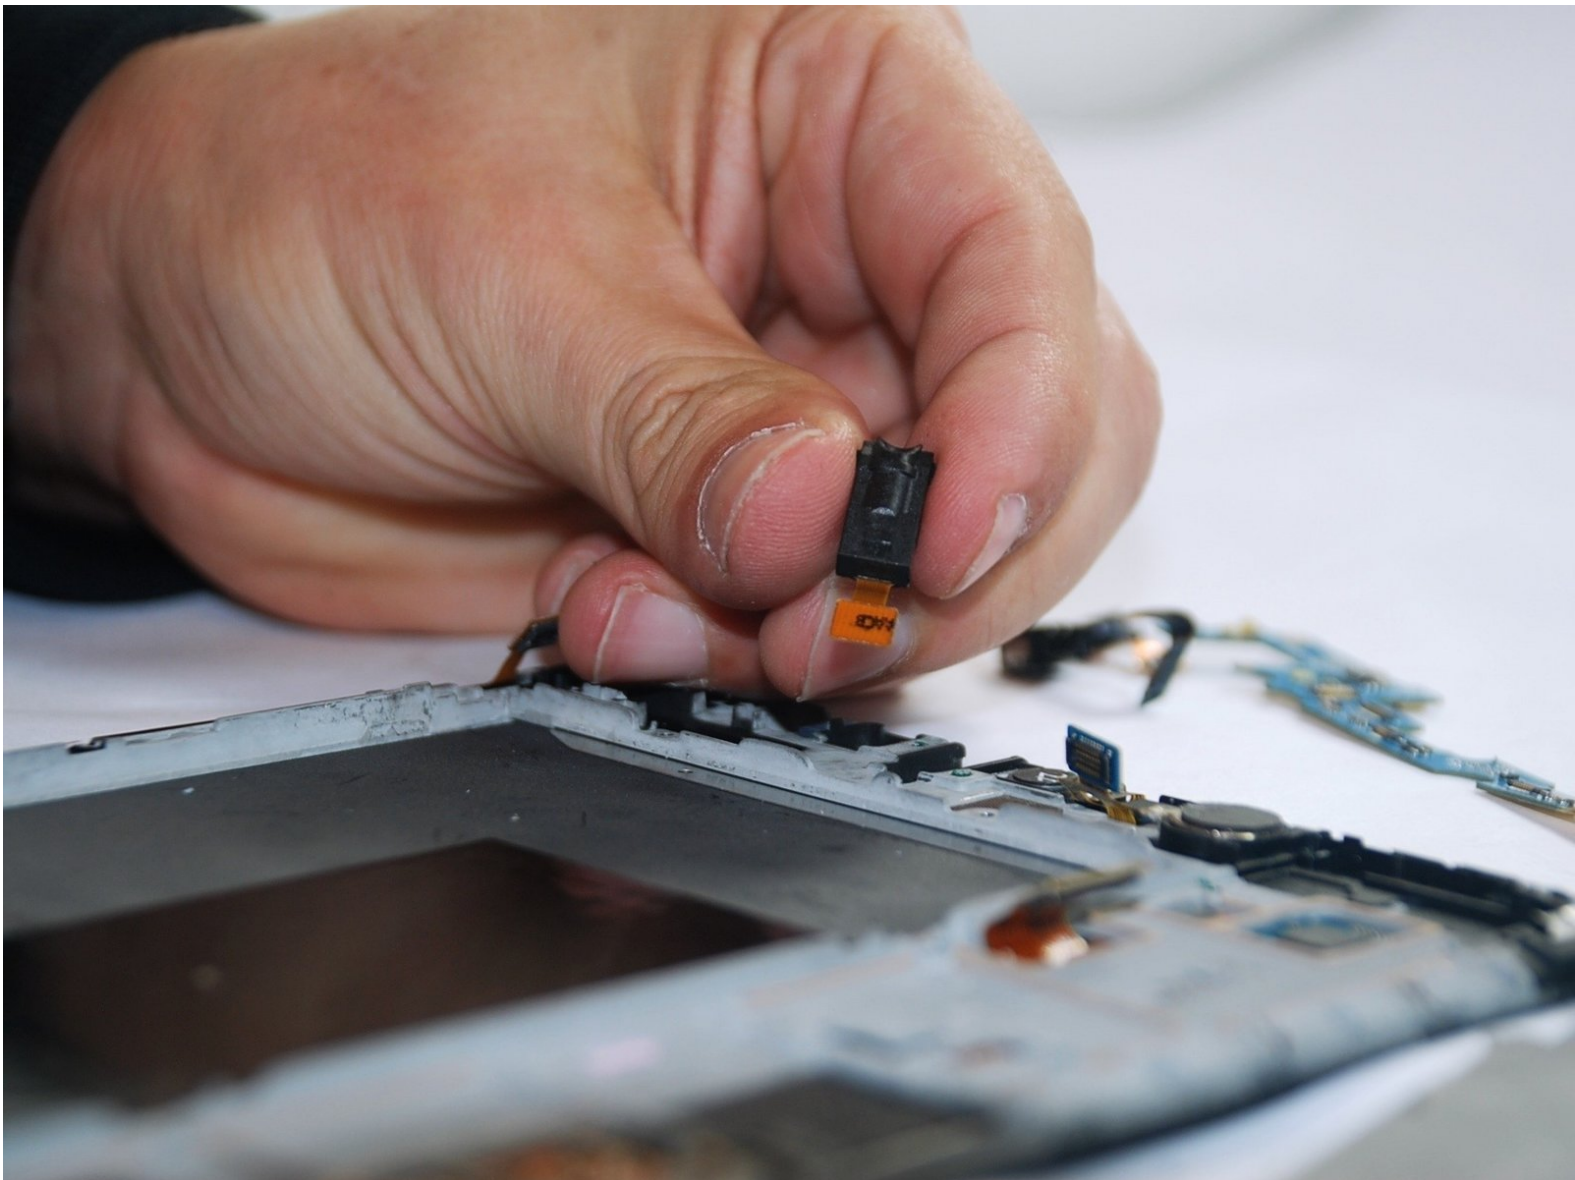

# Samsung Galaxy Tab 7.7 Headphone Jack Replacement

This guide will give you step by step instructions to replace the audio jack of your Samsung Galaxy Tab 7.7.

Written By: Stephanie Wong



This document was generated on 2020-11-22 02:39:52 AM (MST).

# INTRODUCTION

Use this guide to replace the audio jack when it either ceases to function, or is functioning incorrectly.



## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)



## PARTS:


- [Samsung Galaxy Tab 7.7 Audio Jack](#) (1)

## Step 1 — Opening the tablet



- Insert the prying tool between the glass screen and the silver binding. Pry around the screen until the screen is separated from the back of the tablet.


## Step 2 — Disconnecting the audio jack

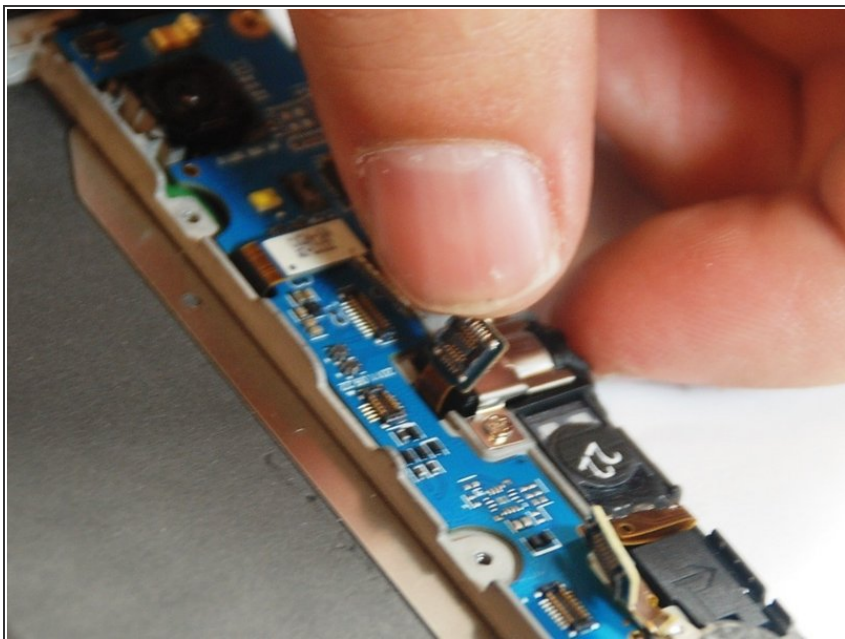

- Detach the connector that connects the audio jack to the flex cable.




### Step 3 — Unscrewing the audio jack

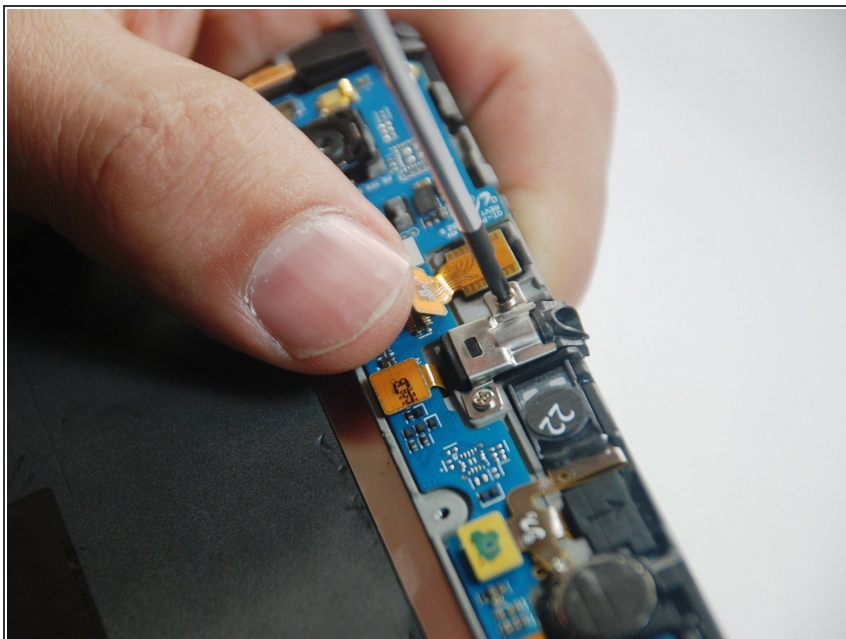

- Use the Phillips #00 screwdriver to remove the 2 screws that secure the audio jack in place.

### Step 4 — Removing the audio jack

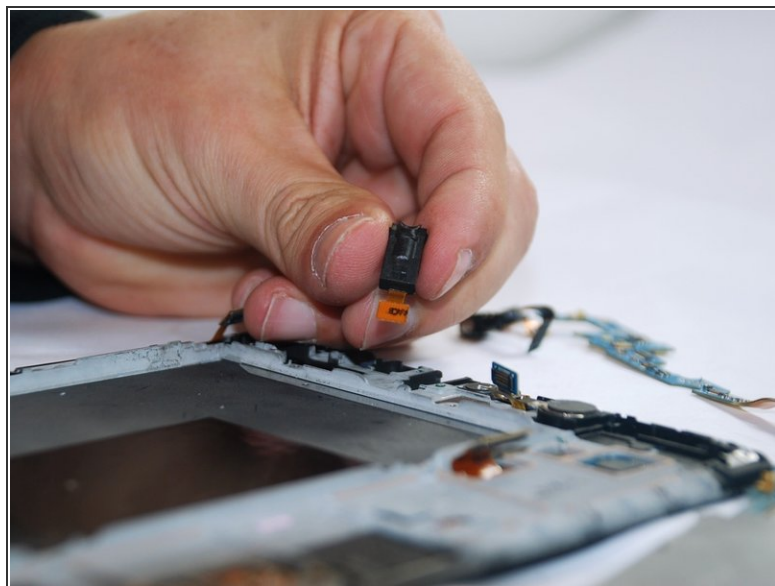

- Pick up and remove the defective audio jack.

To reassemble your device, follow these instructions in reverse order.