 




Game Boy Pocket Power Button Replacement

Use this guide to replace a Game Boy Pocket's power button.

Written By: Adriana Rahrig

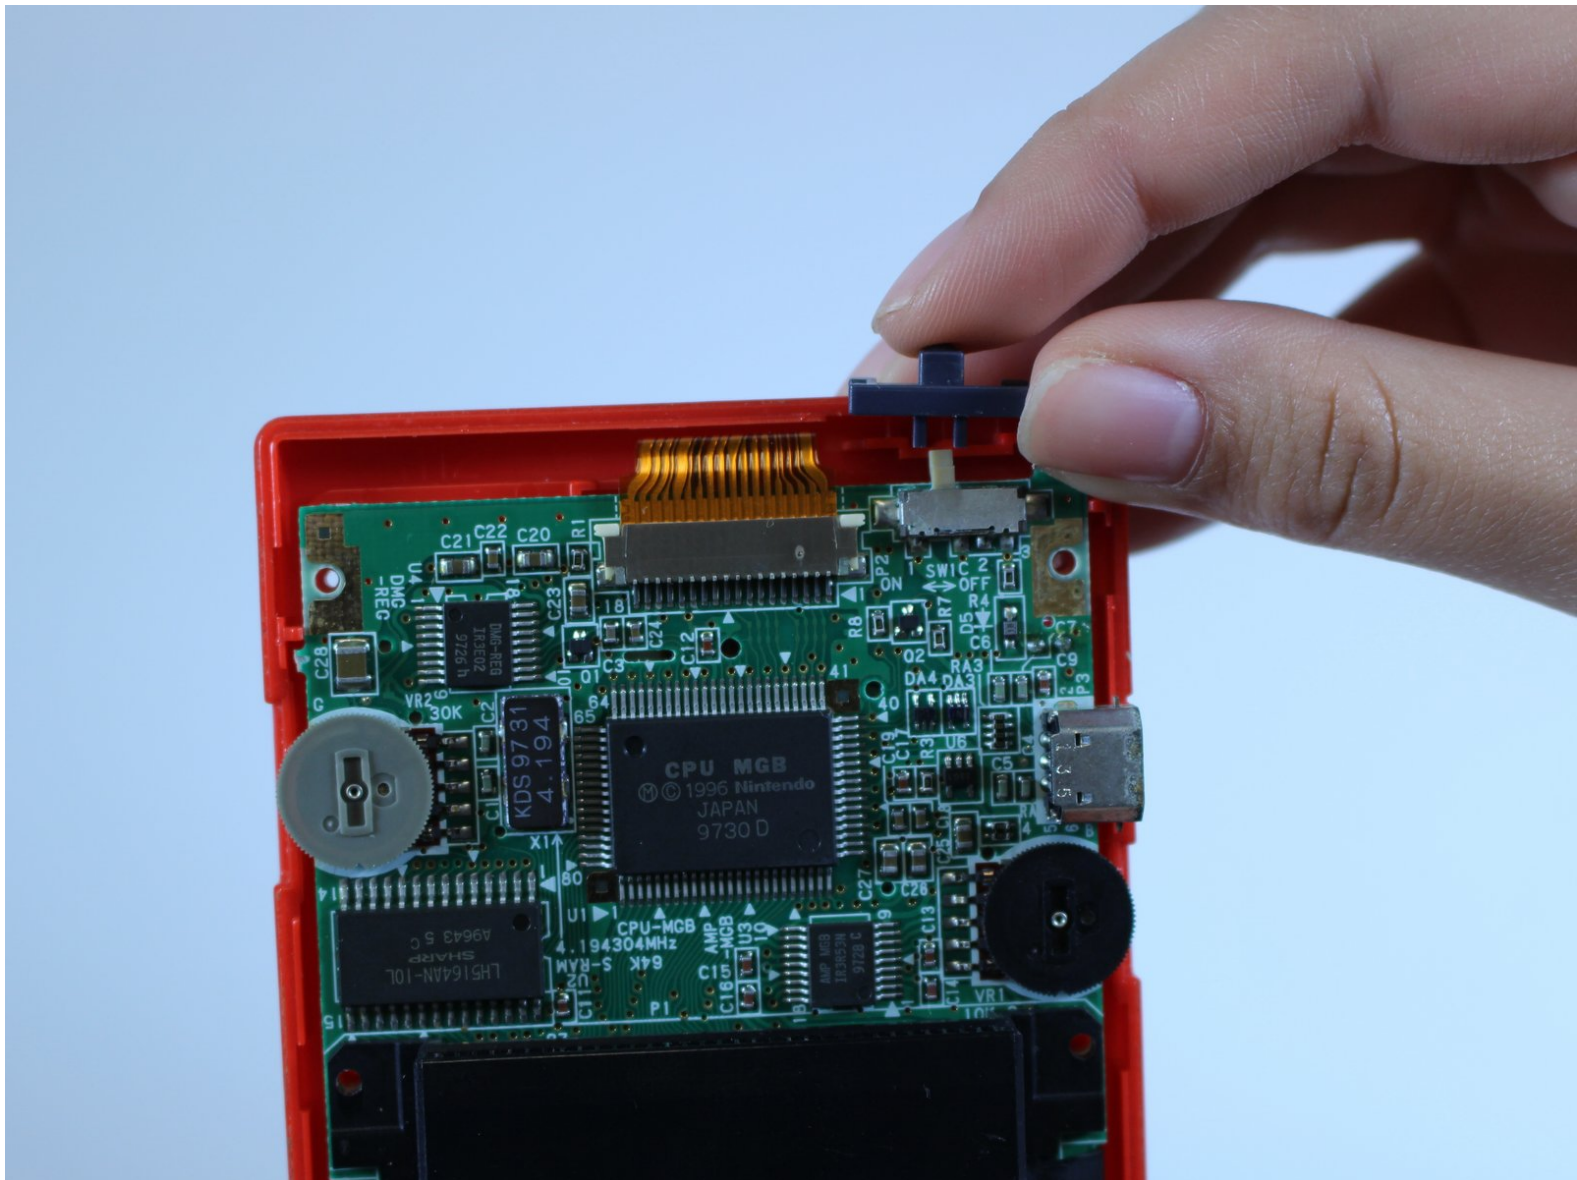

INTRODUCTION

 
If you find your Game Boy Pocket no longer turning on with ease, use this guide to replace the faulty power button. All you need is prior knowledge using a small screwdriver and a steady hand; no special skills are required!



TOOLS:


- [Y1 Tri-point Screwdriver](#) (1)
-

Step 1 — Remove the external screws

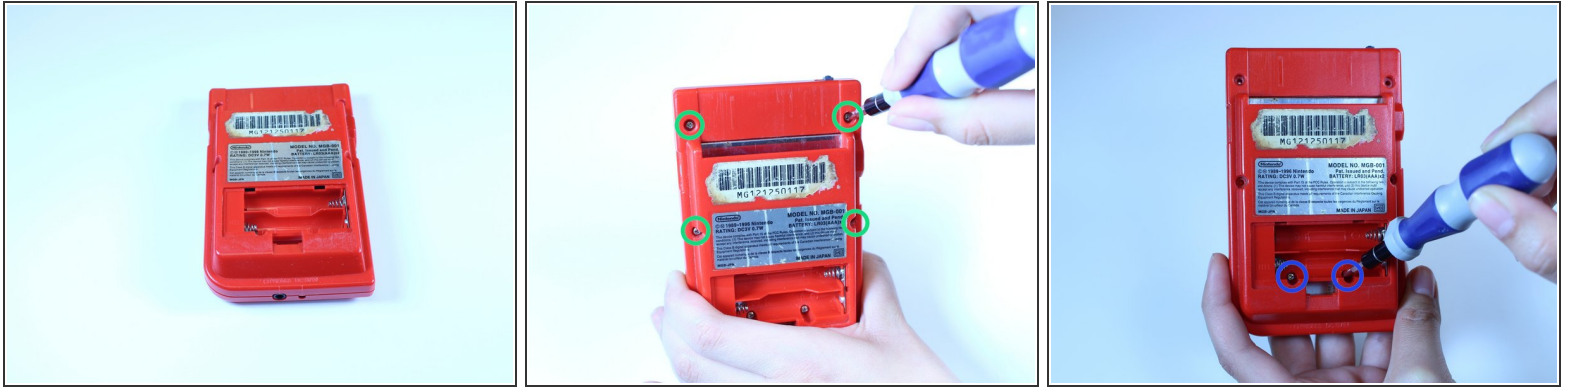


- Place the Game Boy Pocket face-down on a clean, flat surface.
- Use a Y1 tri-wing screwdriver and turn counterclockwise to remove the four external screws.
- Use a Y1 tri-wing screwdriver and turn counterclockwise to remove the two screws inside the battery compartment.

 Step 2 — Open the device

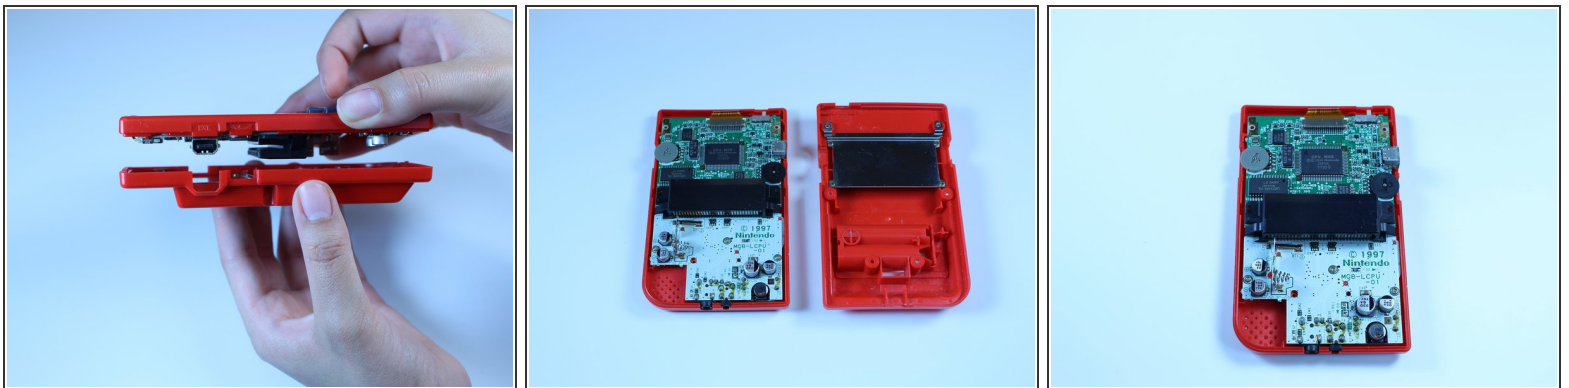

- Place your hands on the front and back covers of the Game Boy Pocket, and carefully separate the device.
- ☑ Set the back cover aside. You will need it to reassemble the device.

 Step 3 — Remove the power button

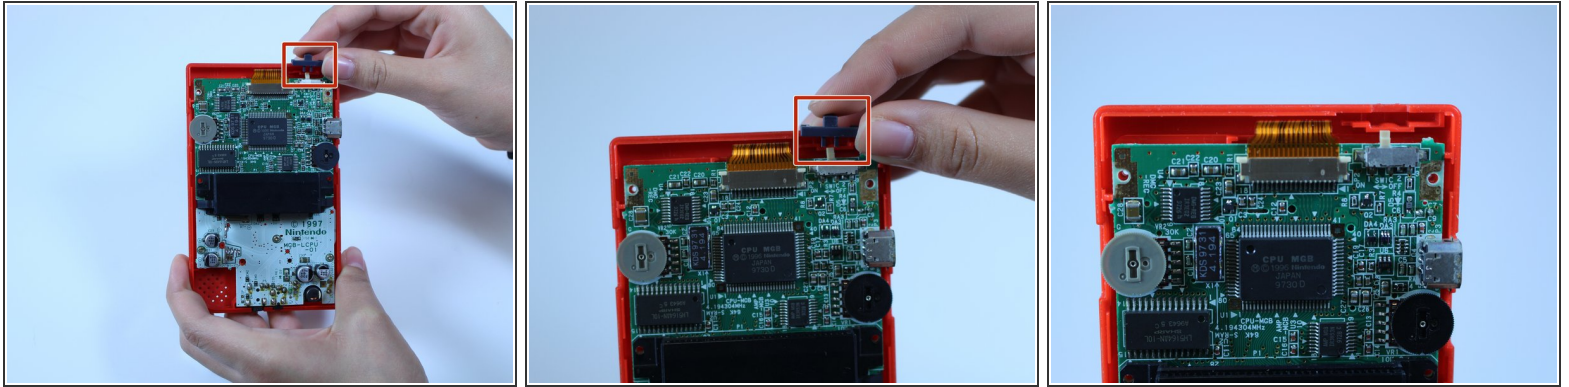

- Use your fingers to remove the grey power button to the right of the ribbon cable.

To reassemble your device, follow these instructions in reverse order.