

Motorola Droid Mini Camera Replacement

The camera or flash may stop functioning or...

Written By: Alec Fales




INTRODUCTION

The camera or flash may stop functioning or require eventual replacement. Here is a guide that offers that.



Tweezers (1) T5 Torx Screwdriver (1) iFixit Opening Tool (1)

Step 1 — Back Case

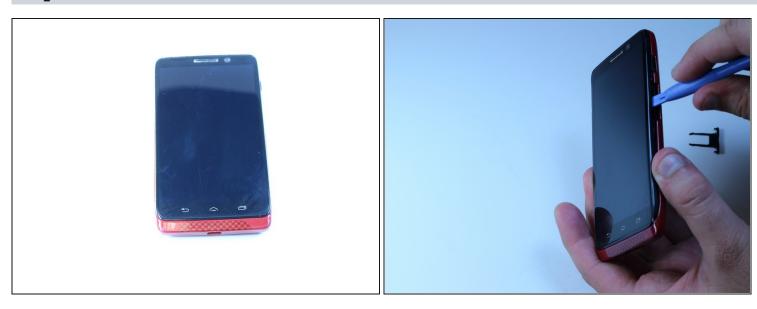

Pull out the volume keys using the iFixit opening tool.

Step 2





- Pry off the back case gently using the iFixit opening tool.
- (i) Make sure to go around the entire perimeter of the case.

Step 3 — Camera




 Use a T5 Torx screwdriver to unscrew the nine silver screws from the housing frame.

Step 4



• Carefully separate the housing frame from the motherboard.


Step 5

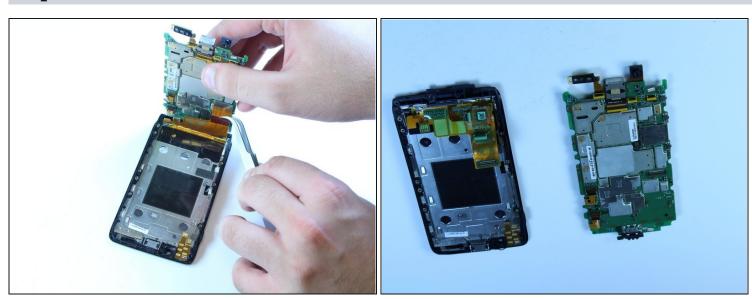

• Carefully use the <u>tweezers</u> to separate the motherboard from the screen.


Step 6



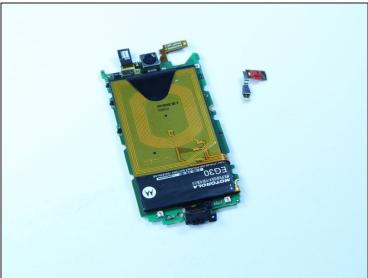

• Carefully use the tweezers to remove the flash motherboard.

Step 7

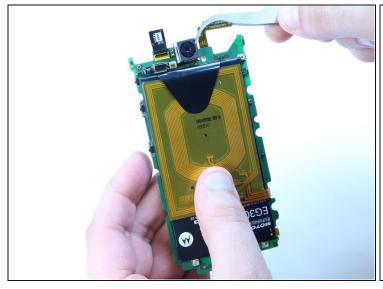



• Use tweezers to remove the camera from the motherboard.

To reassemble your device, follow these instructions in reverse order.