




# Kyocera Event Motherboard Replacement

This guide will teach you how to replace the motherboard in the Kyocera Event.

Written By: Sydney

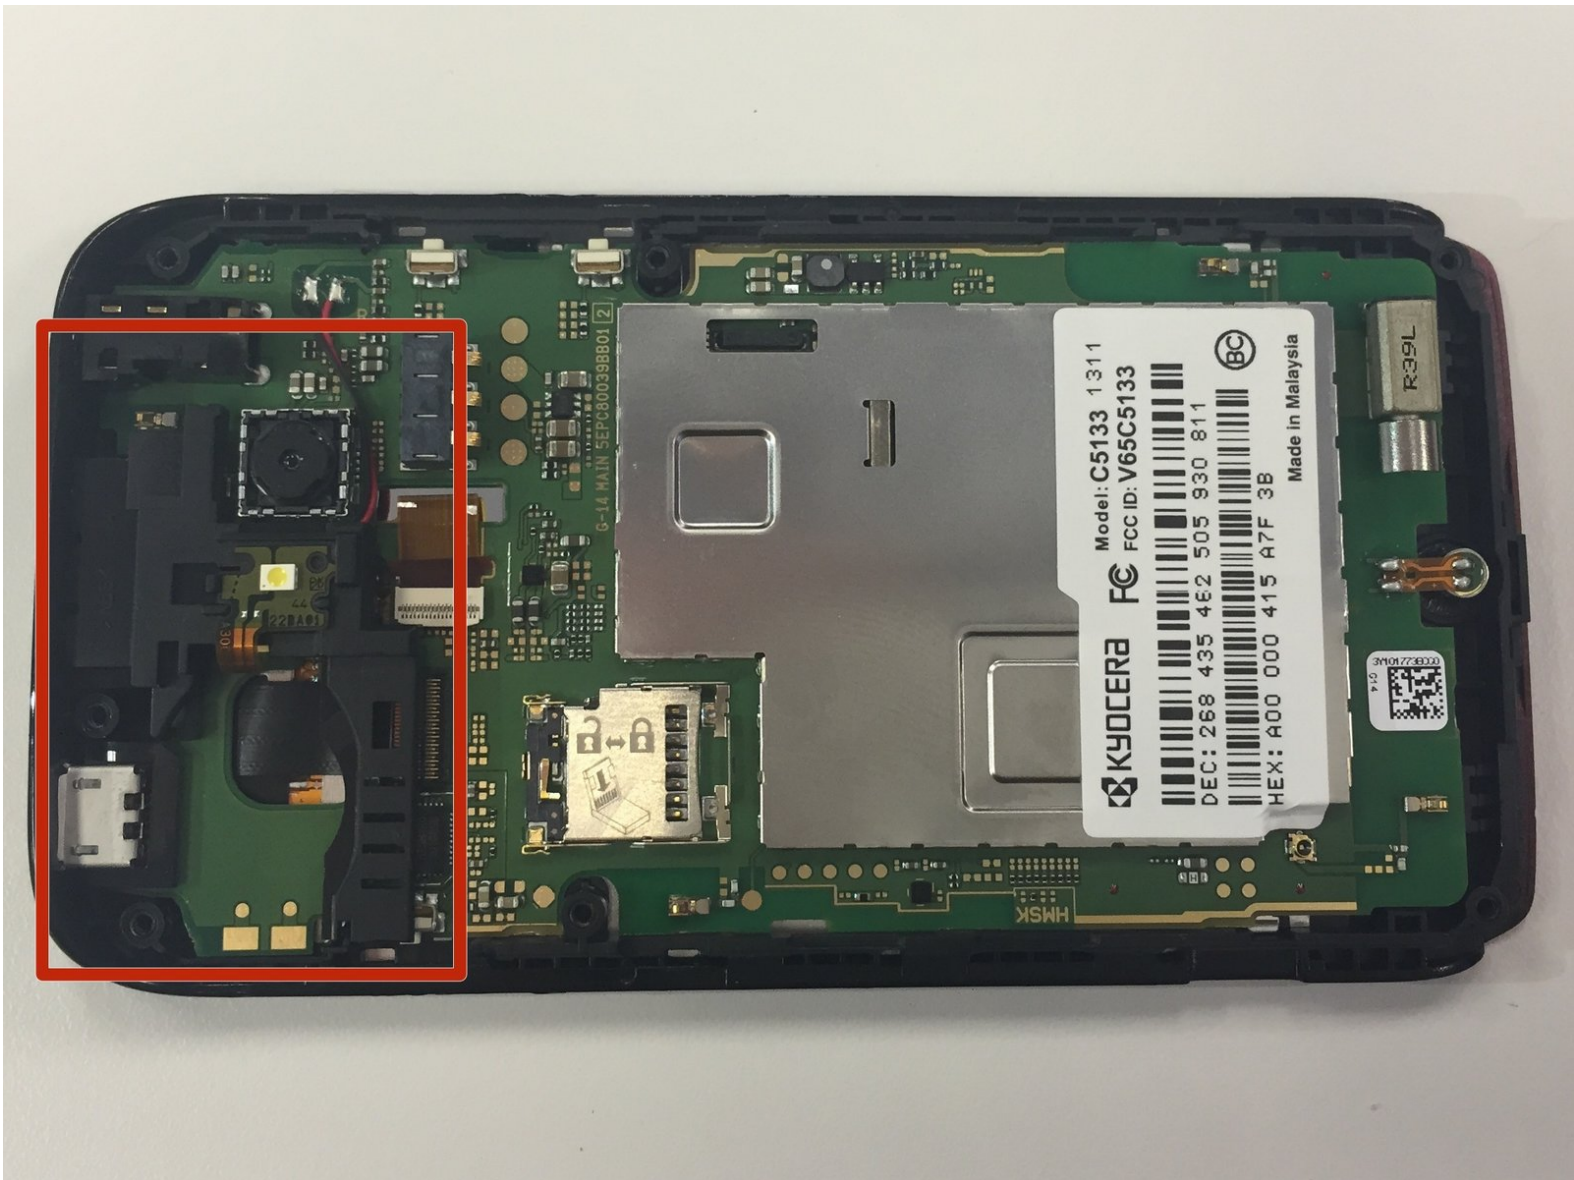



## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [64 Bit Driver Kit](#) (1)

## Step 1 — Battery



- Locate the small notch on the bottom right side of the phone.
  - To remove the cover, hook your thumb or fingernail into the slot. Then, gently lift the cover up and off.
- i** The back cover may flex slightly as you remove it. This is normal, but avoid applying excessive force.

## Step 2



- Locate the small notch below the battery. You may see a white plastic notch sticking out of this space; if so, grasp that tab to pull the battery out of its compartment. If you do not see a white plastic tab, then place your fingernail in the notch and pull upward to release the battery from its compartment.

**i** The plastic prying tool can be used to help remove the battery.



### Step 3 — Remove the screws.



- Remove seven of the 4.9mm **tri-head** screws. Keep them in a secure location.

### Step 4 — Remove the back assembly




- Pry the back assembly away from the body on all four sides of the phone.
  - Start prying at the top and work around.
  - Remove the buttons for the volume and power-this will allow for easier disassembly.
- i** The back assembly is firmly attached to the body of the phone so removing it will require some force.

## Step 5 — Motherboard



- Locate the black L-shaped cover at the top center of the phone.
- Remove the piece, including the attached ribbon, and set it aside.

## Step 6 — Disconnect Cables

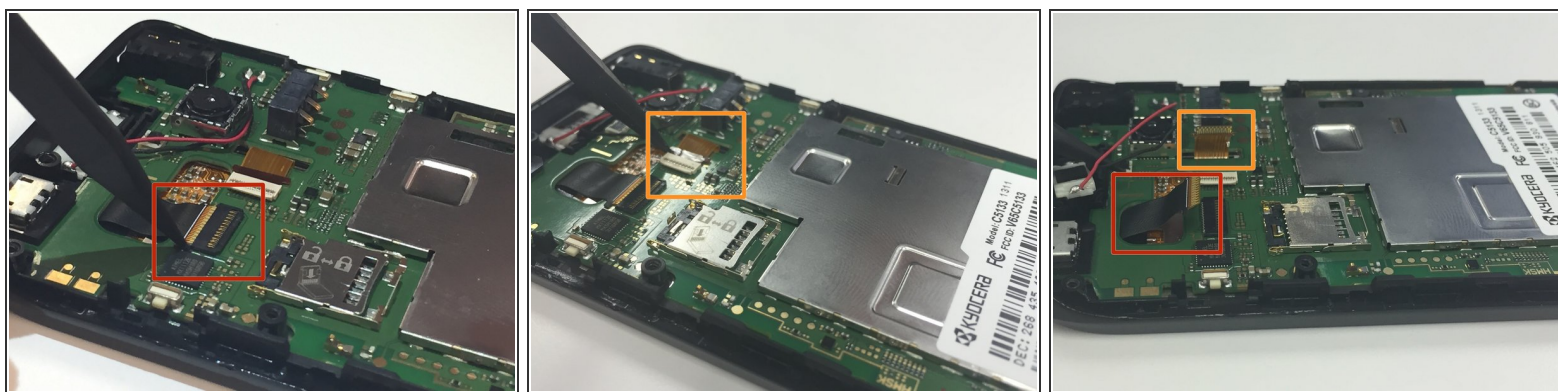

- Use a spudger to carefully disconnect the black cable.
- Use the spudger to carefully disconnect the brown cable.




## Step 7



- Locate the hook at the bottom of the phone. Use the spudger unlatch the hook connecting the motherboard to the front assembly of the phone.
- Using your fingers, gently grab the motherboard and pull.

## Step 8

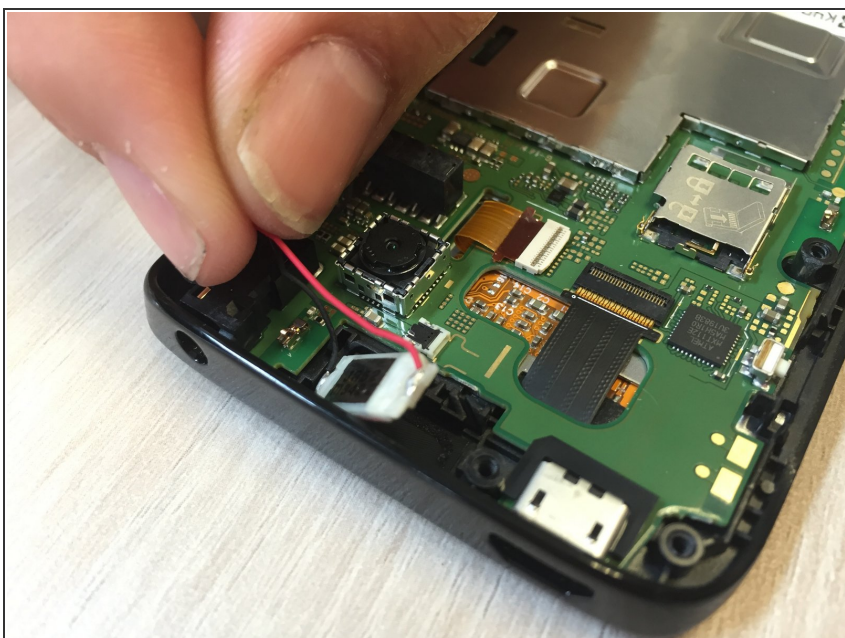

- Prior to removing the motherboard, remove the speaker from the top of the device.

## Step 9



- Using fingers, remove the motherboard from its casing.

To reassemble your device, follow these instructions in reverse order.