



# Sony SLT-A57 Flash Bulb Replacement

We will show how to take apart the camera to replace the bulb.

Written By: AJ Draper



**TOOLS:**

- [Phillips #0 Screwdriver](#) (1)

**PARTS:**

- [Replacement Flash Bulb](#) (1)

## Step 1 — Take out the battery




- Remove battery from compartment under camera.

## Step 2 — Unscrew Flash compartment



- Open the flash and unscrew the two 1.5mm screws next to the bulb on the bottom of the flash flap.

### Step 3 — Replace the bulb

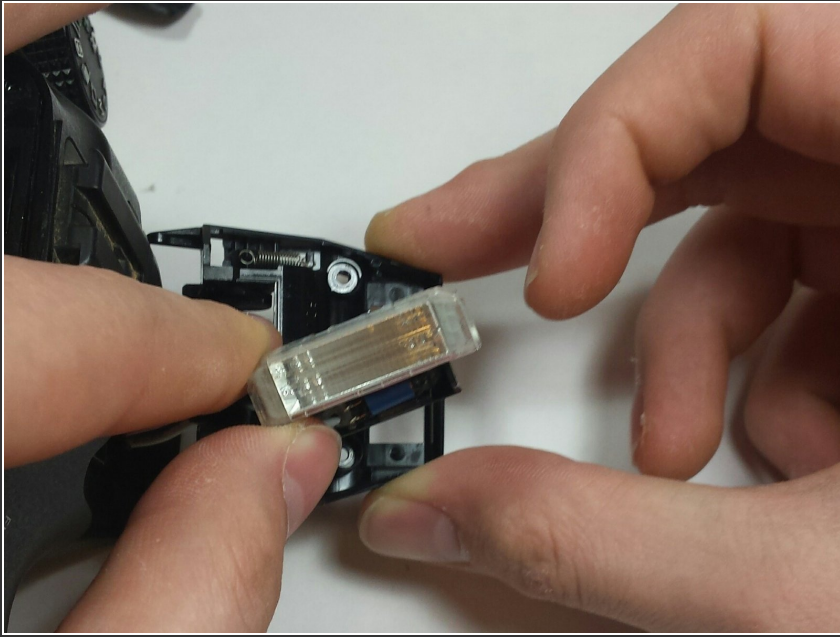

- Unplug the bulb and replace it.

To reassemble your device, follow these instructions in reverse order.