



Polaroid A10 Speakers Replacement

This guide will assist you in removing the speakers of your Polaroid A10. You will need to use this guide if you believe your speakers are malfunctioning. Before you begin this guide, ensure that the speakers are actually broken and not just disconnected.

Written By: Koby




INTRODUCTION

Use this guide to replace the speakers on your Polaroid A10.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Back Cover

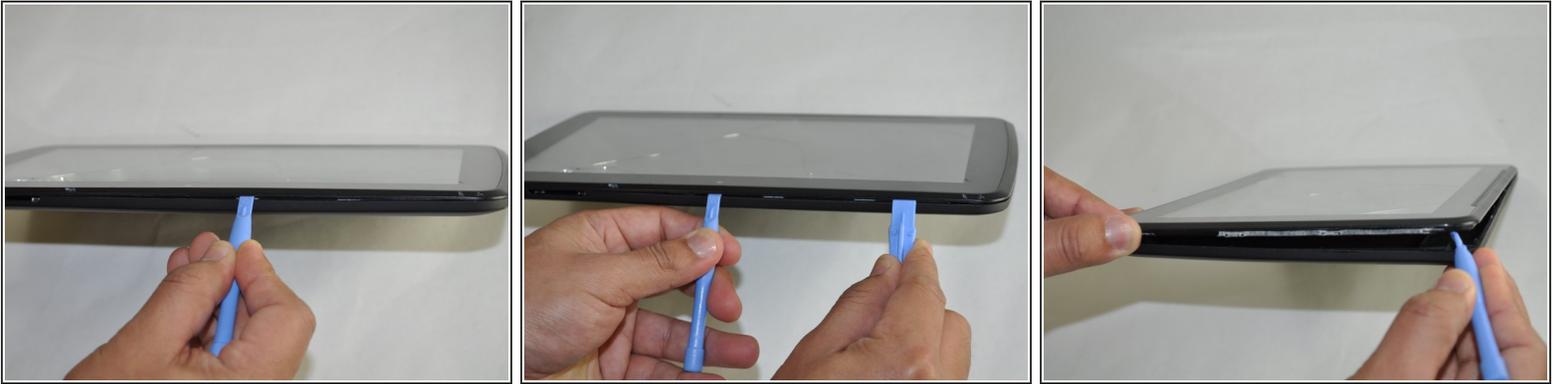


- Begin by having the side with volume and power button face up towards you.
- Insert a plastic opening tool between the display and the back cover.
- Once you have one plastic opening tool in, you can insert another one. While holding one in place, slide the other along the gap to release the tabs.

 It is easier to remove the back cover, if the display screen is faced down.


 The tabs must be released from all four sides before removing the back cover.

Step 2 — Speakers

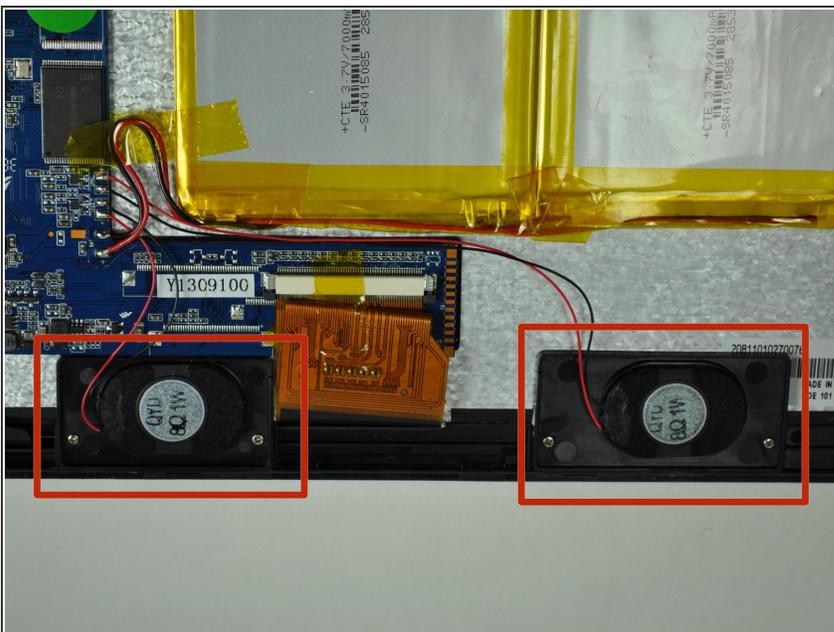


- The speakers are located on the bottom of the device, below the battery and adjacent to the motherboard.

Step 3

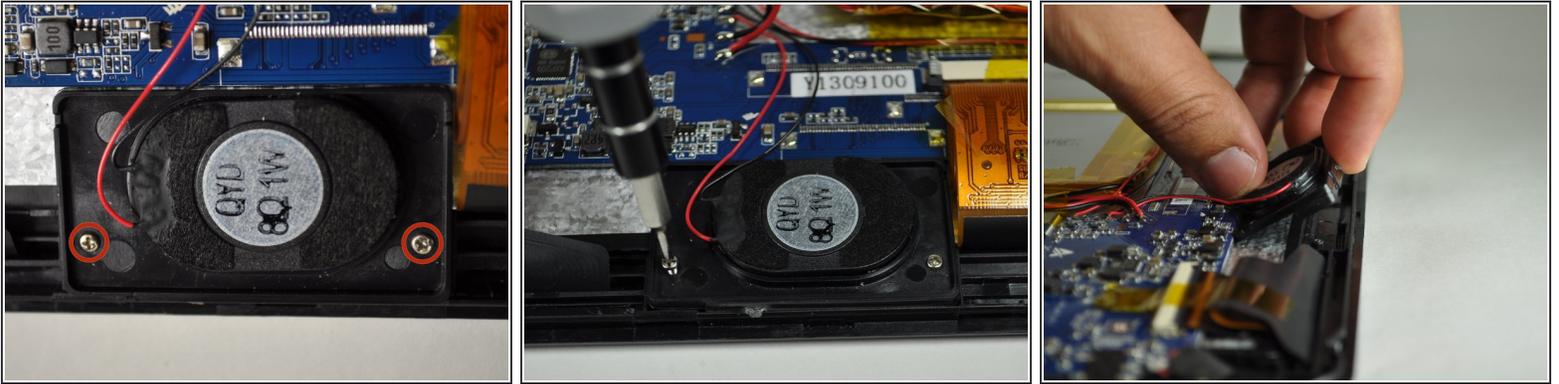

- Using the Phillips #000 screwdriver, remove the two 7 mm screws located in the picture by rotating the screw counter-clockwise.
- Carefully remove the speakers from original position without pulling out the wires.

Step 4

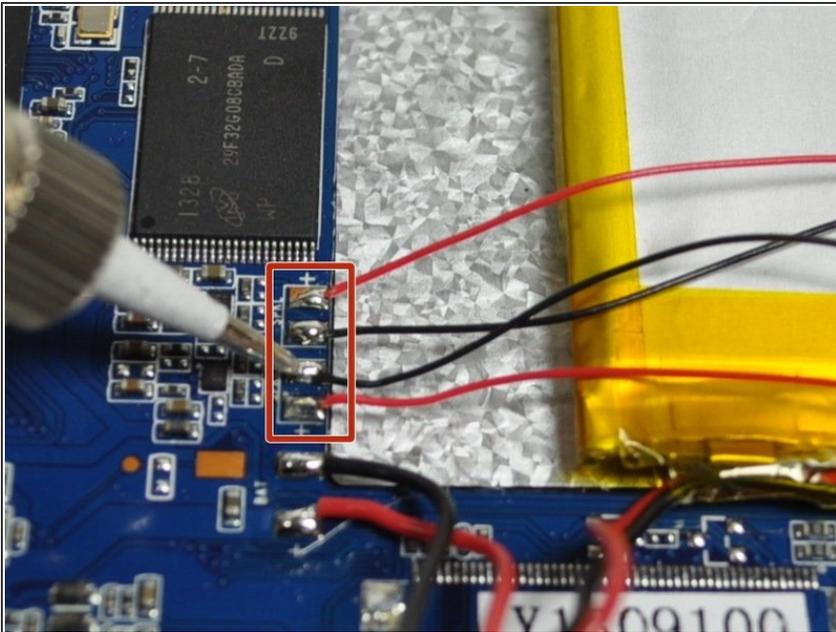

- Using the soldering tool, remove the two small black wires and two small red wires from the motherboard.
- The wire connections are located on the motherboard next to the corner of the battery closest to the motherboard.
- ⓘ Removal and installation of wires requires soldering. [Here's a helpful link to assist you with great soldering techniques.](#)

Step 5



- Gently lift the speakers up and out of the device.

To reassemble your device, follow these instructions in reverse order.