


Samsung Chromebook Series 3 Bottom Cover Replacement

A quick guide on how to take off the bottom...

Written By: Andrey Radchishin

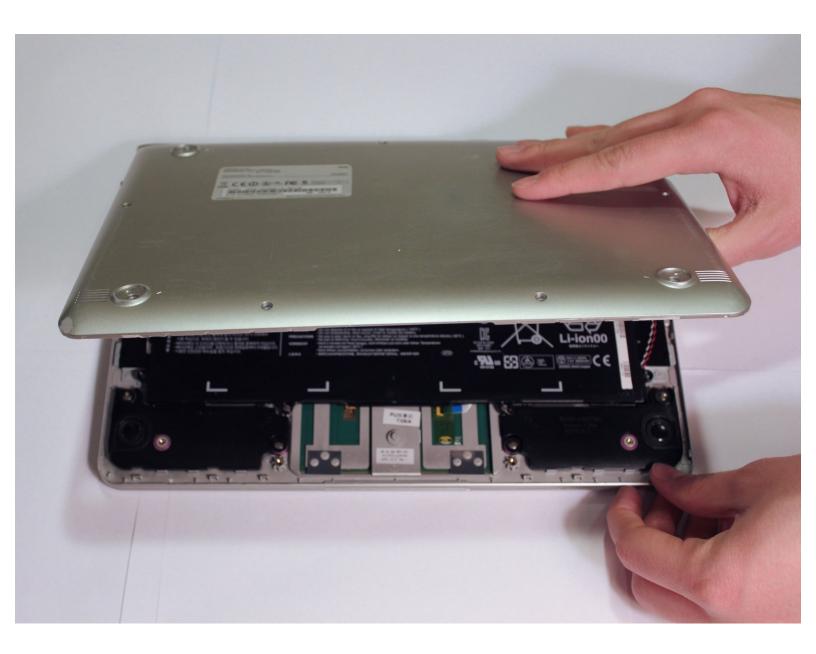

INTRODUCTION

A quick guide on how to take off the bottom cover on your Chromebook. This procedure is a prerequisite for doing most repairs to your Chromebook.



TOOLS:

- Phillips #00 Screwdriver (1)
- iFixit Opening Tool (1)



PARTS:

 Samsung Chromebook XE303C12 Bottom Cover (1)

Step 1 — Bottom Cover







- Lay the Chromebook down so that the bottom cover is facing up.
- Remove the rubber feet on the four corners of the Chromebook in order to get to the screws underneath. They are stuck on with an adhesive.

Step 2







Remove the nine 4.7 mm screws on the bottom cover using a Phillips #00 screwdriver.

Step 3







- Pry up the plastic strip on the back of the Chromebook using a plastic opening tool.
- (i) It is not necessary to remove it completely. It just needs to be separated from the bottom cover.

Step 4







Pry off the bottom cover using a plastic opening tool.

To reassemble your device, follow these instructions in reverse order.