


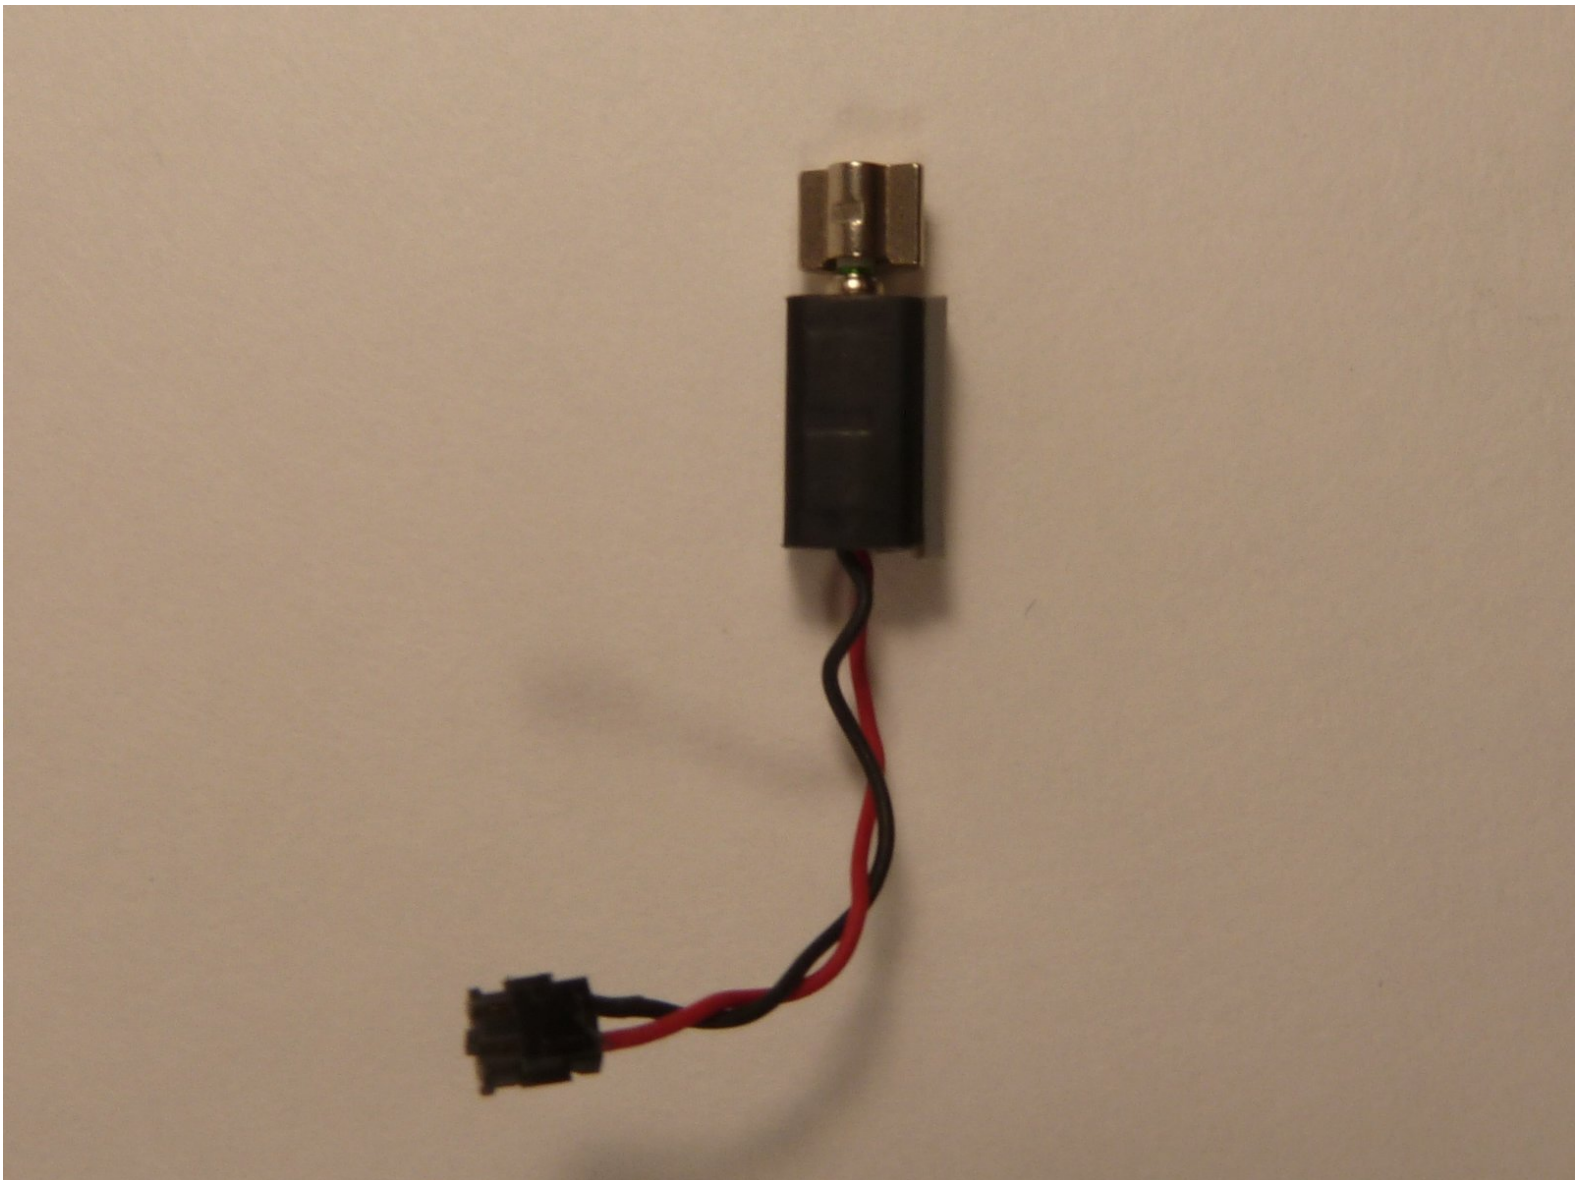

HTC One V Vibrator Replacement

Follow these steps to replace the vibrator on your HTC One V.

Written By: Michael Lucido



INTRODUCTION


If phone will not vibrate, vibrates slightly or vibrates sometimes, a faulty vibrator could be the issue.



TOOLS:

- [Jimmy](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Disassembling HTC ONE V Bottom Assembly

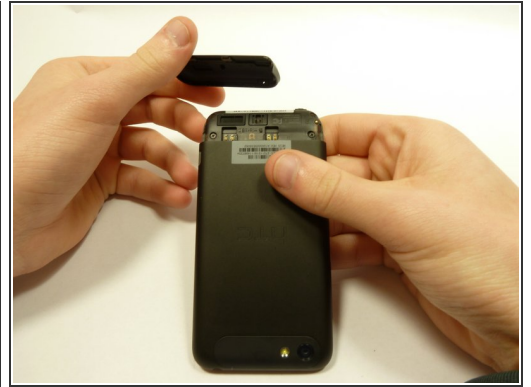



- Power off your device.
- Remove the bottom cover by sliding it off.

Step 2




- Remove the SIM card.
- Remove the four screws securing the bottom casing.
 - Two 3.0 mm Phillips #0 screws in the top left and right corners.
 - Two 2.0 mm Phillips #0 screws in the bottom left and right corners.

Step 3

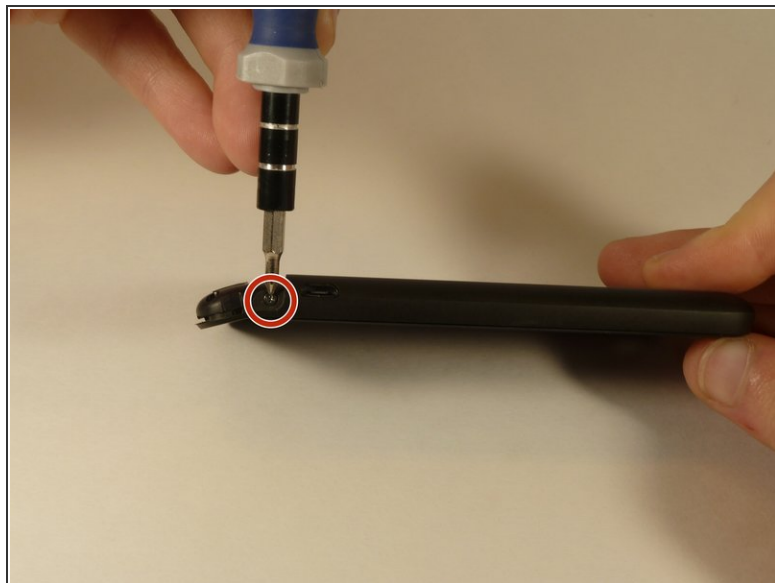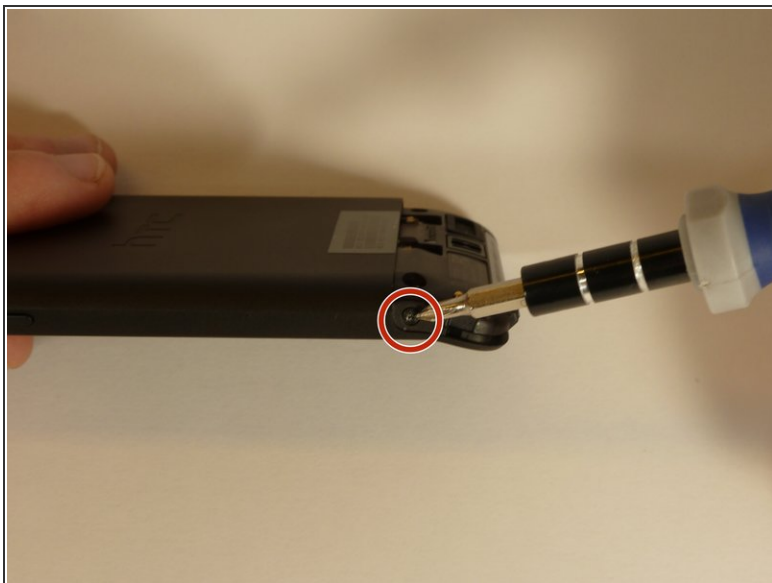


- Remove the 2.0 mm Phillips #0 screws on either side of the phone.

Step 4

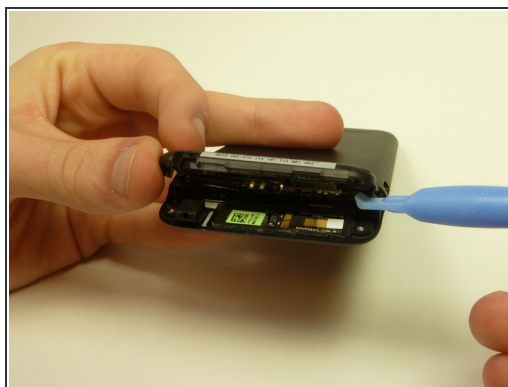

- Use a plastic opening tool to pry open the bottom casing.
- Remove the bottom casing by pulling it towards you.

Step 5 — Disassembling HTC One V Back Case

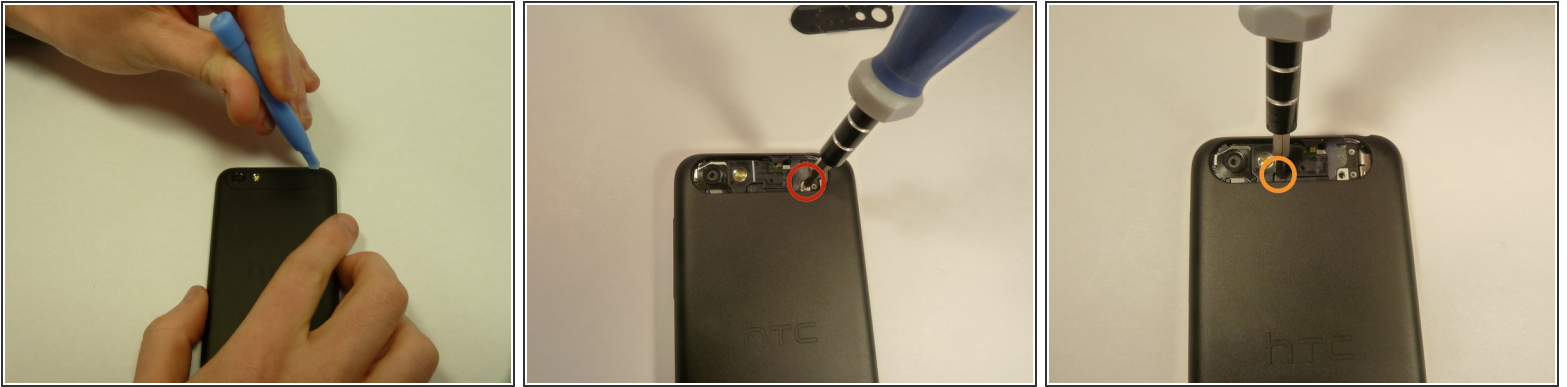

- Use the plastic opening tool to pry open the rear camera panel.
- Remove both screws that are securing the back case.
 - One 4.0 mm Phillips #0 screw.
 - One 3.0 mm Phillips #0 screw.

Step 6



- Use a Jimmy to pry up the OEM SIM and SD card reader contact.
 - ⚠️ Pry from right to left to avoid potential damages to the ribbon.

Step 7




- Using both thumbs, gently push on the two bottom rear corners of the motherboard.
- Gently and slowly pull the screen out from the front of the phone, while feeding the OEM reader contact through the opening.

Step 8 — Battery






- Pry up the battery with the flat end of the spudger.

Step 9

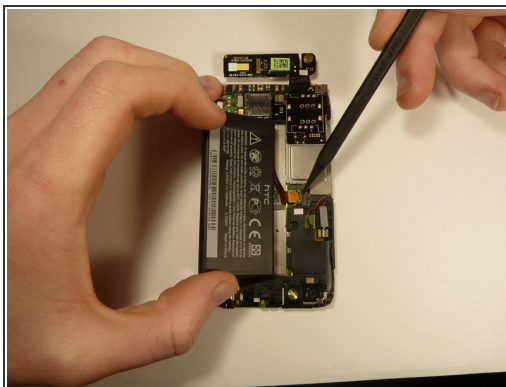

- Gently lift up the battery away from the edge of its housing.
- Use the point end of the spudger to push the connection out of its housing.

Step 10 — Camera Lens

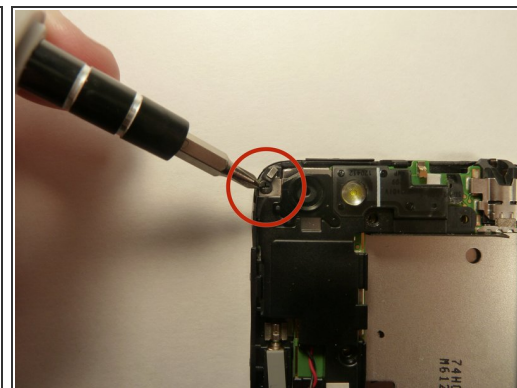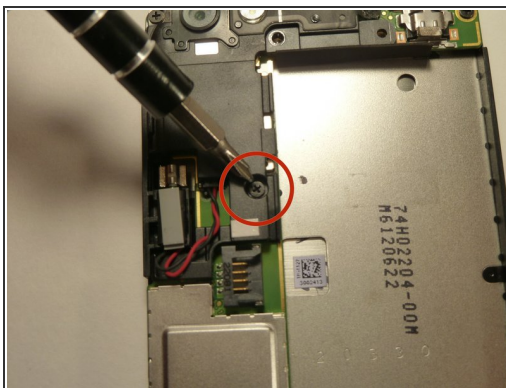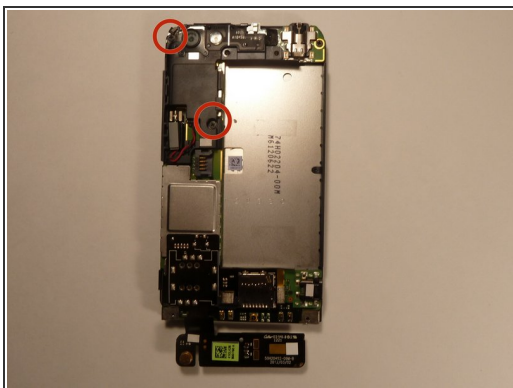



- Remove the two 3.0 mm Phillips #0 screws, that are securing the camera lens.

Step 11



- Pry off the camera lens using a plastic opening tool.

Step 12 — Vibrator

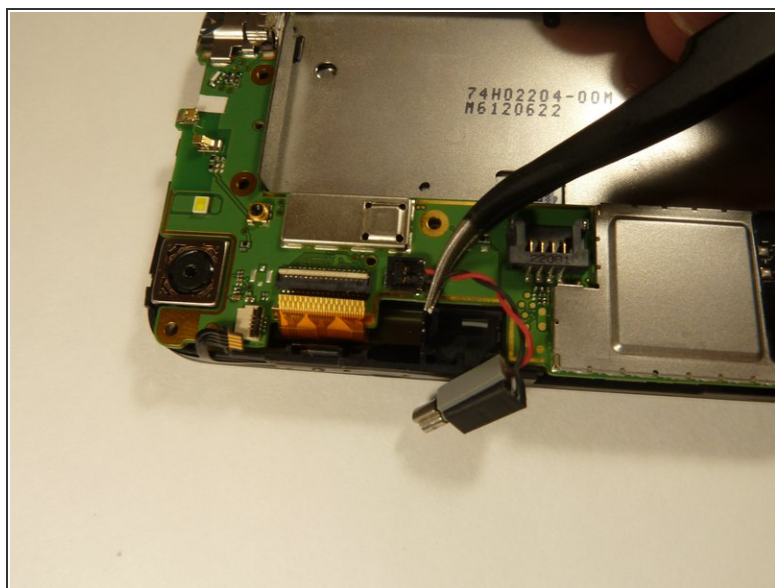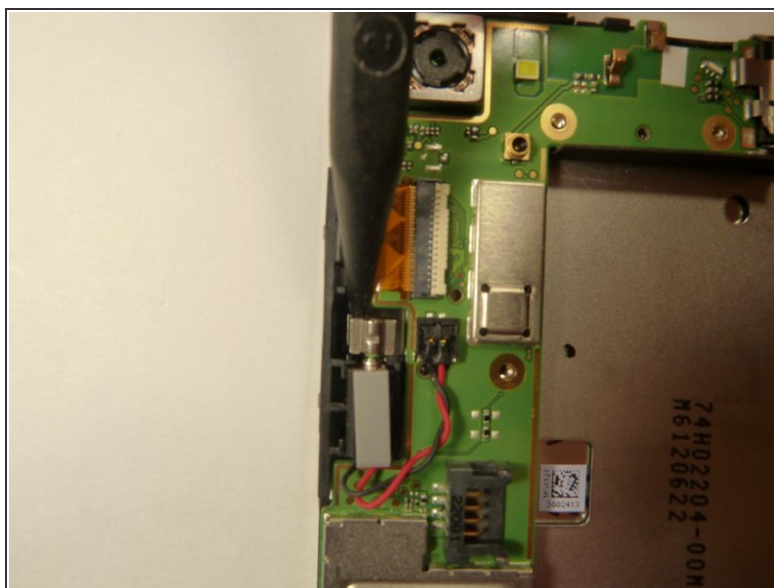

- Pry the vibrator out of the housing with a spudger.
- Using the tweezers, pull up on the connecting wires detaching the vibrator from the motherboard.

To reassemble your device, follow these instructions in reverse order.