



Nokia 2610 Front Pannel Replacement

Written By: Andrew Wood



INTRODUCTION

This guide shows you how to replace a front panel for the phone.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery and Sim Card



- Place your thumb on the middle of the back cover and push it toward the bottom of the phone to slide the cover off.

Step 2



- Use a plastic opening tool (or your finger) to gently pry the battery out of the battery slot on the back of the phone.

Step 3



- Lift the metal sim card holder (at the bottom of the battery slot) up and carefully pry the sim card out of its slot with a plastic opening tool or your finger.
- After removal, lower the metal sim card holder into its original position.

Step 4 — Front Panel



- Insert the plastic opening tool into the crack between the front and back panels.
- Gently pry the front cover away from the back cover while sliding the plastic opening tool towards the top of the phone.

Step 5



- Lift the bottom of the front cover away from the phone.
 - Continue lifting until the top of the front cover is fully removed from the phone.
- i** Note: To replace the Keypad, gently lift it out of the front cover. It is located below the clear viewing window.

To reassemble your device, follow these instructions in reverse order.