



Dell Venue 8 Battery Replacement

Dell Venue 8 battery removal, and replacement.

Written By: Andrea



INTRODUCTION

Your battery in your tablet may not be working. We will be replacing the battery of the Dell Venue 8.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)



PARTS:

- [Dell Venue 8 battery](#) (1)

Step 1 — Rear Case/Midframe




- Hold the device with the screen facing up. Gently wedge your plastic opening tool into the crease, and run it along the perimeter of the case
- ⓘ You will hear *click* sounds as the clips unhinge
- Remove the back panel of the device.

Step 2




- Remove the 14 screws with the T-5 Torx screwdriver. (11 black 3.6mm screws, and three 4.45mm screws)
- ⓘ The silver screws are marked with an "S" or a sticker [S1.6(Silver)] See the corrected image
 - 4.45mm Silver screws
 - 3.6mm Black screws
- Gently snap the perimeter clips open, and remove the internal plastic case.

Step 3 — Battery

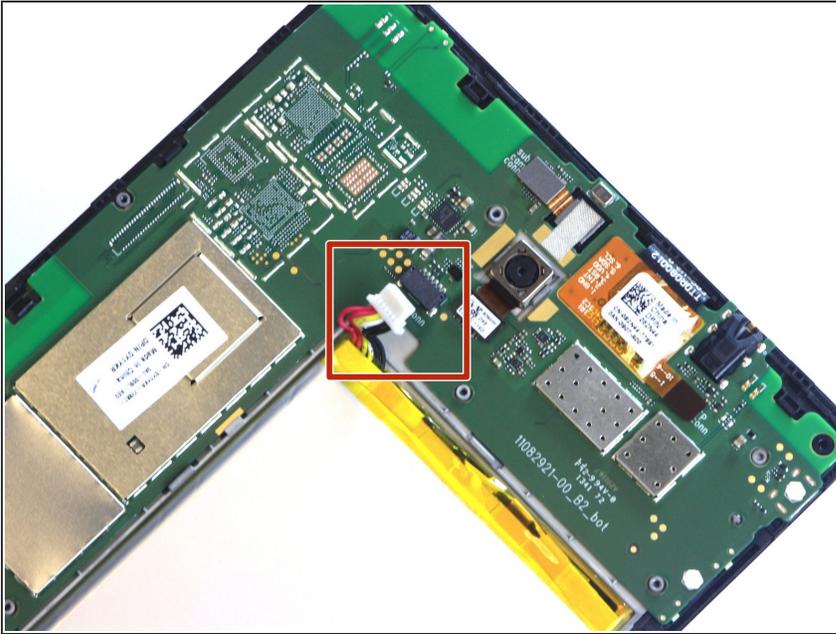

- Unclip the power clip from the motherboard by pulling down gently towards the bottom of the tablet.

Step 4

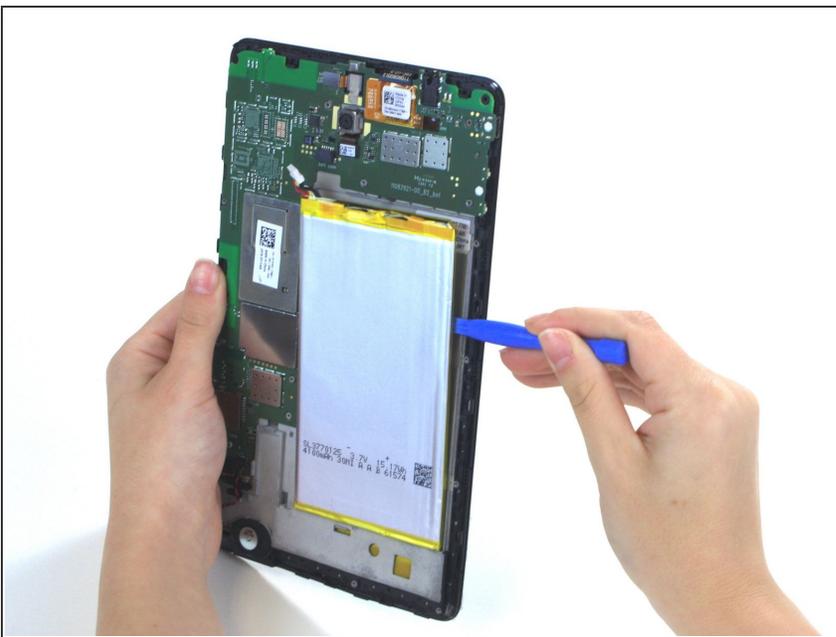

- Gently pry the battery away from the device with the plastic opening tool to remove it.
- ⓘ The battery is held on to the tablet by a light adhesive

To reassemble your device, follow these instructions in reverse order.