

Samsung DV300F Front and Rear Casing Replacement

This guide will serve as replacement guide for the Front and Rear Casing for the Samsung DV300F.

Written By: Timothy Gordon



This document was generated on 2020-11-28 04:23:57 AM (MST).

INTRODUCTION

This guide will show you how to remove the casing around the device so that it and the parts underneath it can be replaced.



TOOLS:

Phillips #0 Screwdriver (1)

Step 1 — Front and Rear Casing







- Remove the two black 4.2 mm screws on the right side of the camera using a Phillips #0 screwdriver.
- Remove the two black 4.2 mm screws on the left side of the camera using a Phillips #0 screwdriver.
- Remove the two black 4.2 mm screws on the bottom of the camera using a Phillips #0 screwdriver.

Step 2





Remove the back case of the camera carefully.

Step 3







Guide ID: 40069 - Draft: 2020-10-23

- Remove the front case of the camera.
- Remove the front LCD screen from the front case next to the lens.

To reassemble your device, follow these instructions in reverse order.