



# Disassembling Compaq Mini 110 Wireless Module

Wireless module in your way? Move it out!

Written By: alea



---

# INTRODUCTION

Wireless module in your way? Move it out!



## TOOLS:


- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Locate the battery and the battery tabs on the bottom of the Compaq Mini.



## Step 2

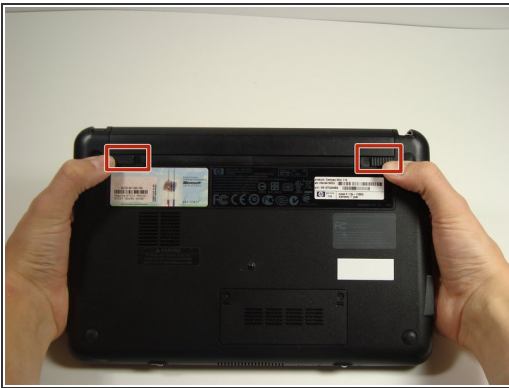

- Push both tabs inward simultaneously and slide the battery out.




## Step 3 — RAM

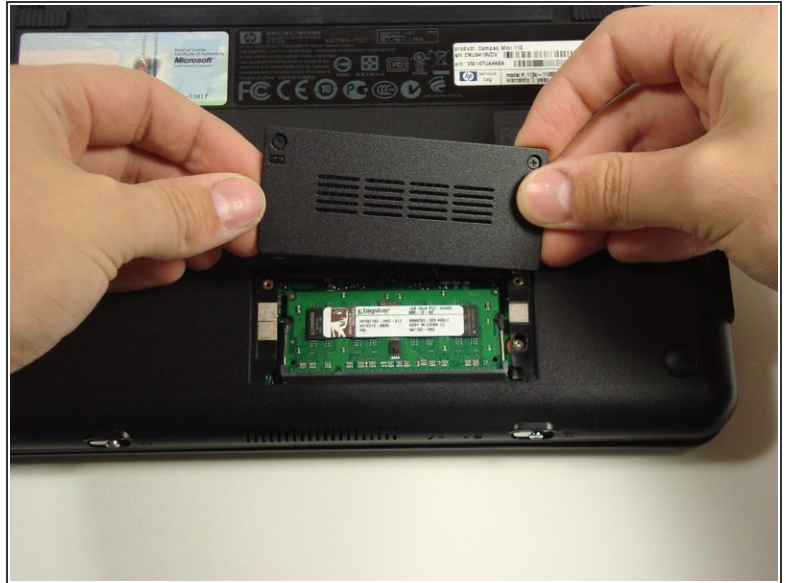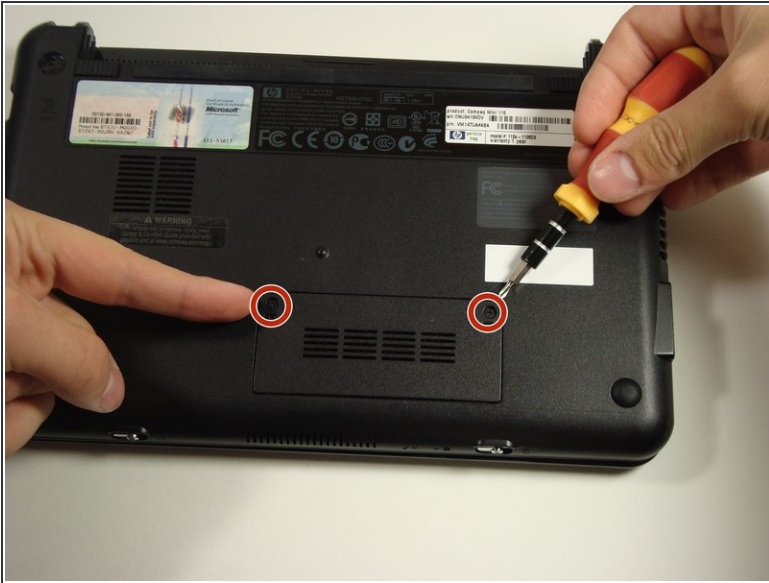

- Use a Philips #0 screwdriver to unscrew the two screws covering the memory compartment on the bottom of the laptop and remove the cover.

## Step 4

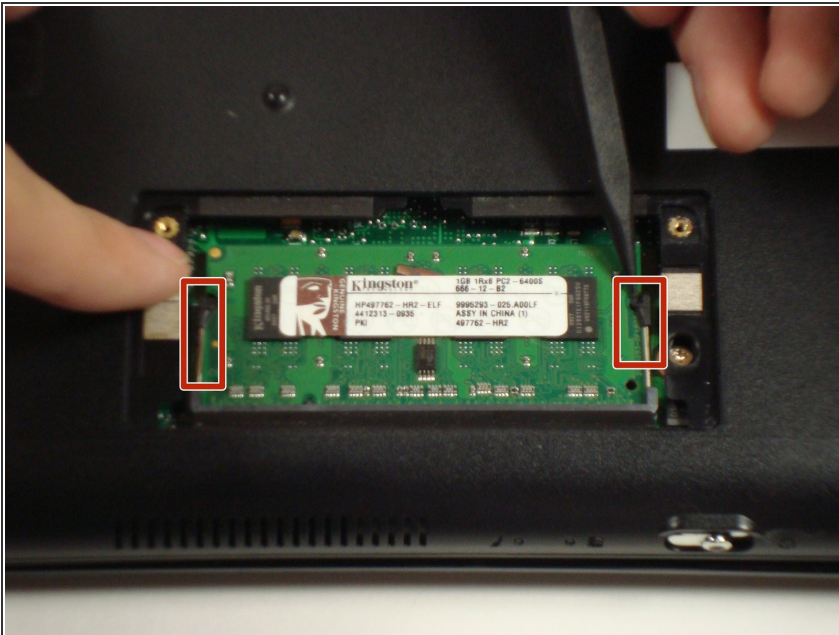

- Push out the side tabs simultaneously and pull out the old RAM module.
- ☑ When inserting a new RAM stick, be sure to evenly insert the gold pins in the same orientation that the old module was removed. While sliding the module in, press the side tabs in place.


## Step 5 — Keyboard



- Remove the rubber pads located on the corners of your Compaq Mini.

⚠ There may be junk underneath it. This is residue left from the glue that held on the rubber pad. Just scrape it away to find the screw.

## Step 6

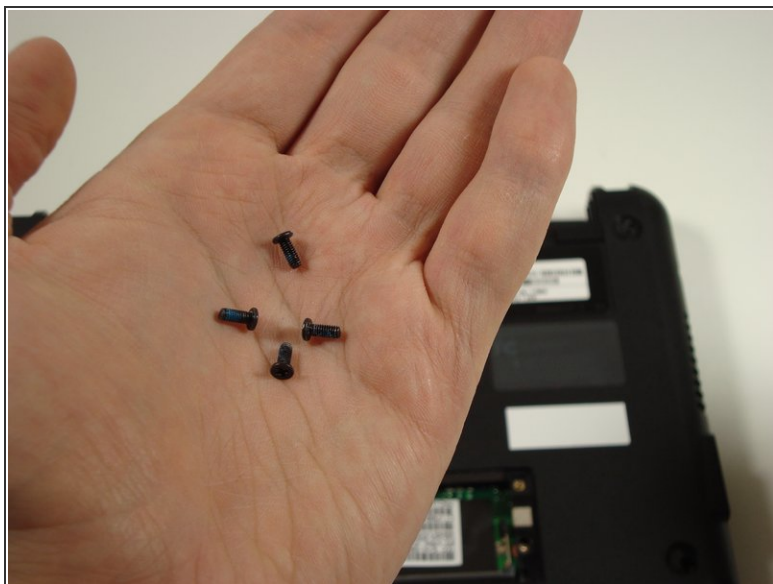

- Unscrew all the corner screws. There are four total, one under each rubber pad.



## Step 7




- Unscrew the screw for the bottom case located in the RAM compartment.

## Step 8




- Remove the three screws in the silver tabs at the back of the keyboard.
- i* These are located at the back of the base under the screen.
- Lift the keyboard away from the laptop.

## Step 9 — Hard Drive

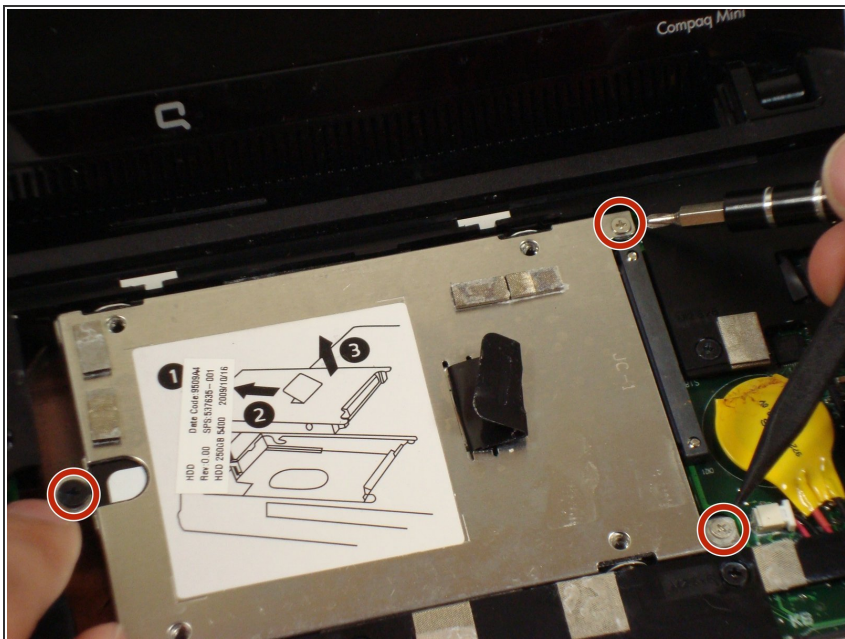

- Remove the three screws holding the panel in place.


## Step 10

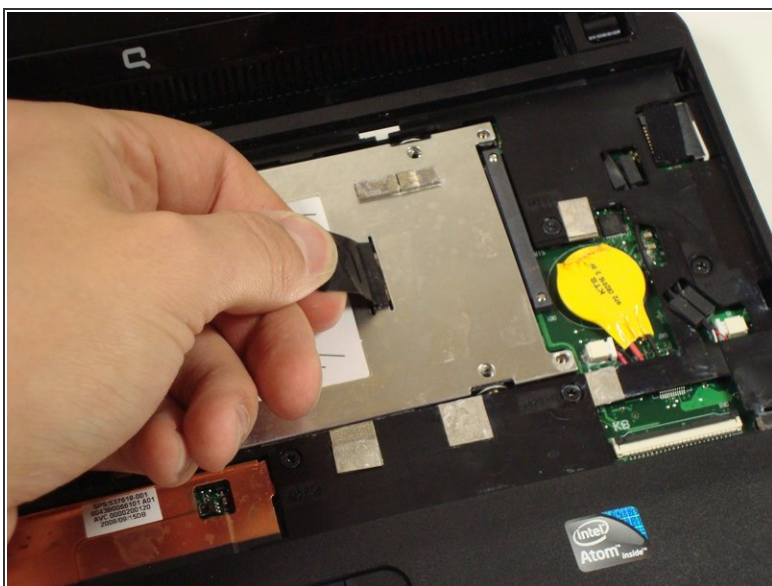

- Pull up on the tab to remove the hard drive.






## Step 11 — Top Cover

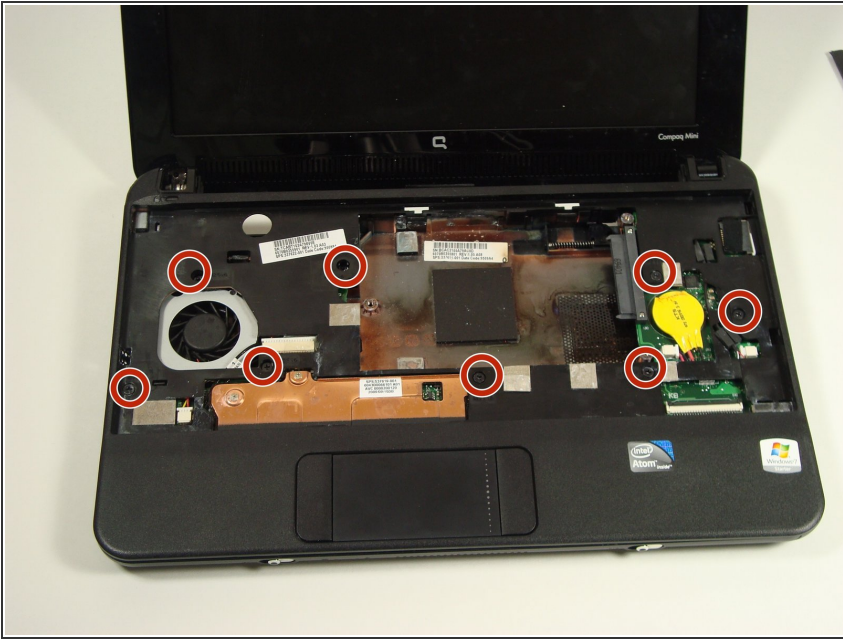

- Remove the eight screws that are from the plastic top cover.



## Step 12

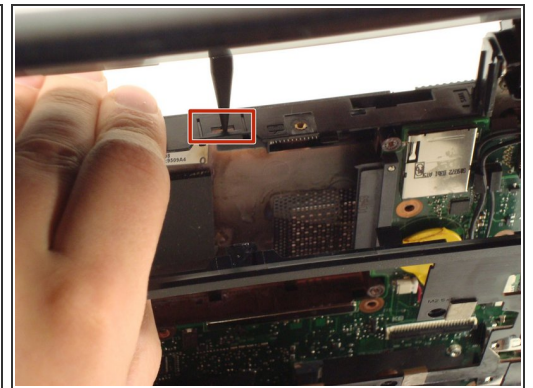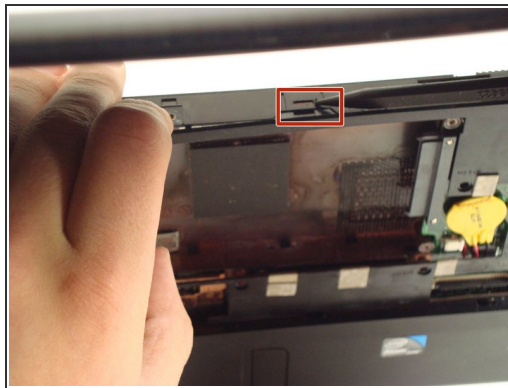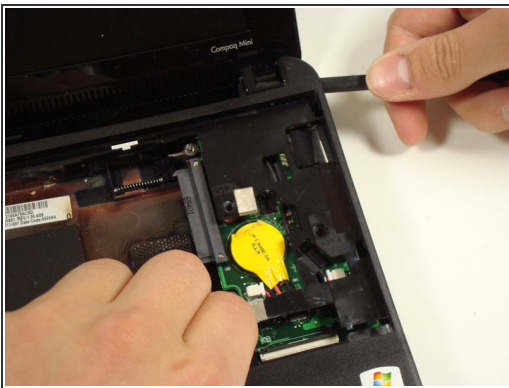

- Pry up the top plastic cover using a spudger.
- These two tabs under the screen need to be pushed in with a spudger.




## Step 13

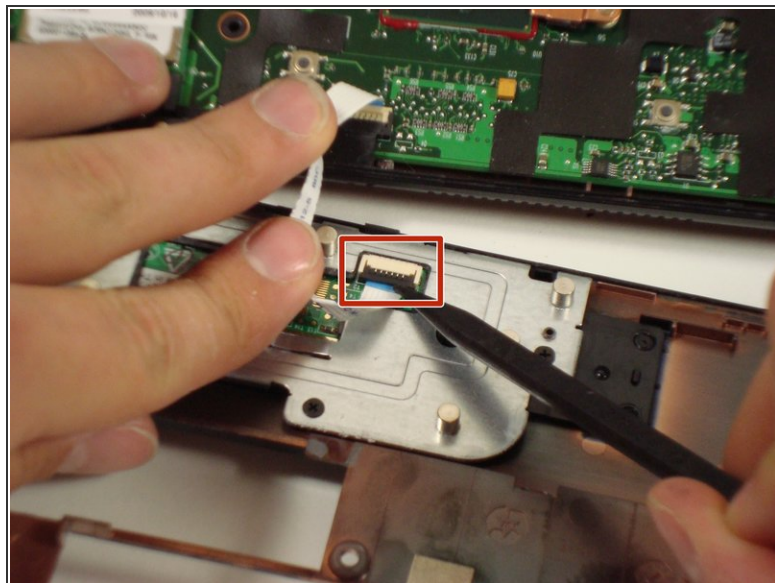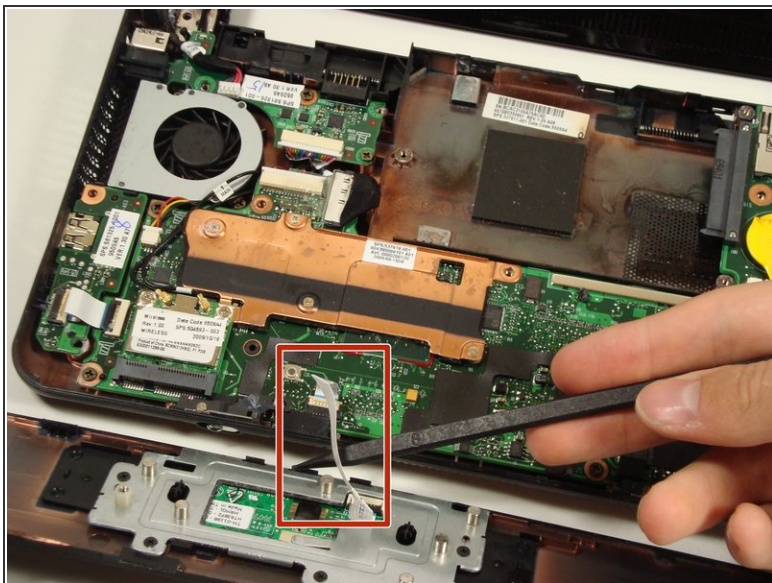

- Remove the cable by carefully pulling it up.


⚠ Be careful when lifting up the cover because the track pad is still attached.

## Step 14 — Wireless Module

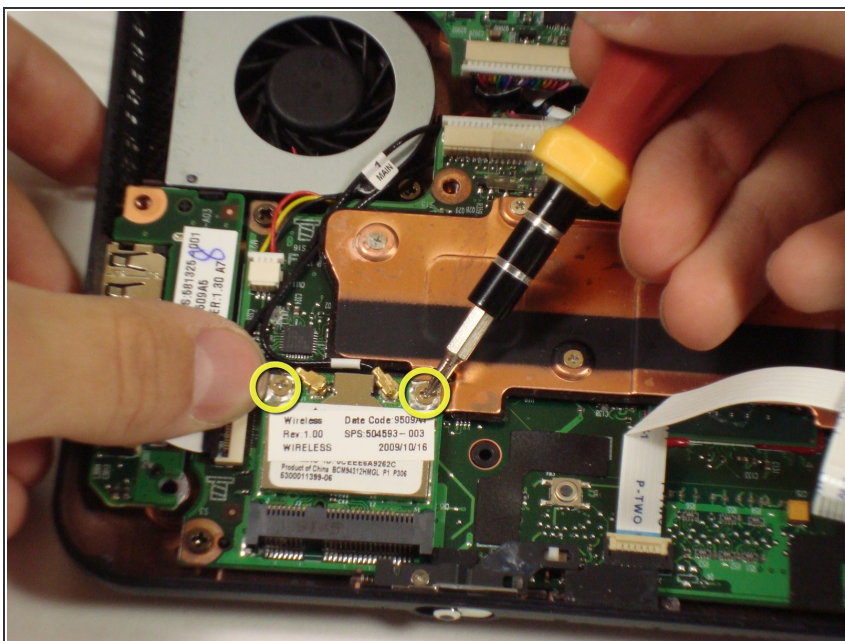

- Remove the two screws holding the module in place.

## Step 15

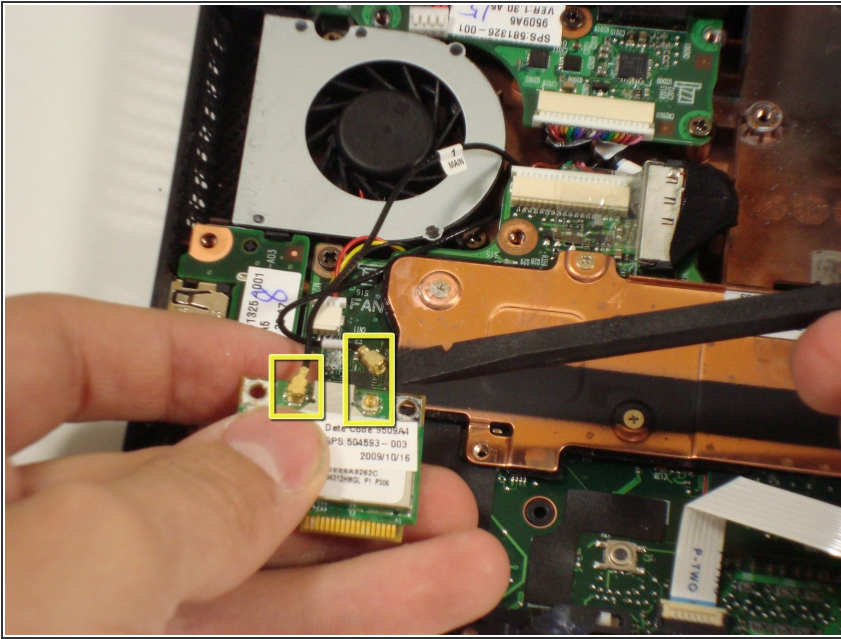

- Detach the two wires.

## Step 16



- Just pull it out.

To reassemble your device, follow these instructions in reverse order.