




Nerf N-Strike Firestrike Laser Assembly Replacement

This guide will show you how to remove and replace the entire laser assembly.

Written By: Hayes Kimball

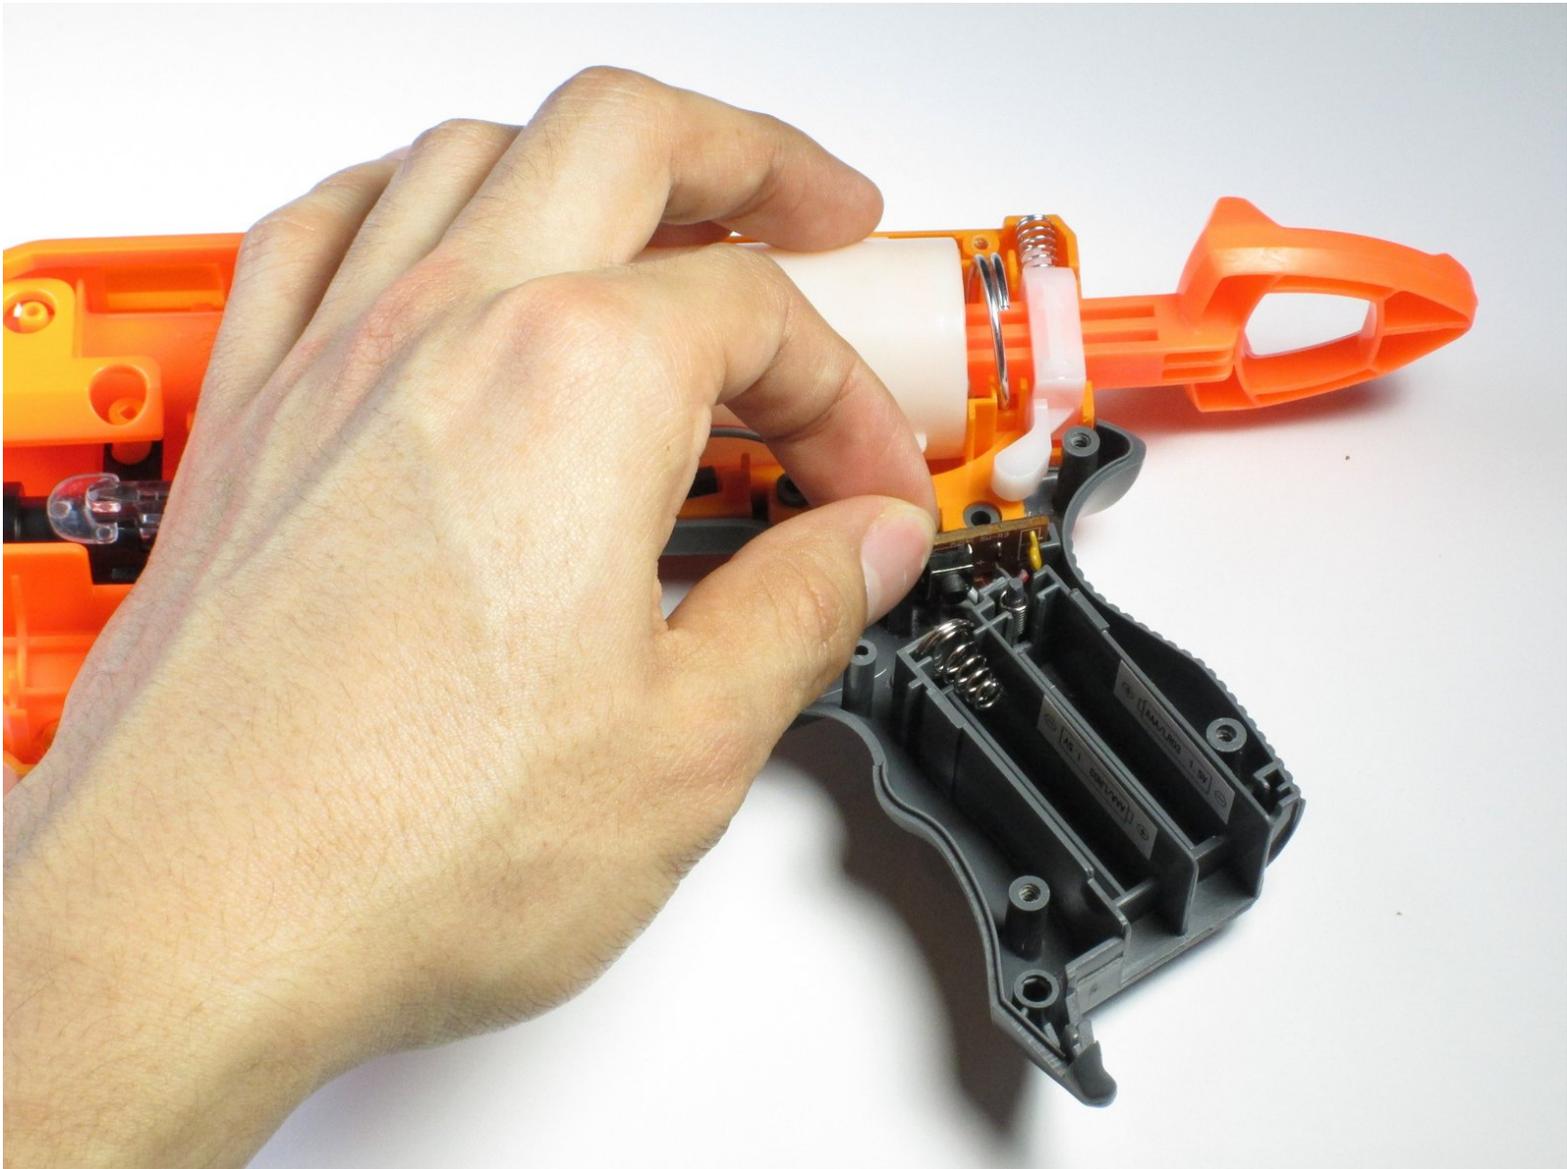


INTRODUCTION

You will be able to disassemble the Firestrike and remove the laser assembly. You will need nothing other than a number 1 Phillips screwdriver and your hands. This guide can be completed anywhere and is relatively straight forward.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Remove battery cover

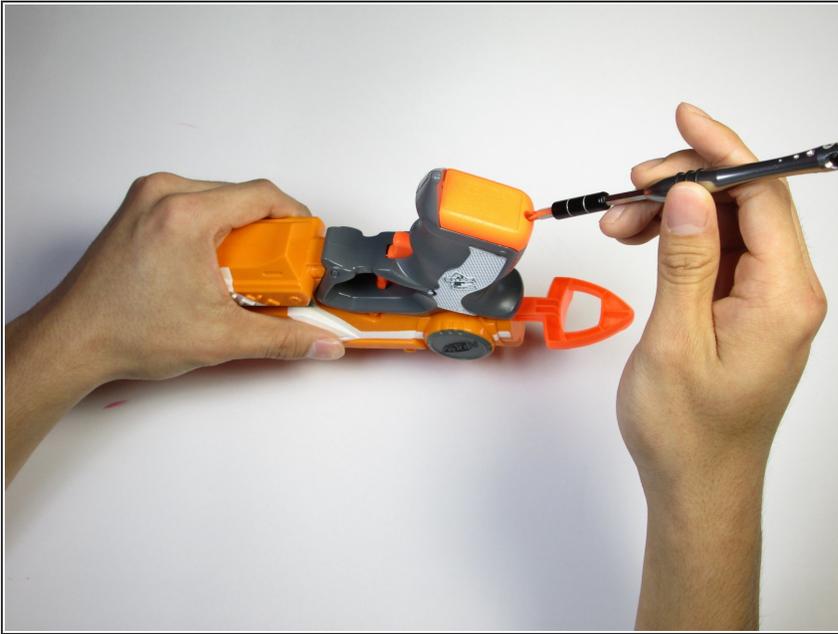

- Use a #1 Phillips screwdriver to remove the 10 -mm screw that secures the battery plate, then remove the battery cover using your hands.

Step 2



- Slide out the two AAA batteries using your fingers.

Step 3 — Blaster Casing




- Remove the seven 10-mm black Phillips screws from the blaster casing with a #1 Phillips Screwdriver.

Step 4



- Slowly pull apart the blaster casing, starting at the battery location.
- Keep pulling apart slowly until it separates completely. Be cautious as to not send the internal components flying.

Step 5

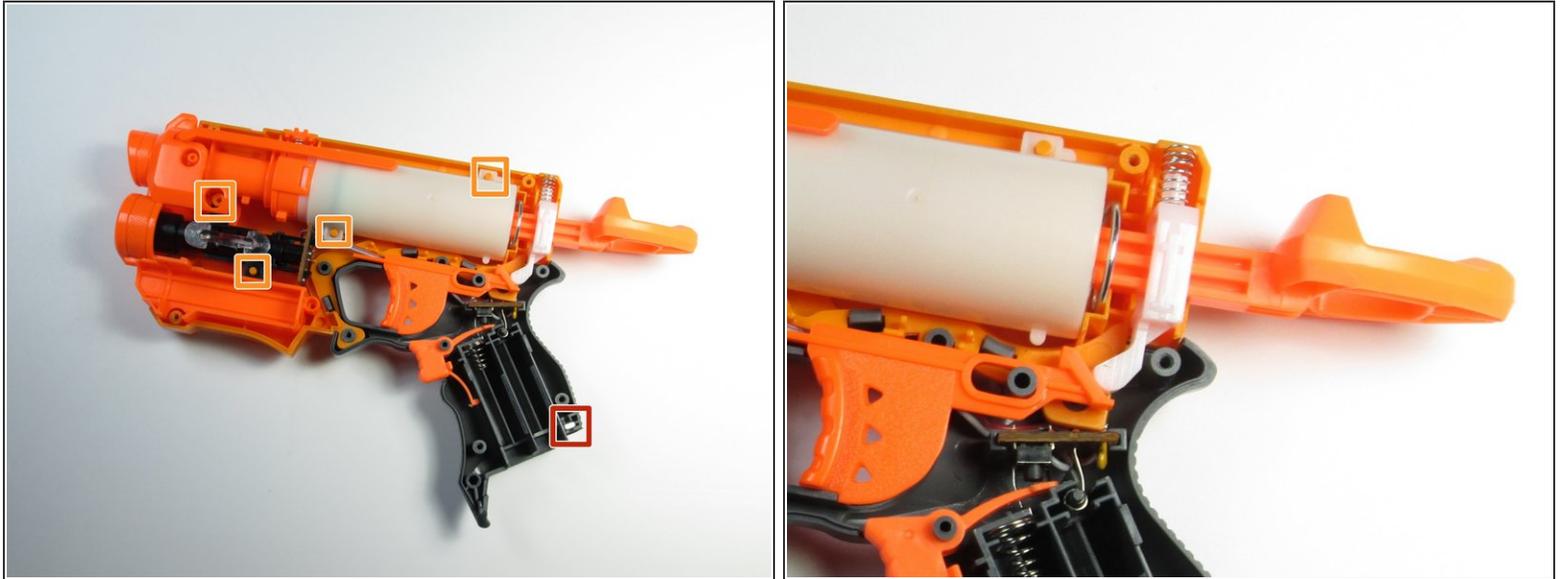

- ☞ For reassembly, ensure that the chrome nut gets put back in the proper location, signified by the red box.
- ☞ For reassembly, ensure that all the parts are lined up correctly on the dowels, signified by the four orange boxes.
- ☞ For reassembly, note the location of the springs as highlighted in the second photo.

Step 6 — Laser Trigger



- Remove the laser trigger by grabbing the trigger with your fingers and pulling it up and out.

Step 7 — Firing Trigger



- Remove the firing trigger by grabbing the trigger with your fingers and pulling it up and out.

Step 8 — Laser Assembly



- Gently pull up on the circuit board located near the gun handle until it separates from the gun.
- ⚠ The wire that attaches to the circuit board is also attached to the laser. Be careful not to use excessive force and damage or disconnect the wire.

Step 9



- Grip the circuit board located at the base of the laser with your fingers; rotate it towards the ammo compartment on the blaster until the guide hole is clear of the guide pin.
- Slide the laser assembly out.

To reassemble your device, follow these instructions in reverse order.