



# Canon Powershot SD880 LCD Display Replacement

The LCD display can be removed and replaced if...

Written By: Ben Tupas



---

## INTRODUCTION

The LCD display can be removed and replaced if it is cracked or broken.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Cover



- Remove the two 2.4 mm screws on the side of the camera that are next to the LCD screen using a Phillips #00 screwdriver.
- Remove the two 4.1 mm screws on the other side using a Phillips #00 screwdriver.
  - ⓘ One screw will be located under the rubber USB flap.
- Remove the single 2.6 mm screw from the bottom of the camera using a Phillips #00 screwdriver.
- Slowly pull the back cover off of the camera.

## Step 2 — LCD Display



- Remove the two 2.9 mm screws at the top-right corner and bottom-left corner of the LCD screen using a Phillips #0 screwdriver.
- Disconnect the ribbons that connect the screen to the camera.
- Lift the screen off.

To reassemble your device, follow these instructions in reverse order.