




# Handspring Visor Edge Battery Replacement

Welcome to the Handspring Visor Edge Battery...

Written By: Christian Valoria

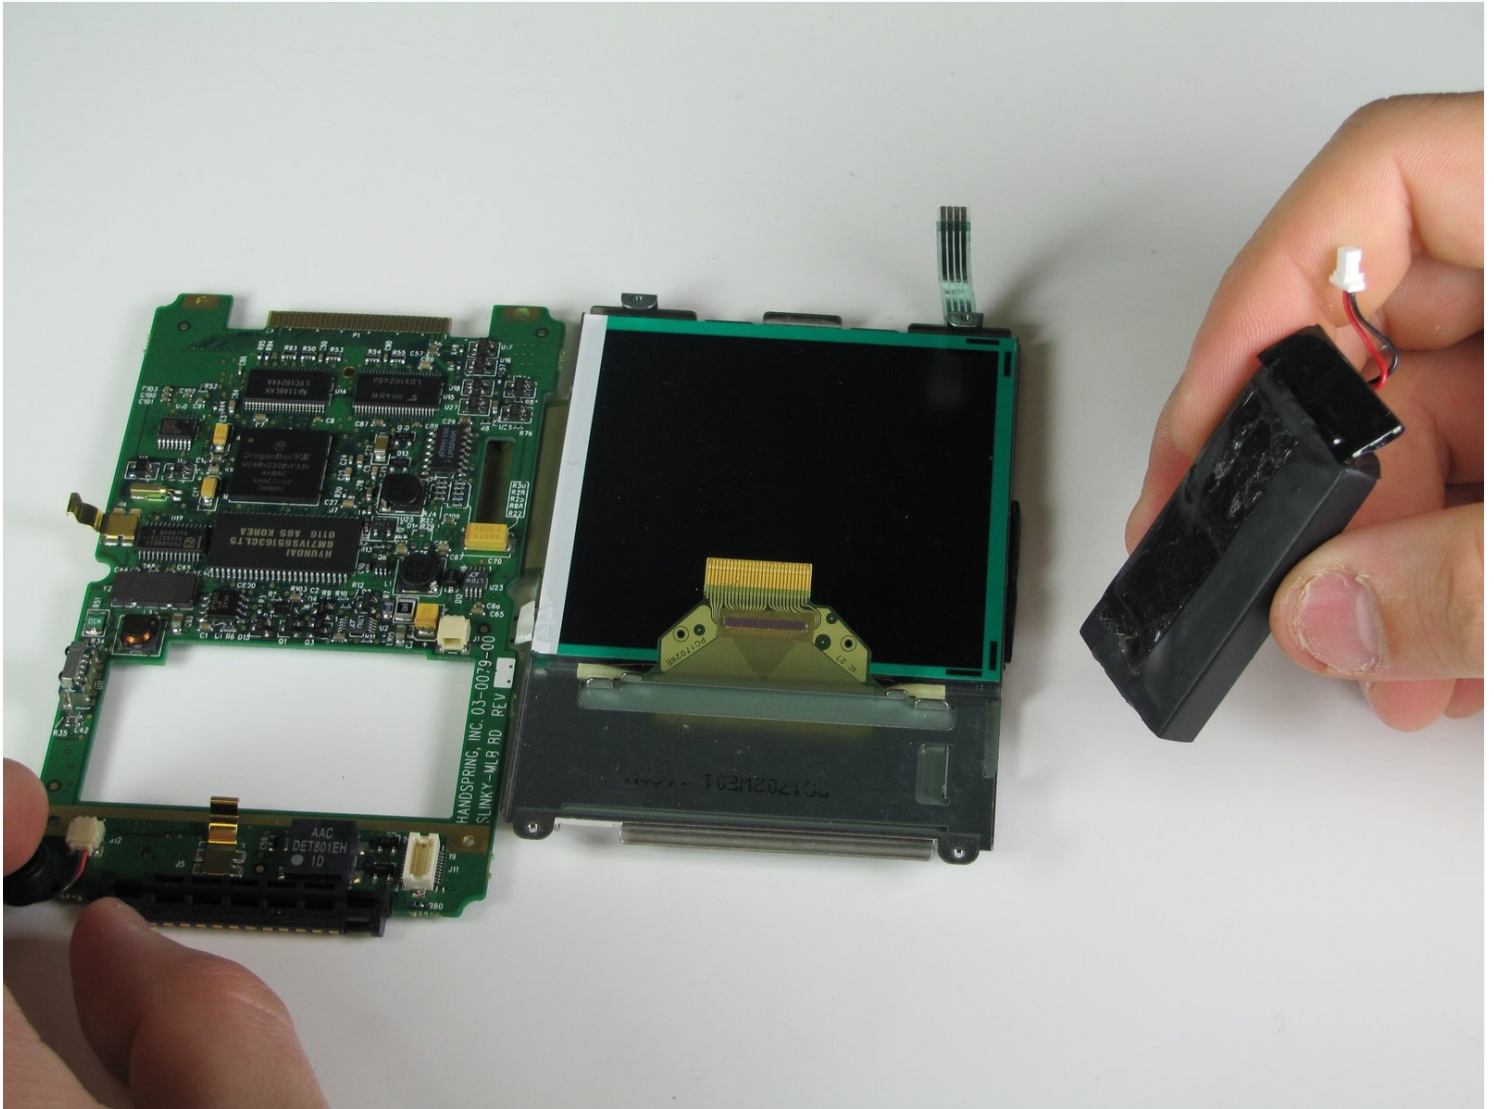

# INTRODUCTION

Welcome to the Handspring Visor Edge Battery Replacement Guide, where we prioritize not only efficiency but also your safety. Within this manual, you'll discover meticulously outlined steps to seamlessly replace the battery of your device. Whether you're a seasoned tech enthusiast or just beginning your journey, adhere to these straightforward instructions, accompanied by essential safety tips, to rejuvenate your Visor Edge without any hiccups. Lets Get Started!

---

## TOOLS:


Phillips #00 Screwdriver (1)

Spudger (1)

Tweezers (1)

---

## Step 1 — Flip Cover

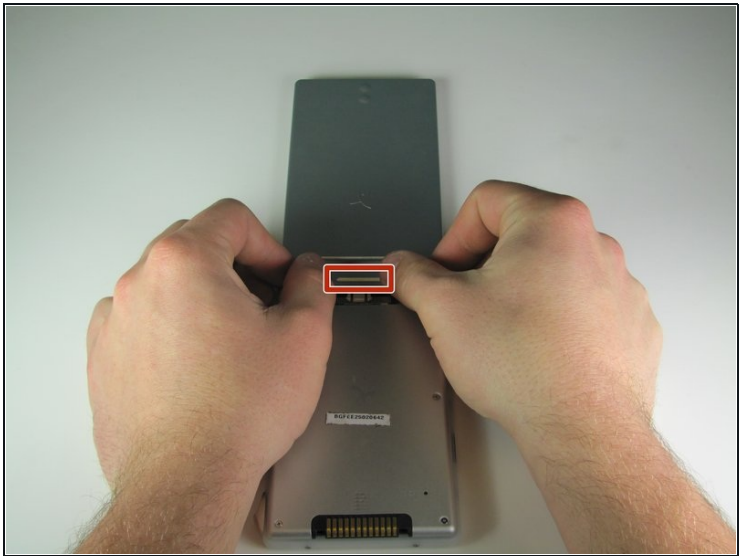

- Open the Visor Edge and place it on a table facing down.
- Gently push the tab that connects the flip cover (top half) to the PDA (bottom half) upward, lift the pieces apart to detach them.

 Do not pull on the flip cover in an attempt to remove it from the PDA.

## Step 2 — Back Panel



- Remove the six 4.1 mm Phillips screws from the back plate using the #00 Phillips Screwdriver.

## Step 3




- Remove the gray back plate from the PDA.

## Step 4




- Remove the four 2.6 mm Philips screws that are on the sides of the frame.
- Remove the 3.9 mm Philips screw holding the stylus holster to the frame.

## Step 5

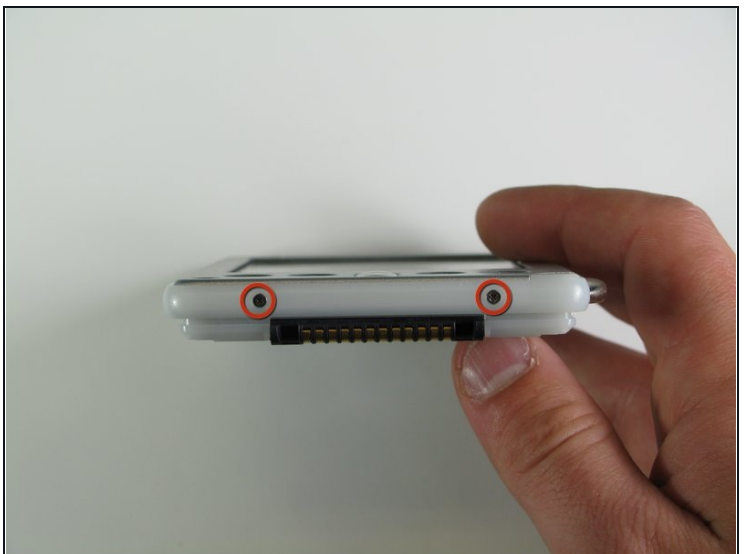


- Remove the four 2.6 mm Philips screws on the top and bottom of the frame.

## Step 6

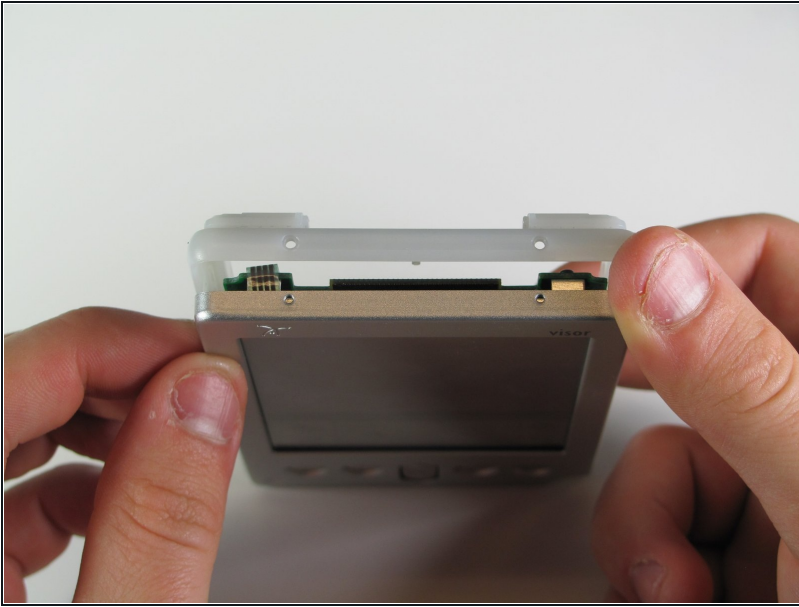

- Gently remove the white frame from the back of the PDA.

## Step 7 — Battery

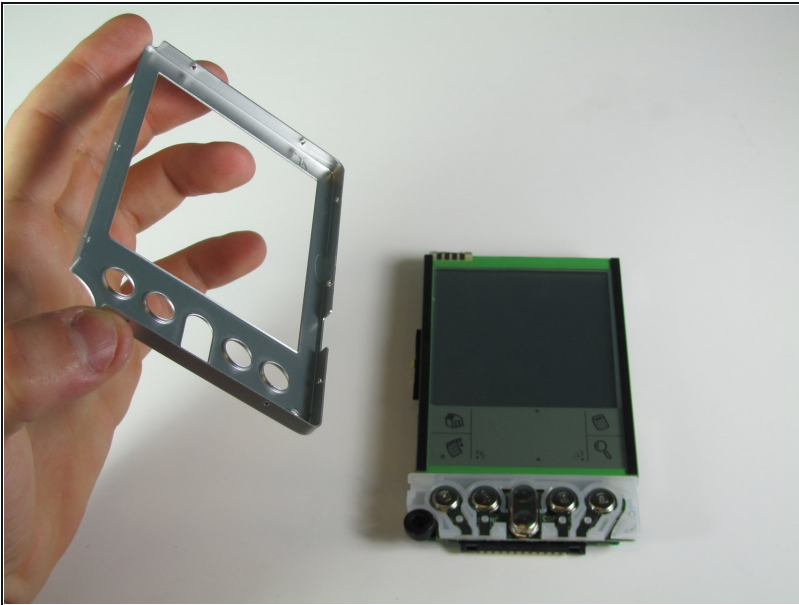


- Gently pull off the front cover.

## Step 8



- Gently use your finger or [tweezers](#) to push the brown lock away from the side of the circuit board that is holding the ribbon cable.
- Remove the ribbon cable with tweezers.


## Step 9

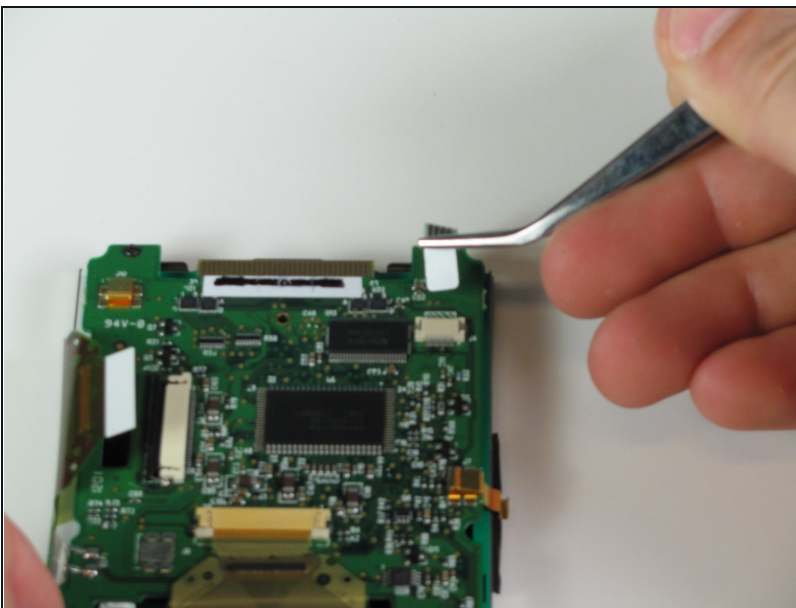

- Using the tweezers, pull back the ribbon cable on the top of the device.

⚠ Pull at the white part of the ribbon to avoid tearing.

## Step 10

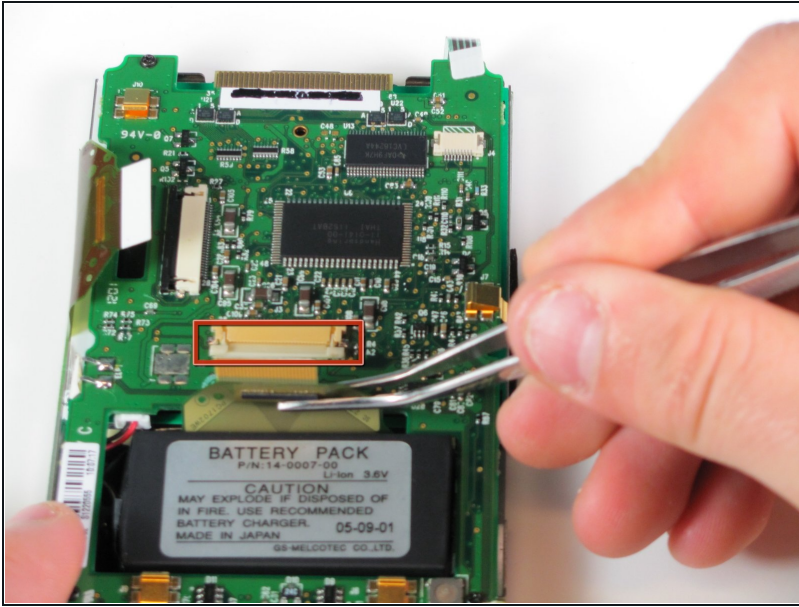


- Using the same technique as with the other ribbons, locate and disconnect the ribbon cable above the battery pack.

## Step 11





- ① All the ribbon cables should be disconnected from the motherboard.
- Remove the four 3.6 mm Phillips #00 screws located at each corner of the device.

## Step 12

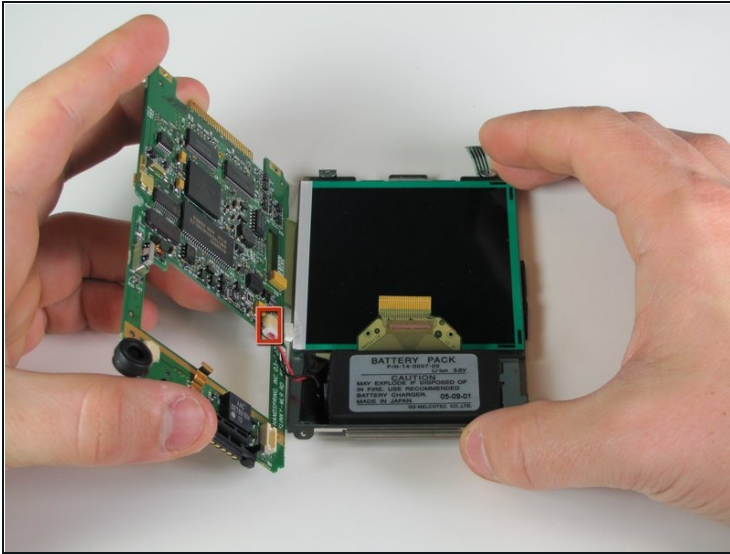

- Carefully separate the circuit board and the screen. (Be careful of soldered wires when separating)
- ⚠ Be careful not to break the soldered wires that connects the circuit board to the battery pack.
- Disconnect the wire that connects the battery pack to the motherboard using tweezers.

## Step 13

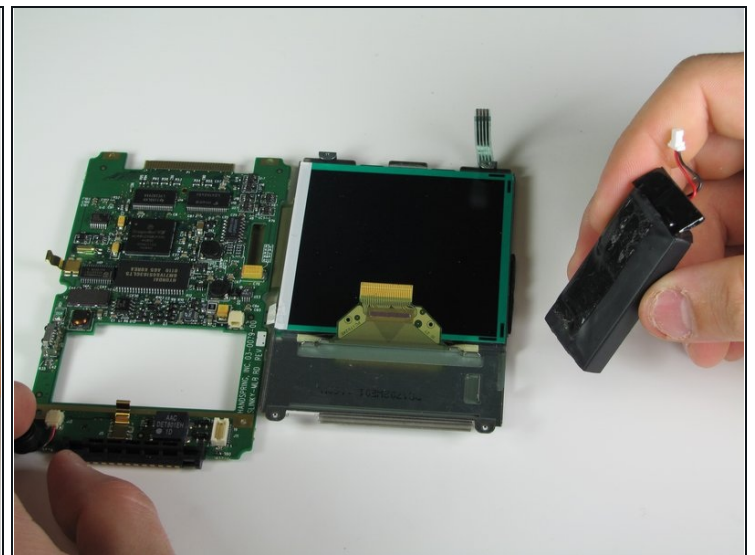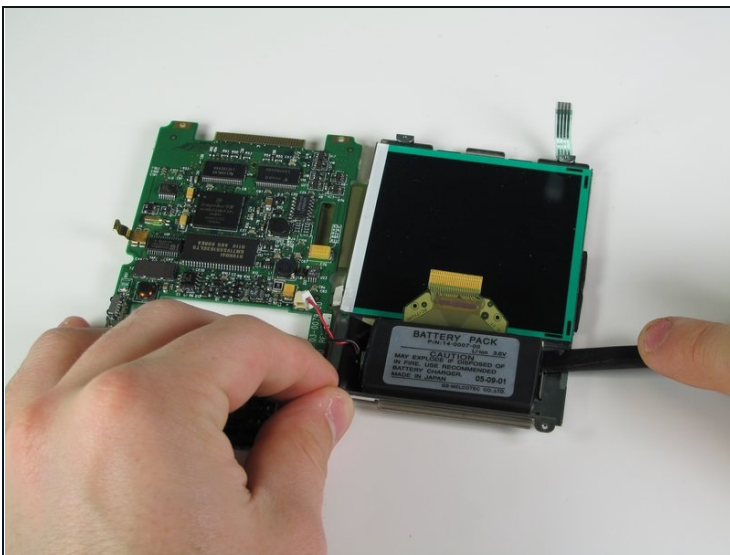

- Wedge the spudger under the battery to pry it apart from the adhesive.

---

To reassemble your device, follow these instructions in reverse order.