



Canon EOS Rebel XTi Memory Card Replacement

Remove the memory card in the Canon EOS Rebel XTi.

Written By: Nicholas Abate



INTRODUCTION

Removing the memory card before performing any maintenance ensures that the memory card will not become damaged and loss of data is avoided.



TOOLS:

- [Fingers](#) (1)
-

Step 1 — Memory Card



- Place the camera on its side with the soft touch grip facing up and the top of the camera facing right.

Step 2



- Slide the memory card door in the direction of the arrow engraved on the camera.
- Once the door has slid open to its full position, lift up on the door.

Step 3



- With the door open, push down the small black plunger next to the CF slot. The CF card will disengage from the slot and be ejected far enough that you can grasp it between thumb and forefinger and remove it from the slot.
- ⓘ The plunger will stay in its depressed position until a CF card is again inserted in the slot.

To reassemble your device, follow these instructions in reverse order.