




Kenwood Chef A701A Power Cable Replacement

Replacing the power cable on a Kenwood Chef Guide is based on an A701A


Written By: Grant

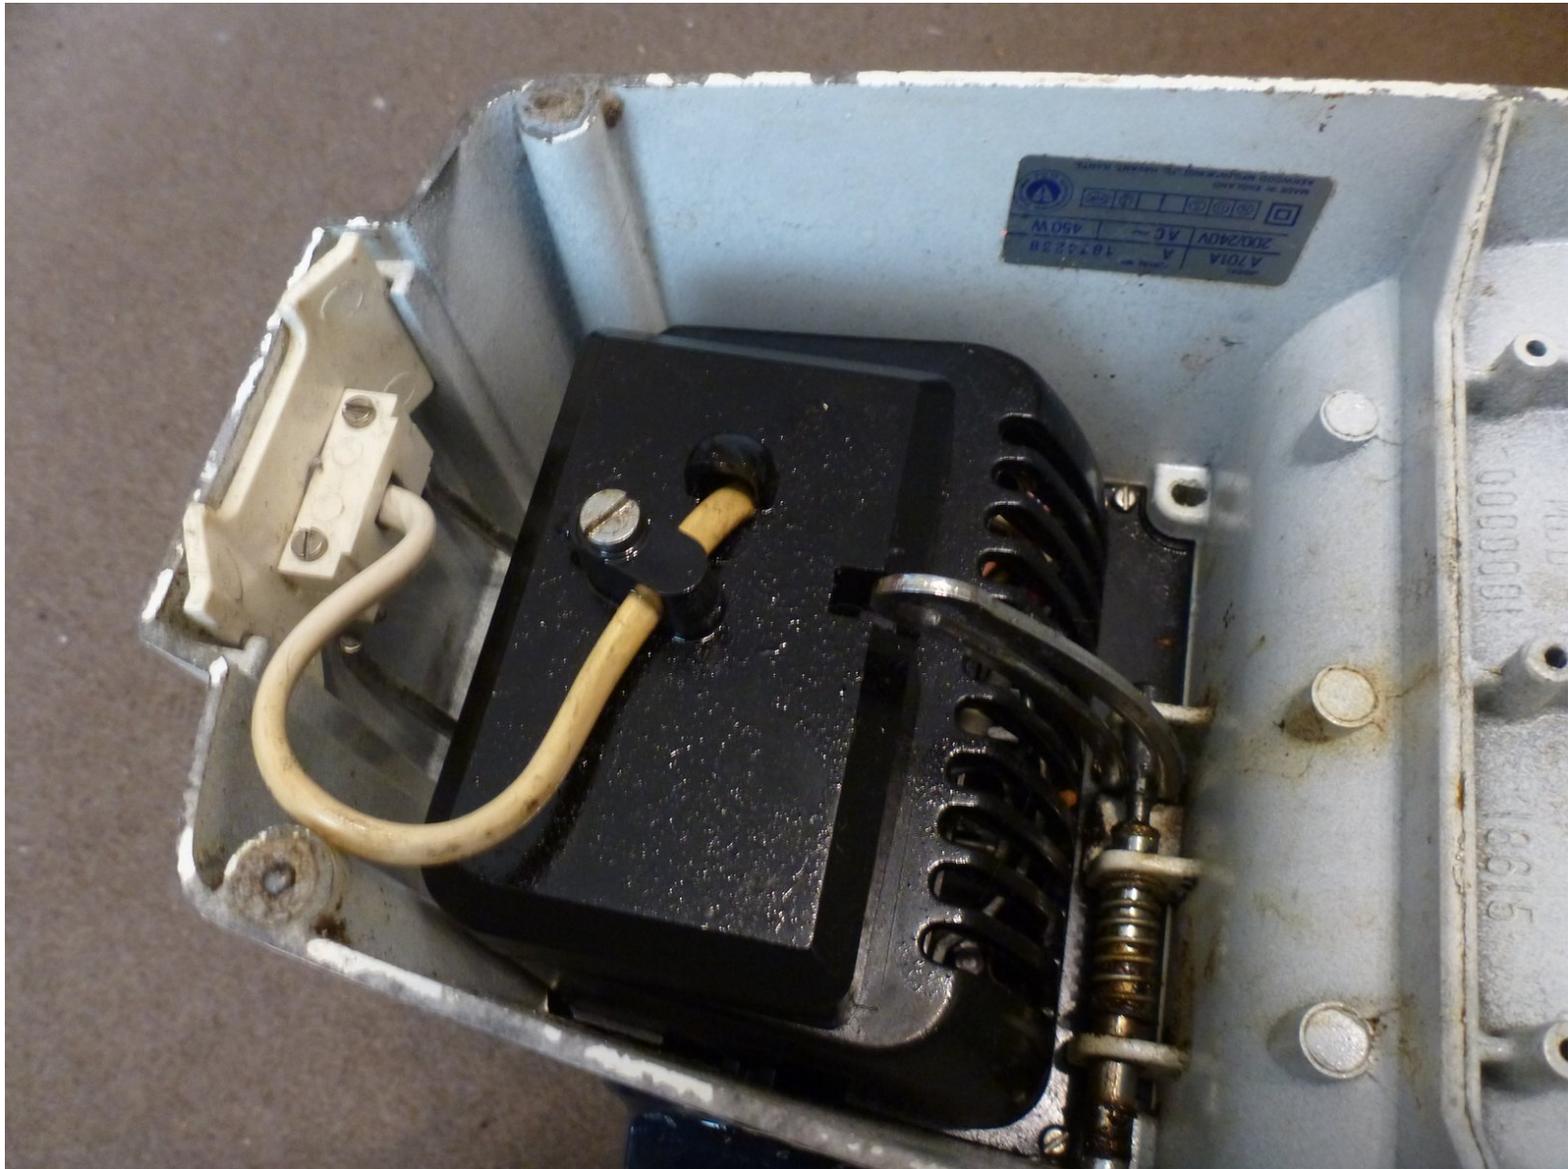

 **TOOLS:**

- [Flathead Screwdriver](#) (1)
 - [Wire Stripping/Crimping Tool](#) (1)
-

Step 1 — Remove Cable Grips

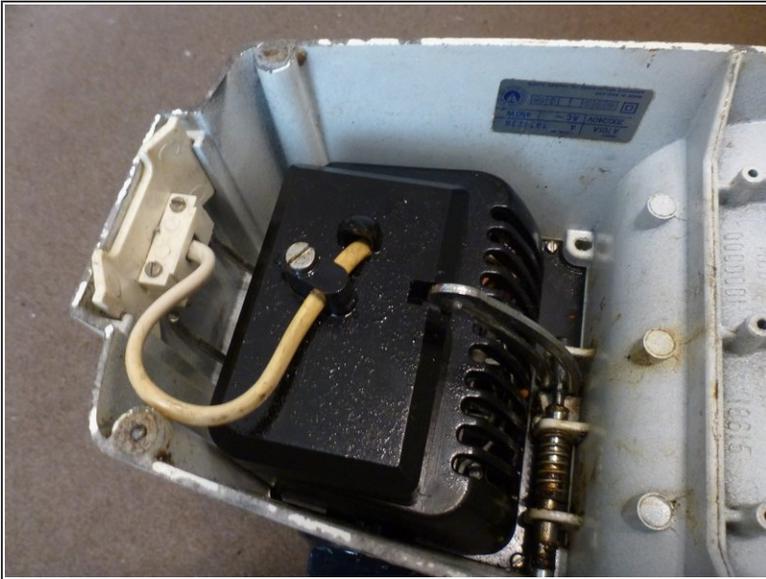

- Turn the mixer upside down
- Remove the two screws holding the white cable grip.
- Remove the black cable grip. The long screw also holds the cover onto the terminal block

Step 2 — Remove the old cable



- Remove the cable cover to expose the terminal block.
- Remove the wires from the live and neutral terminals.
- Thread the cables out though the cover and then from the mixer chassis

Step 3 — Refit & Reassemble



- To refit simply follow the removal process in reverse
- Be sure to connect the wires to the correct terminals, Brown - Live, Blue, Neutral.
- If fitting a new plug ensure it is fitted with the appropriate fuse. If in any doubt consult a competent electrician/electrical engineer

To reassemble your device, follow these instructions in reverse order.