



Dyson DC58 Main Body Replacement

Replace the Dyson Main Body if it is damaged or the motor is no longer working.

Written By: Krista St Onge



INTRODUCTION

If your Dyson motor is no longer functioning correctly, grab a pair of long tweezers and check out this guide to replace the main body,



TOOLS:

- [Tweezers](#) (1)
-

Step 1 — Bin



- Make sure your vacuum is unplugged.

⚠ Avoid pressing the red trigger on the vacuum handle; this will power on the vacuum.

Step 2



- Locate the red lever parallel to the red trigger and on the side of the clear bin.

Step 3



- Push the red lever downward to open the clear bin. You may need to do this over a trash bin if there is debris in the clear bin.

Step 4



- Push the red lever downward again while pulling the clear bin away from the main body of the Dyson vacuum.

Step 5 — Main Body



- Flip the vacuum over so that the silver cyclone part of the vacuum is now at the base.

Step 6



- Locate the two visible white clips seen between the main body and the purple cyclone of the vacuum.
- Use tweezers to pinch the two visible white clips together.
- ⓘ It may require a few tries to pinch the clips since the space between the main body and cyclone is small.

Step 7



- Tilt and pull the main body away from the purple cyclone of the vacuum.
- ⓘ You may hear a loud snap when the cyclone is released from the main body, this is to be expected.

To reassemble your device, follow these instructions in reverse order.