



Repairing HP Photosmart D110a Paper Jam

This guide will explain how to remove stuck...

Written By: Tim Wise



INTRODUCTION

This guide will explain how to remove stuck paper from your HP Photosmart D110a printer. No parts or tools are required to complete this repair. The device will display symptoms such as; failure to print, abnormal noises, and failure to feed paper. Additional information can be found in the user guide linked below.

[HP d110a user manual](#)

Step 1 — Repairing HP Photosmart D110a Paper Jam



- Identify the location where the piece of paper is jammed.

Step 2



- Use your hand to gently remove the jammed paper.
- Pull the paper until it is completely removed from the printer.

Step 3



- Dispose of paper that caused the jam. Replace the jammed paper with fresh, unwrinkled paper.
-