



Olympus C-765 LCD Screen Replacement

This guide may help in the process of replacing...

Written By: Mason Morgan



INTRODUCTION

This guide may help in the process of replacing the LCD Screen on the Olympus C-765.

Over time, the LCD Screen may become damaged, which can cause a disconnect between the displayed image and the photographs being taken.


The guide will show the steps necessary for replacement, [including disconnecting ribbon cables](#).

Take care before beginning by first disconnecting any external power source from the device and ensuring that it is powered off.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — LCD Screen

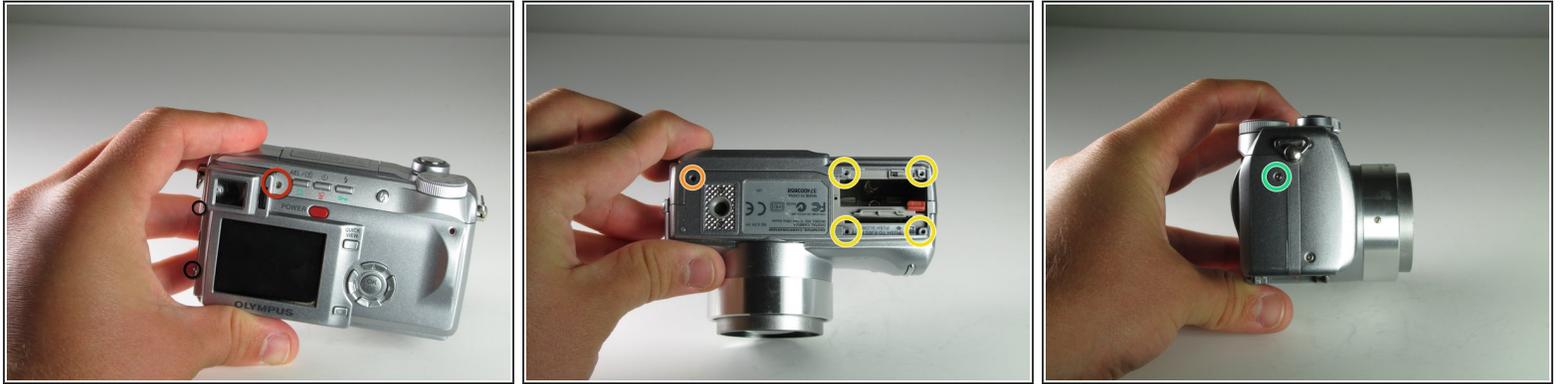


- Remove all the screws using your Phillips #00 holding the back plate in place. This includes:
 - On the Back: Unscrew the 4mm screw to the right of the viewfinder.
 - On the Bottom:
 - Unscrew the 3mm screw in the top left corner.
 - Unscrew the four 3mm screws under the battery cover.
 - On the Right Side: Unscrew the one 3mm screw holding the right-side panel.
 - On the Left Side: Unscrew the two 2mm screws holding the left-side panel.

Step 2



- After you remove the back cover:
 - Gently pull the two ribbon cables out of their sockets.
 - Gently disconnect the white cable.

Step 3

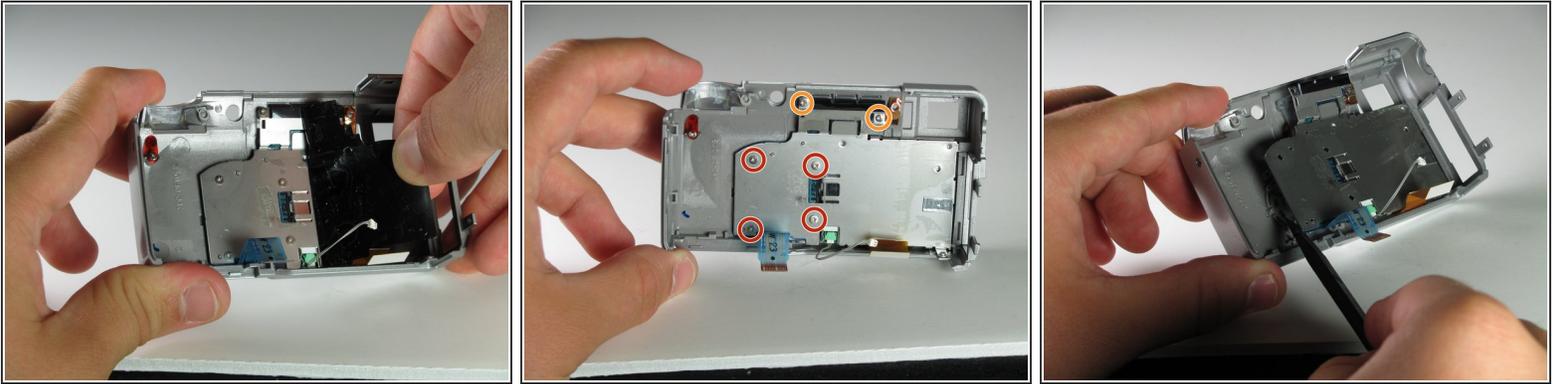

- Peel the black tape off the back of the LCD.
- Using the Phillips #00 remove the four 3mm screws on the LCD bracket.
- Remove the two 2mm screws from the top of the bracket.
- Use a spudger to pop the LCD screen out of the camera's backplate.
- ⓘ When the bracket comes off, the buttons from the top section may fall out of place. If this happens then put them back in the position they were in.

To reassemble your device, follow these instructions in reverse order.