



# Canon EOS 30 Bottom Panel Replacement

Removing the bottom panel is safe and only...

Written By: Sterling Vinson



# INTRODUCTION

Removing the bottom panel is safe and only requires a screwdriver.

---

## TOOLS:

Phillips #00 Screwdriver (1)

---

### Step 1 — Front Panel



- Remove the two 4.8 mm black screws above the lens on the front of the camera.

## Step 2



- Remove the 4.3 mm black screw under the lens ring, and the 4.8 mm black screw under the camera.

## Step 3



- Remove the 4.8 mm black screw on the left side of the camera.

## Step 4



- Remove the front panel by lifting it away from the camera's body.

## Step 5 — Bottom Panel



- Remove seven 4.25 mm black screws on the bottom panel.

## Step 6



- Remove the bottom panel.

---

To reassemble your device, follow these instructions in reverse order.