


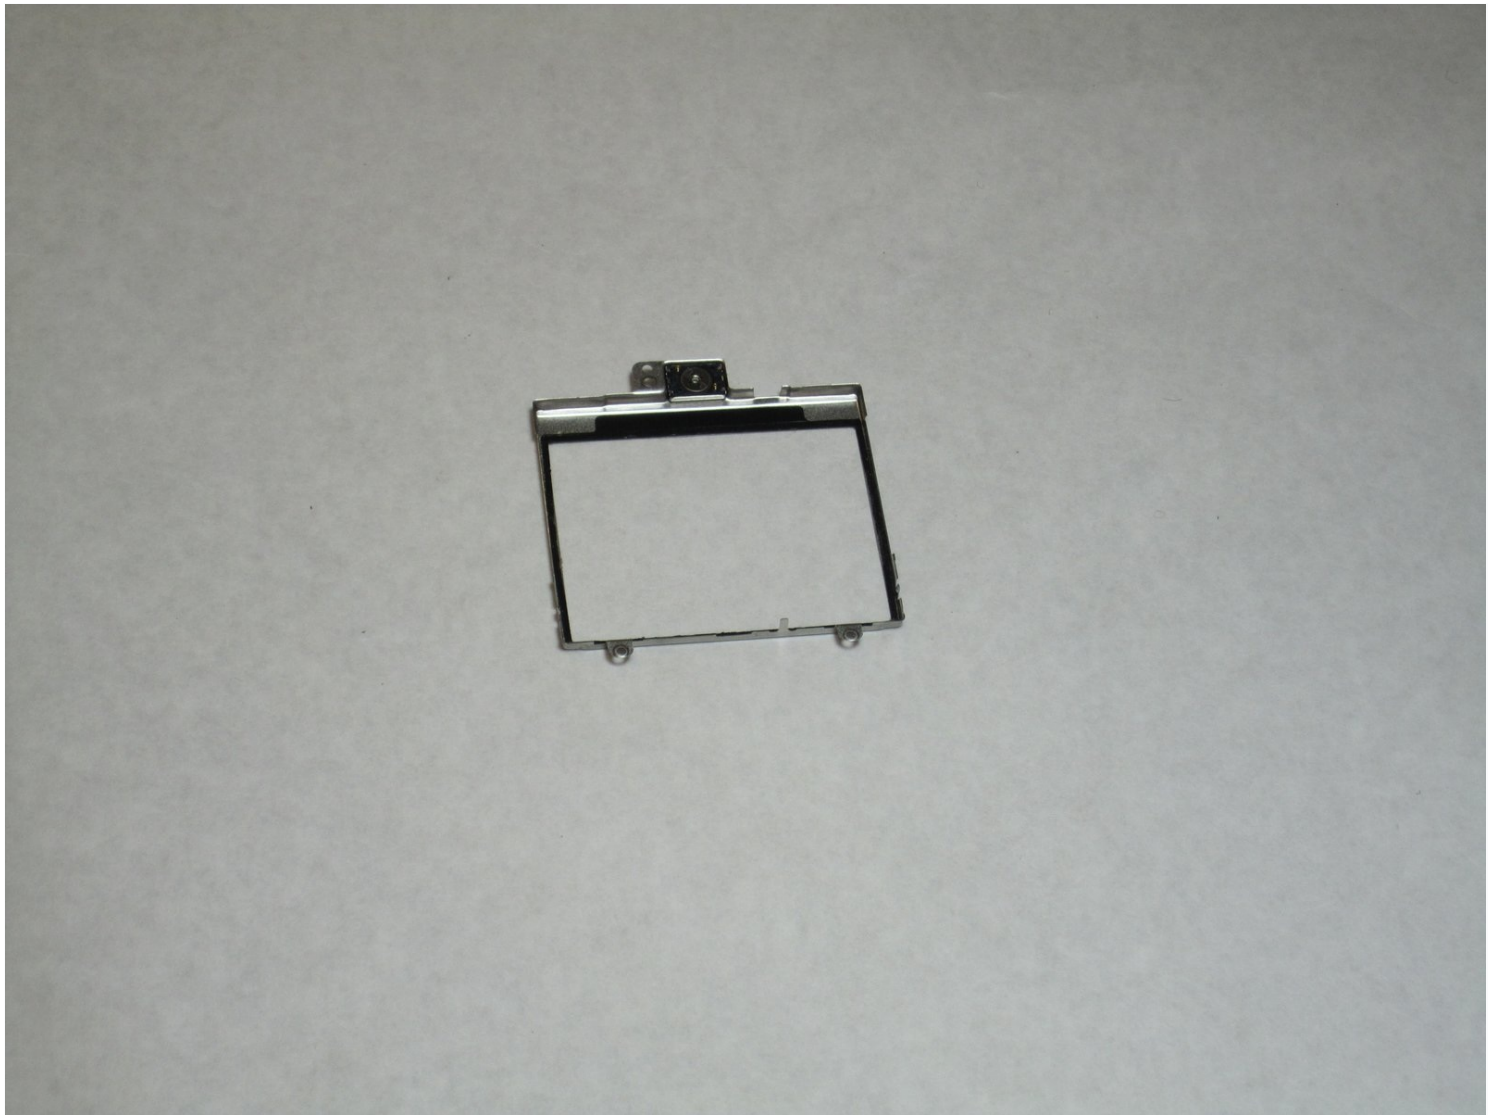

Disassembling Nokia E61i Speaker

Written By: Christopher Patton



TOOLS:

TR7 Torx Security Screwdriver (1)

T5 Torx Screwdriver (1)


T6 Torx Screwdriver (1)

Step 1 — Battery




- Remove the back cover to access the battery. Press the tab on the bottom of the cover.
- Slide the back cover downwards off of the phone while pressing the tab down.

Step 2

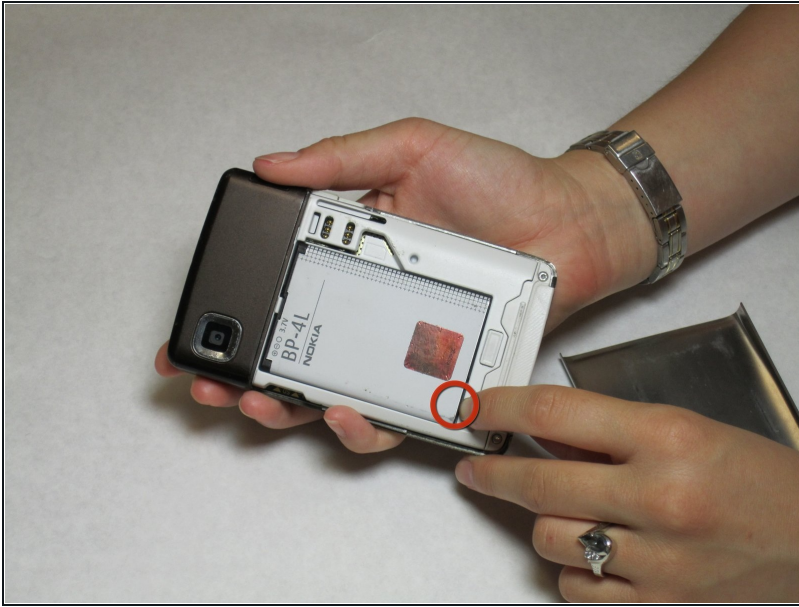



- Locate the bottom-left corner of the phone where there is a spot to remove the battery.

Step 3

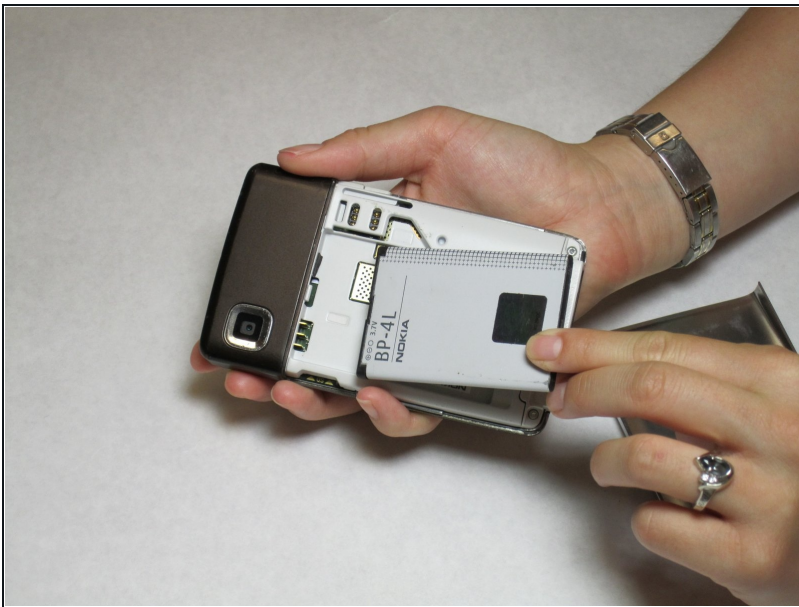

- Lift the battery out using your finger.
- ① The E61i uses a Nokia BP-4L standard battery.

Step 4 — Front Cover

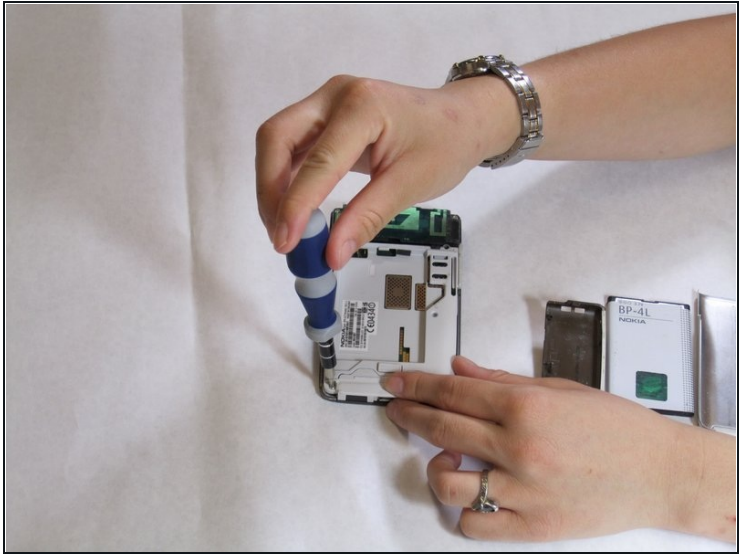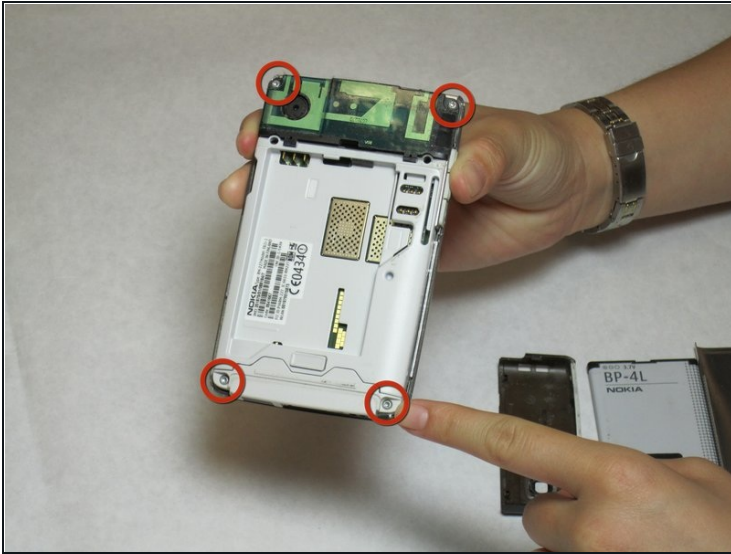


- Remove the four screws that secure the front cover to the rest of the phone using a T7 screwdriver.

Step 5





- Remove the cover by pulling it up and off.

Step 6 — Display

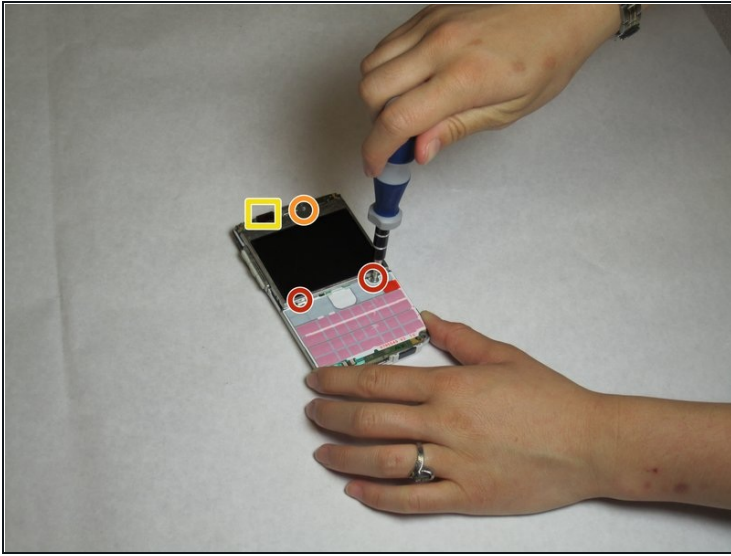


- Take off the casing and keyboard.
- Remove the screws while holding the screen in place using a Torx T6 screwdriver.
- Remove the single screw while holding the screen in place using a Torx T5 screwdriver.
- Lift the ribbon off of the contact with the motherboard.
- ☒ ★ Firmly press the contacts into place to connect the ribbon and the motherboard when reassembling.

Step 7

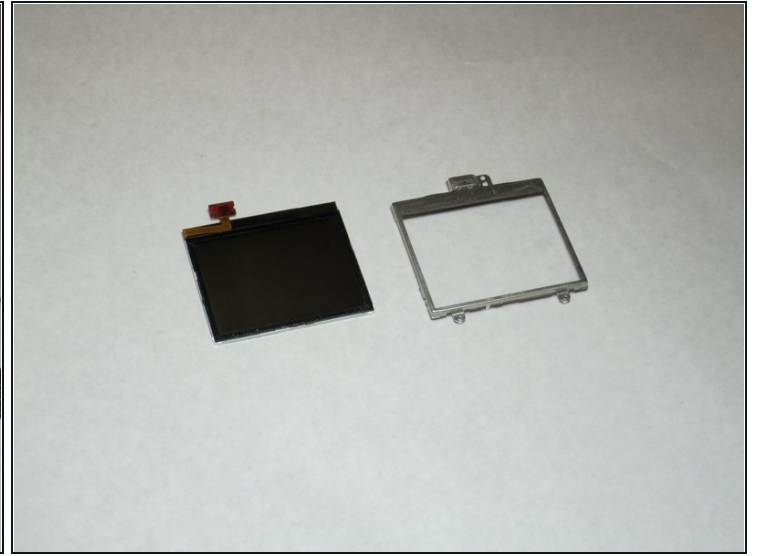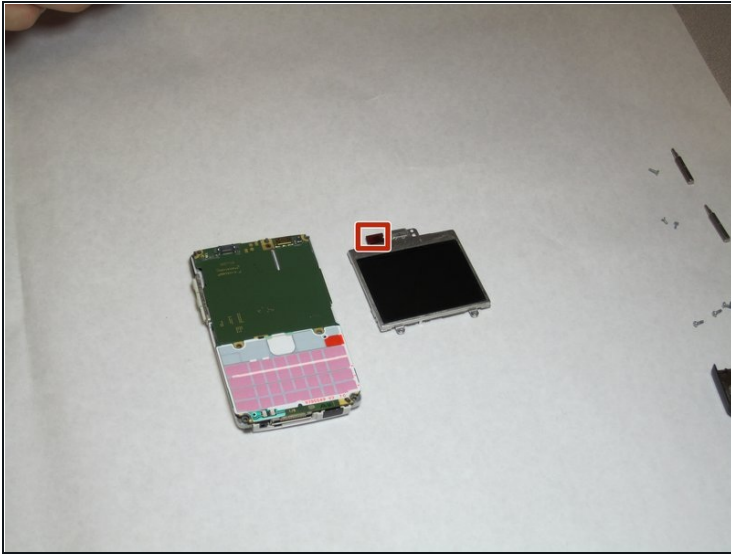

- Gently pull the screen off of the phone.
- Be sure not to rip the sticker that connects the display and the motherboard.
- Pull the silver case off to completely free the cracked or damaged screen.

Step 8 — Speaker

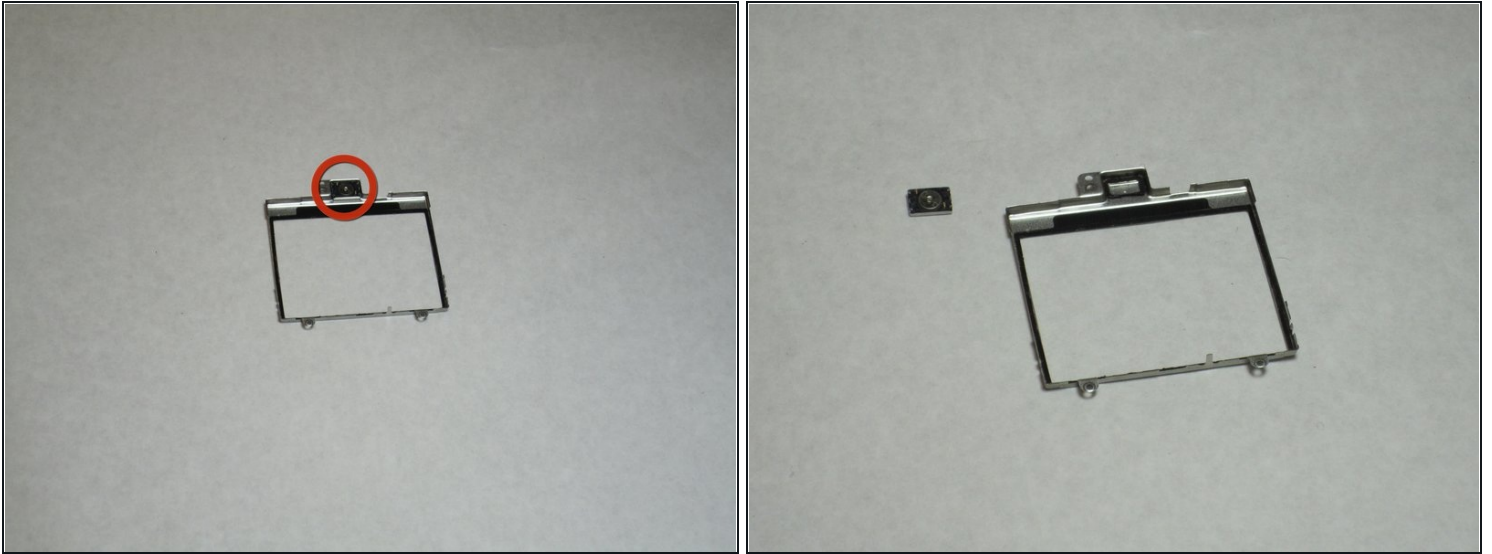

- Remove the speaker by pulling it off of the display frame.
- The speaker is connected to the display frame by a ring of adhesive foam (visible in second picture). By removing the speaker, this foam is torn. However, the speaker sticks quite well to the frame without reapplication of any adhesive.

To reassemble your device, follow these instructions in reverse order.