



Vtech Kidibeats Drum Set Battery Replacement

Replace your faulty batteries to restore power to your drum set.

Written By: Aaron Klementowski




INTRODUCTION

Faulty batteries can often be the cause of a malfunctioning drum set. This guide is designed to show how to correctly replace the batteries in your drum set in order to restore power and proper function.

TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — Battery

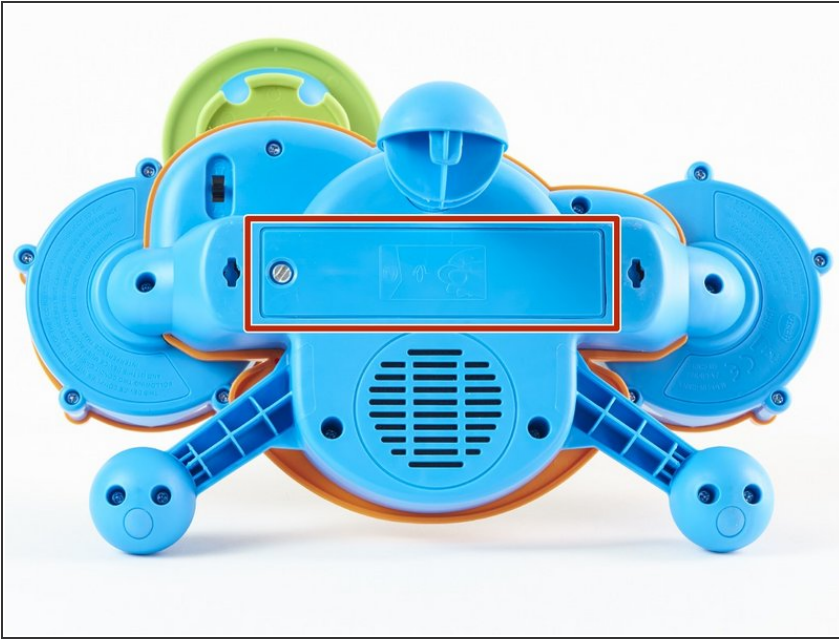


- Locate the battery panel that is centered between the three leg supports at the bottom of the drum set.

Step 2



- To remove the battery panel, loosen the 10 mm panel screw using a flathead 4.0 screwdriver.
- ⓘ You can also use a small coin to loosen the screw.

Step 3

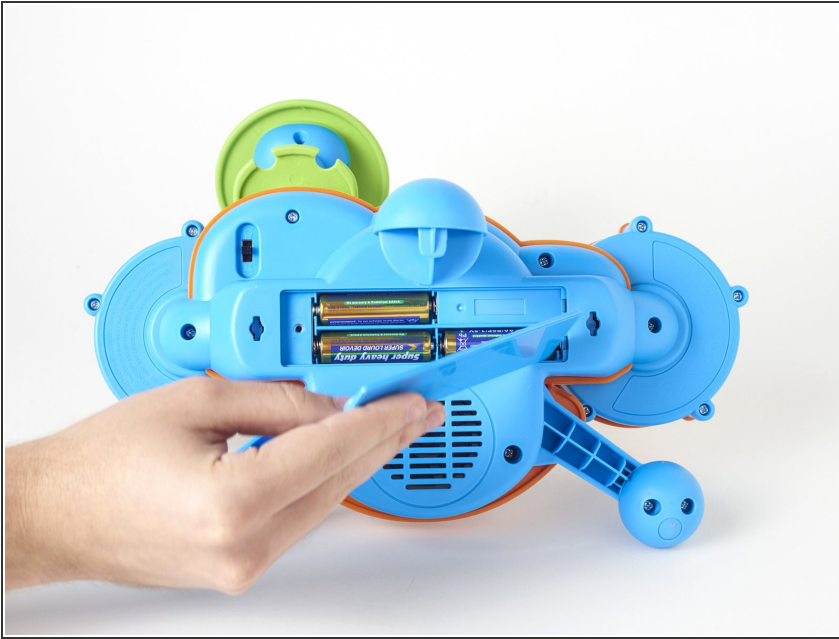

- Using your fingers, pry open and remove the back battery panel.

Step 4



- Use your fingers to remove each battery from its housing.
- ⓘ When inserting the new batteries, remember to match them according to the image displayed on the battery panel.

To reassemble your device, follow these instructions in reverse order.