

Vtech Kidibeats Drum Set Back Panel Replacement

"Prerequisite Guide"


Written By: Aaron Klementowski





- Phillips #2 Screwdriver (1)
- Phillips #00 Screwdriver (1)

Step 1 — Back Panel

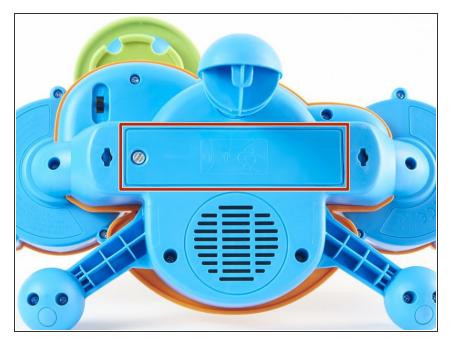


 Locate the battery panel that is centered between the three leg supports at the bottom of the drum set.

Step 2



- To remove the battery panel, loosen the 10 mm panel screw using a flathead 4.0 screwdriver.
- i You can also use a small coin to loosen the screw.

Step 3

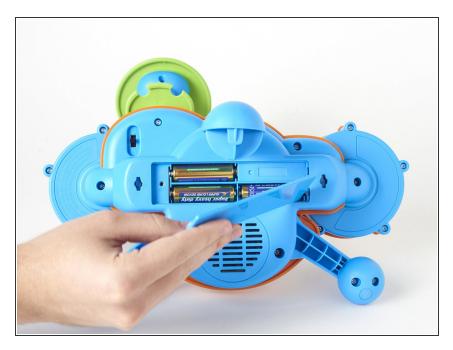

 Using your fingers, pry open and remove the back battery panel.

Step 4



 Use your fingers to remove each battery from its housing.

Step 5



 Using a Phillips #2 screwdriver, loosen and remove the six 14 mm screws.

Step 6





• With your hands, separate the bottom panel from the drum set.

Mhen removing the bottom panel, be careful not to pull too hard in order to prevent damaging the connections from the motherboard to the speaker and power source.

To reassemble your device, follow these instructions in reverse order.