



# Kyocera Oyst'r Teardown

This guide provides information on disassembling...

Written By: David



# INTRODUCTION


This guide provides information on disassembling the Kyocera Oystre phone to allow for repairs.

## TOOLS:

[Tournevis Tri-point Y0](#) (1)

[Outil pour ouvrir iFixit](#) (1)

## Step 1 — Removing the battery

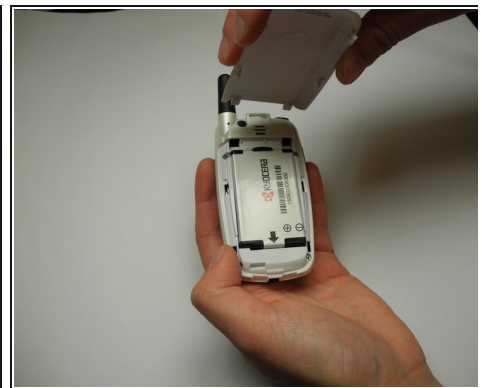

- Make sure the phone is turned off before disassembly.
- Lift the bottom of the phone's back cover upwards, revealing the phone's battery housing.
- Remove the battery from the casing. This is simply a precaution.
- Turn the phone over, so that the front side is facing you. Open the device in preparation for the next step.

## Step 2 — Removing screws from screen



- Peel the Virgin Mobile sticker off of the phone's screen to reveal two screws beneath it.
- Use the Tri-Wing Y0 screwdriver to remove the two screws from the screen.

## Step 3 — Exposing internal components






- Lift the plastic cover of the phone screen upwards with a plastic opening tool.
- Remove the two screws from the metal cover.

## Step 4 — Removing metal cover



- Remove the metal cover by lifting up and away from the device.

## Step 5 — Screen removal

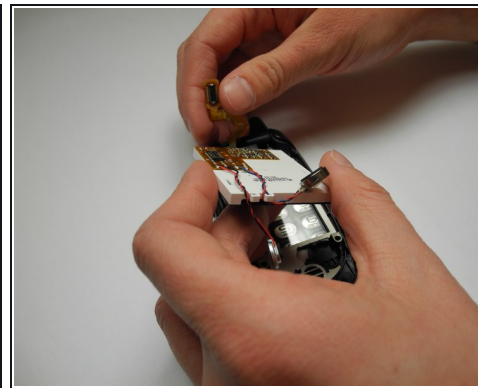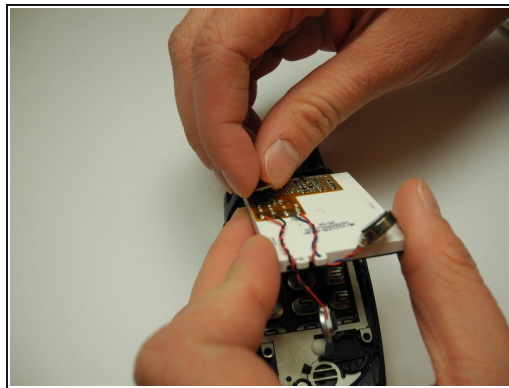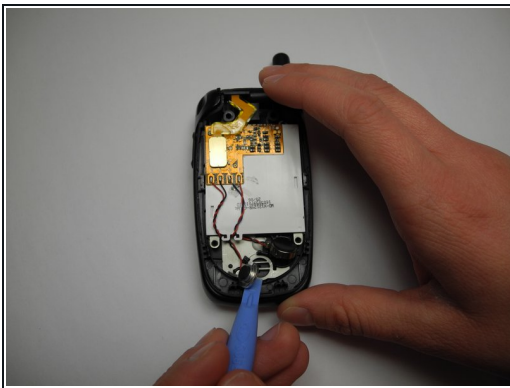

- Use the plastic opening tool to pry the phone's speakers up and away from the device. These speakers will dangle by the wires attached to the board.
- Use your fingernail to detach the ribbon connecting the board to the screen.
- Remove the damaged screen from the device.

## Step 6 — Completing the repair



- Follow these steps in reverse order to replace Kyocera Oyster's screen.

To reassemble your device, follow these instructions in reverse order.