



# Samsung Intensity Teardown

Complete Teardown for Samsung Intensity U450

Written By: David



---

## INTRODUCTION

The Teardown is pretty much the same as other Samsung Slider phones

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — Samsung Intensity Teardown




- Remove the back cover and battery

## Step 2



- Remove the 8 screw that hold the back cover down.
- Carefully pry back piece off
- Start at the bottom and work toward the top.

### Step 3

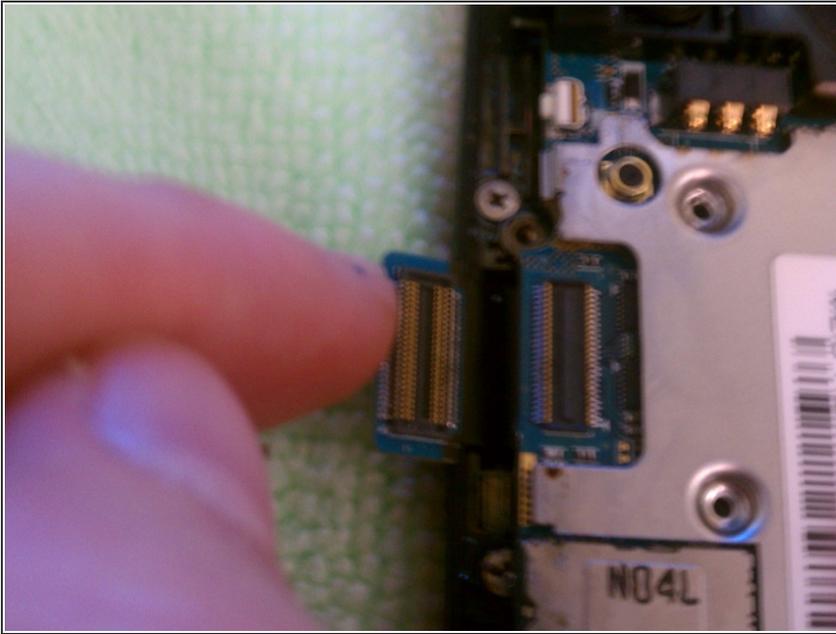

- Use the ipod opening tool to disconnect the Connector

### Step 4




- Carefully remove the main board
- Make sure to not tear the microphone cable, pry it from the phone carefully

## Step 5



- Remove the 6 screws
- Pry to ribbon cable assembly loose from the slider
- Its glued on the left and right side

## Step 6

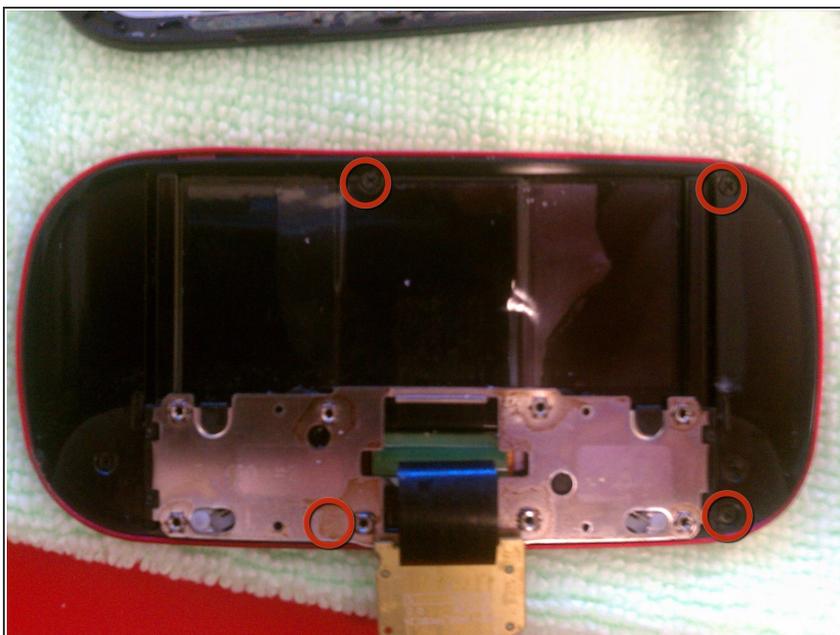

- Remove the 4 screw the holds the slider to the phone assembly
- one of the screws will be behind the hinge
- Carefully pry slider assembly loose from display assembly

## Step 7



- Remove the tape and pop the connectors and pull all the ribbon cables loose
- Carefully pry the speaker loose from the case.

## Step 8



- Carefully work the keyboard loose from the display assembly
- There are a couple fragile clips that hold it in place

## Step 9



- LCD comes out pretty easily
- Pry it from the bottom and work up the sides to release it if stuck
- The glass can be removed with a little heat from a heat gun or blow dryer
- Pry it out from the outside edges working around carefully