



# HP G71t-300 Wi-Fi Card Replacement

If you choose to replace the module with...

Written By: Cecil Lam



# INTRODUCTION

If you choose to replace the module with different specifications, download the driver for the new module before replacing the wifi module.

---

## TOOLS:

[Anti-Static Wrist Strap](#) (1)

[Phillips #0 Screwdriver](#) (1)

[Magnetic Project Mat](#) (1)

---

## Step 1 — Wi-Fi Card



- Ground yourself by either touching an unpainted metal surface or by using the [Anti-Static wrist strap](#).
- Turn off the computer and remove the charger from the charging port.
- Turn the laptop over and slide the battery release catch to the right. The battery will pop up from its slot. Remove the battery using your fingers.

## Step 2



- Remove the 6mm screw from the cover above the battery using a Phillips #0 screwdriver.

## Step 3



- Pull off the bottom cover to reveal the Wi-Fi card.



## Step 4



- Gently remove the 2 cables clips to avoid damage.
- Remove the 3mm screw holding the Wi-Fi module using a Phillips #0 screwdriver.

## Step 5



- Gently pull the module out of the slot.

---

To reassemble your device, follow these instructions in reverse order.