



# Acer Aspire One 532h-2527 RAM Replacement

This guide will show how to remove the small back plate for the Acer Aspire One 532h-2527 in order to access the RAM and remove it.

Written By: Jair Burgos



## INTRODUCTION

This guide will show how to remove the small back plate on your netbook. The removal of the plate is necessary to access your netbook's RAM.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Press the power button to turn off the netbook.

## Step 2



- Place the netbook bottom-side-up on a flat surface.
- Locate the unlock latch on the top right corner of the back.

## Step 3



- To unlock the battery, slide the lock latch in the direction indicated by the unlocking icon. You should see the orange indicator which means that the latch is unlocked.

## Step 4




- On the opposite side, slide and hold the release latch.
- Gently slide the battery out.

## Step 5 — RAM



- Use the #0 Phillips Screw bit with the Screwdriver to remove the single 6mm Phillips screw from the small back plate.


## Step 6

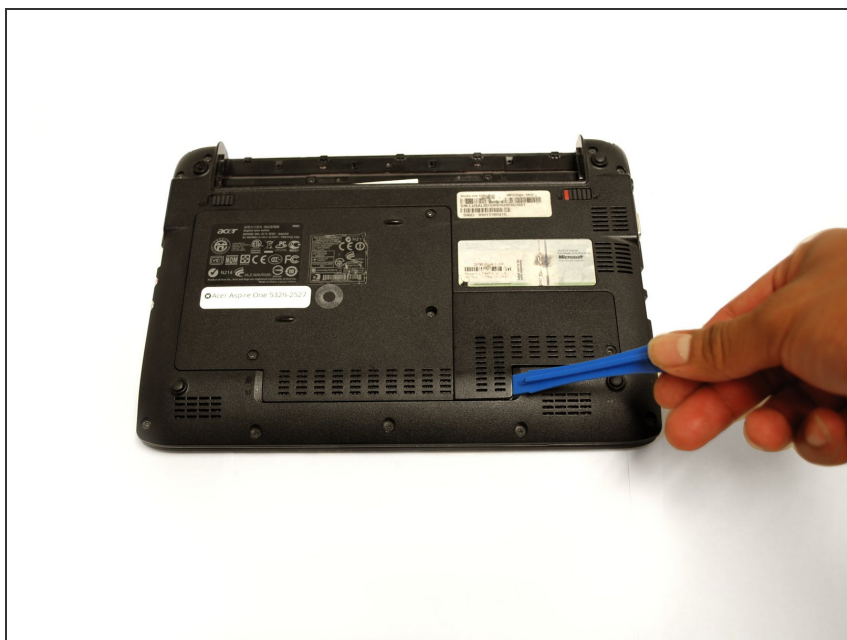

- Use the plastic opening tool on the recessed notch at the bottom of the small plate to gently lift the plate up



## Step 7

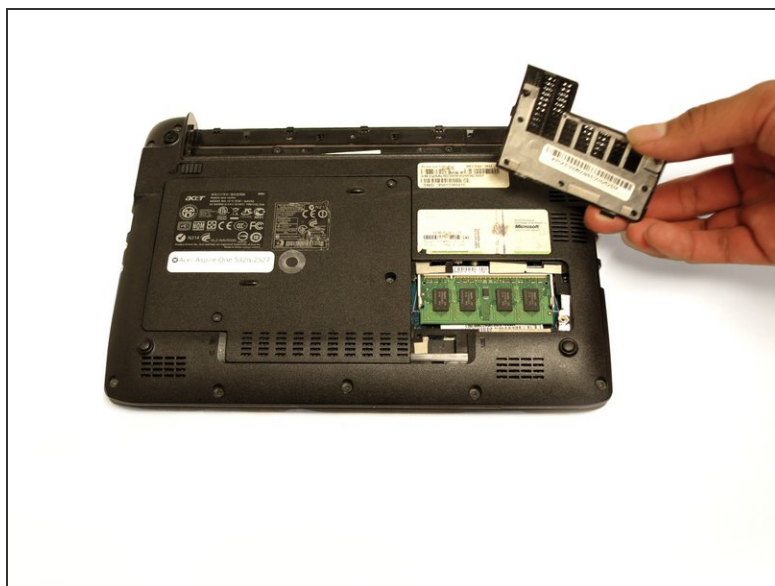

- Once the plate becomes unhinged, gently rotate the plate to take it off of the device.

## Step 8



- Using two fingers, gently spread the latches on the sides of the RAM card until the RAM card props up.

## Step 9



- Once the RAM card is propped up, carefully pull it out of its port.

To reassemble your device, follow these instructions in reverse order.