

HP G71t-300 Cooling Fan Replacement

Make sure that you have a cooling fan with the...

Written By: Rohan Mathew



INTRODUCTION

Make sure that you have a cooling fan with the same voltage/amperage settings to prevent abnormal operation.



PARTS:

Phillips #0 Screwdriver (1) Metal Spudger (1) Arctic Silver Thermal Paste (1)


Step 1 — Keyboard








- Ground yourself by either touching an unpainted metal surface or by using the <u>Anti-Static wrist strap</u>.
- Turn off the computer and remove the charger from the charging port.
- Turn the laptop over and slide the battery release catch to the right. The battery will pop up from its slot. Remove it using your fingers.

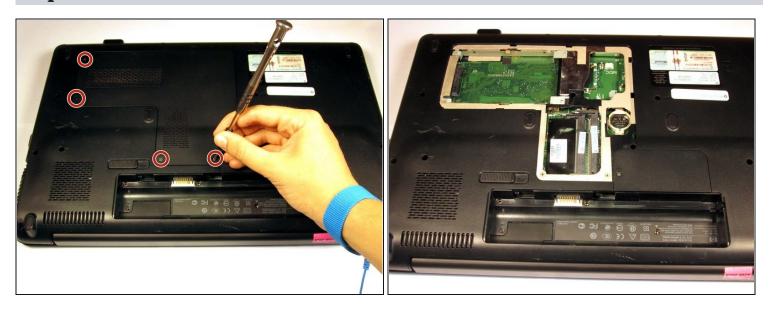

- Use a Phillips #0 screwdriver to remove the four screws from the indicated cover.
- Gently lift and remove the cover.

Step 3

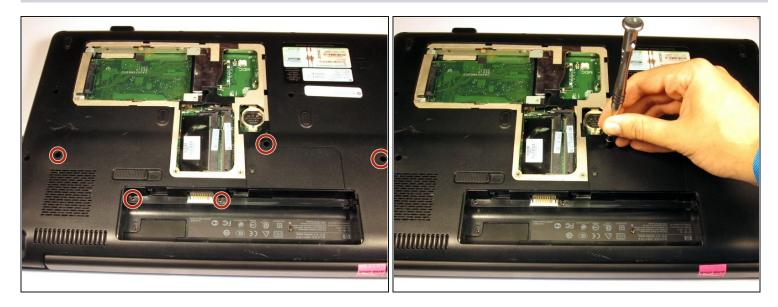


• Remove the five 6mm screws with the Phillips #0 screwdriver.



 Pry the keyboard off with a spudger. Be careful not to apply too much pressure and damage any components.

Step 5

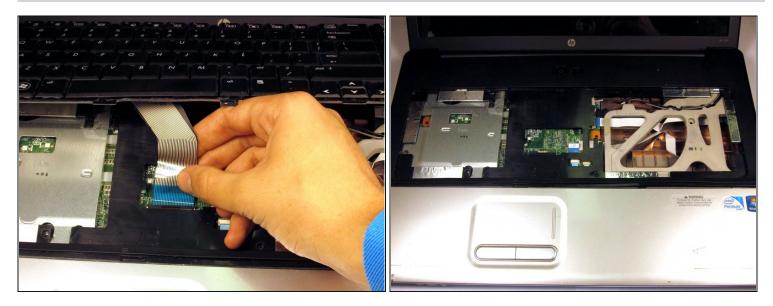

• Disconnect the clip attaching the keyboard wiring to the motherboard. Lift and remove the keyboard.

Step 6 — Cooling Fan



- Use a Phillips #0 screwdriver to remove the 6mm screw from the top panel.
- Gently lift and remove the panel. Use a metal spudger if the it seems set in place.

Step 7





- Use a Phillips #0 screwdriver to remove the 6mm screw for the Wi-Fi module cover.
- Remove the cover.





• Remove all fourteen 6mm screws using a Phillips #0 screwdriver.

Step 9





- Partially separate the two panels until connectors are visible.
- Unclip the wires that attach the trackpad module to the motherboard.




• Remove the five highlighted screws using a Phillips #0 screwdriver.

Step 11



Disconnect the five cables by gently pulling them from their slots.

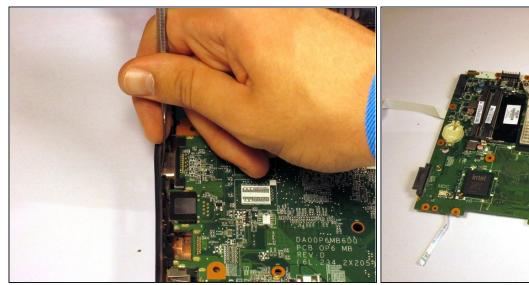




- Press a metal spudger between the VGA port and the plastic housing to pry up the motherboard.
- Remove the motherboard and turn it so that the fan is facing upward.

Step 13



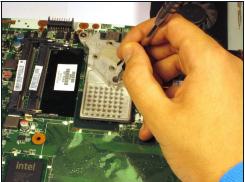



- Use a Phillips #0 screwdriver to loosen the three screws attaching the heatsink to the motherboard.
- Remove the heatsink and fan assembly by unclipping the fan from the motherboard.

To reassemble your device, follow these instructions in reverse order.