


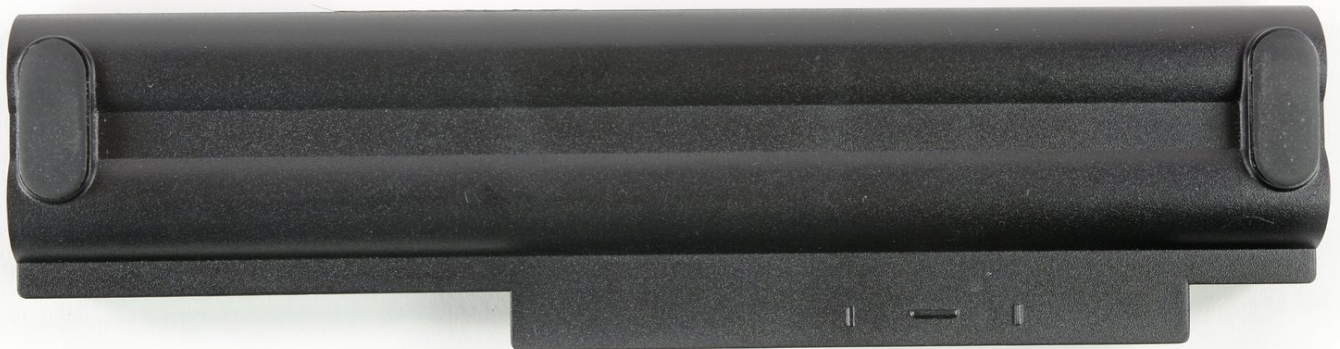

Lenovo Thinkpad X220 Battery Replacement

This guide shows you how to remove and replace...

Written By: Nils Eymer



INTRODUCTION

This guide shows you how to remove and replace the battery in your Lenovo X220.

PARTS:

[Lenovo ThinkPad X220, X220i, X230i Battery \(1\)](#)

Step 1 — Battery



- Locate the two switches that lock the battery.
- Then push the left switch outward into the "unlocked" position.
- ① This switch will remain in the unlocked position.

Step 2



- Now push and hold the right switch to the right while using the other hand to gently slide the battery upwards out of the laptop.

Step 3



- This is a rechargeable Li-Ion battery that has a capacity of 4400 mAh, if you have the 6 cell model.

☒ The 4 or 9 cell model has different ratings.

To reassemble your device, follow these instructions in reverse order. Don't forget to switch the left switch back into the locked position.