



HP Mini 110-3131dx Screen Replacement

Improve the quality of display for your HP Mini 110-3131dx by replacing the screen.

Written By: aarondcollege





TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Battery



- Power off the laptop before trying to remove the battery.
- Turn the laptop upside down, and locate the sliding tabs on the battery.
- Slide both tabs in an inward direction, then slide the battery away from the laptop.

Step 2 — Screen



- Slightly tilt the screen downward.
 - ⓘ The screen is attached by internal clips and adhesive, which means that some force will be necessary for this step.
- Use the plastic opening tool to force the screen bezel from the screen.
- Locate the eight silver 2.9mm screws attaching the screen to the lid.
- Using a PH1 philips head screwdriver detach the screws.

To reassemble your device, follow these instructions in reverse order.